
CS-3035/4035/5035

Contains: AD-63

DF-78

J-1402

PF-70

RA-1

PF-75

Print/Scan System (U)

FaxSystem (J)

PARTS LIST

Published in October '03

2FG70951

Revision 1

— CONTENTS —

FIG. 1 EXTERIOR COVERS	2	FIG. 12 LASER SCANNER UNIT	26
FIG. 2 FRAMES	4	FIG. 13 DEVELOPING SECTION	28
FIG. 3 CASSETTE	6	FIG. 14 FIXING SECTION	30
FIG. 4 PAPER FEED-IN SECTION I	8	FIG. 15 CLEANING SECTION	32
FIG. 5 PAPER FEED-IN SECTION II	10	FIG. 16 DRIVING, COOLING SECTION I	34
FIG. 6 PAPER FEED-IN SECTION III	14	FIG. 17 DRIVING, COOLING SECTION II	36
FIG. 7 PAPER CONVEYING SECTION	16	FIG. 18 ELECTRICAL COMPONENTS	38
FIG. 8 PAPER EXIT SECTION	18	FIG. 19 OPERATION UNIT	42
FIG. 9 OPTICAL SECTION	20	FIG. 20 OPTION (ORIGINAL HOLDER)	44
FIG. 10 BYPASS UNIT	22	FIG. 21 OPTION I	46
FIG. 11 BYPASS FEED UNIT	24	FIG. 22 OPTION II & TOOL	48
		• INDEX	50

FIG. 1 EXTERIOR COVERS

2FG/2FF/2FD

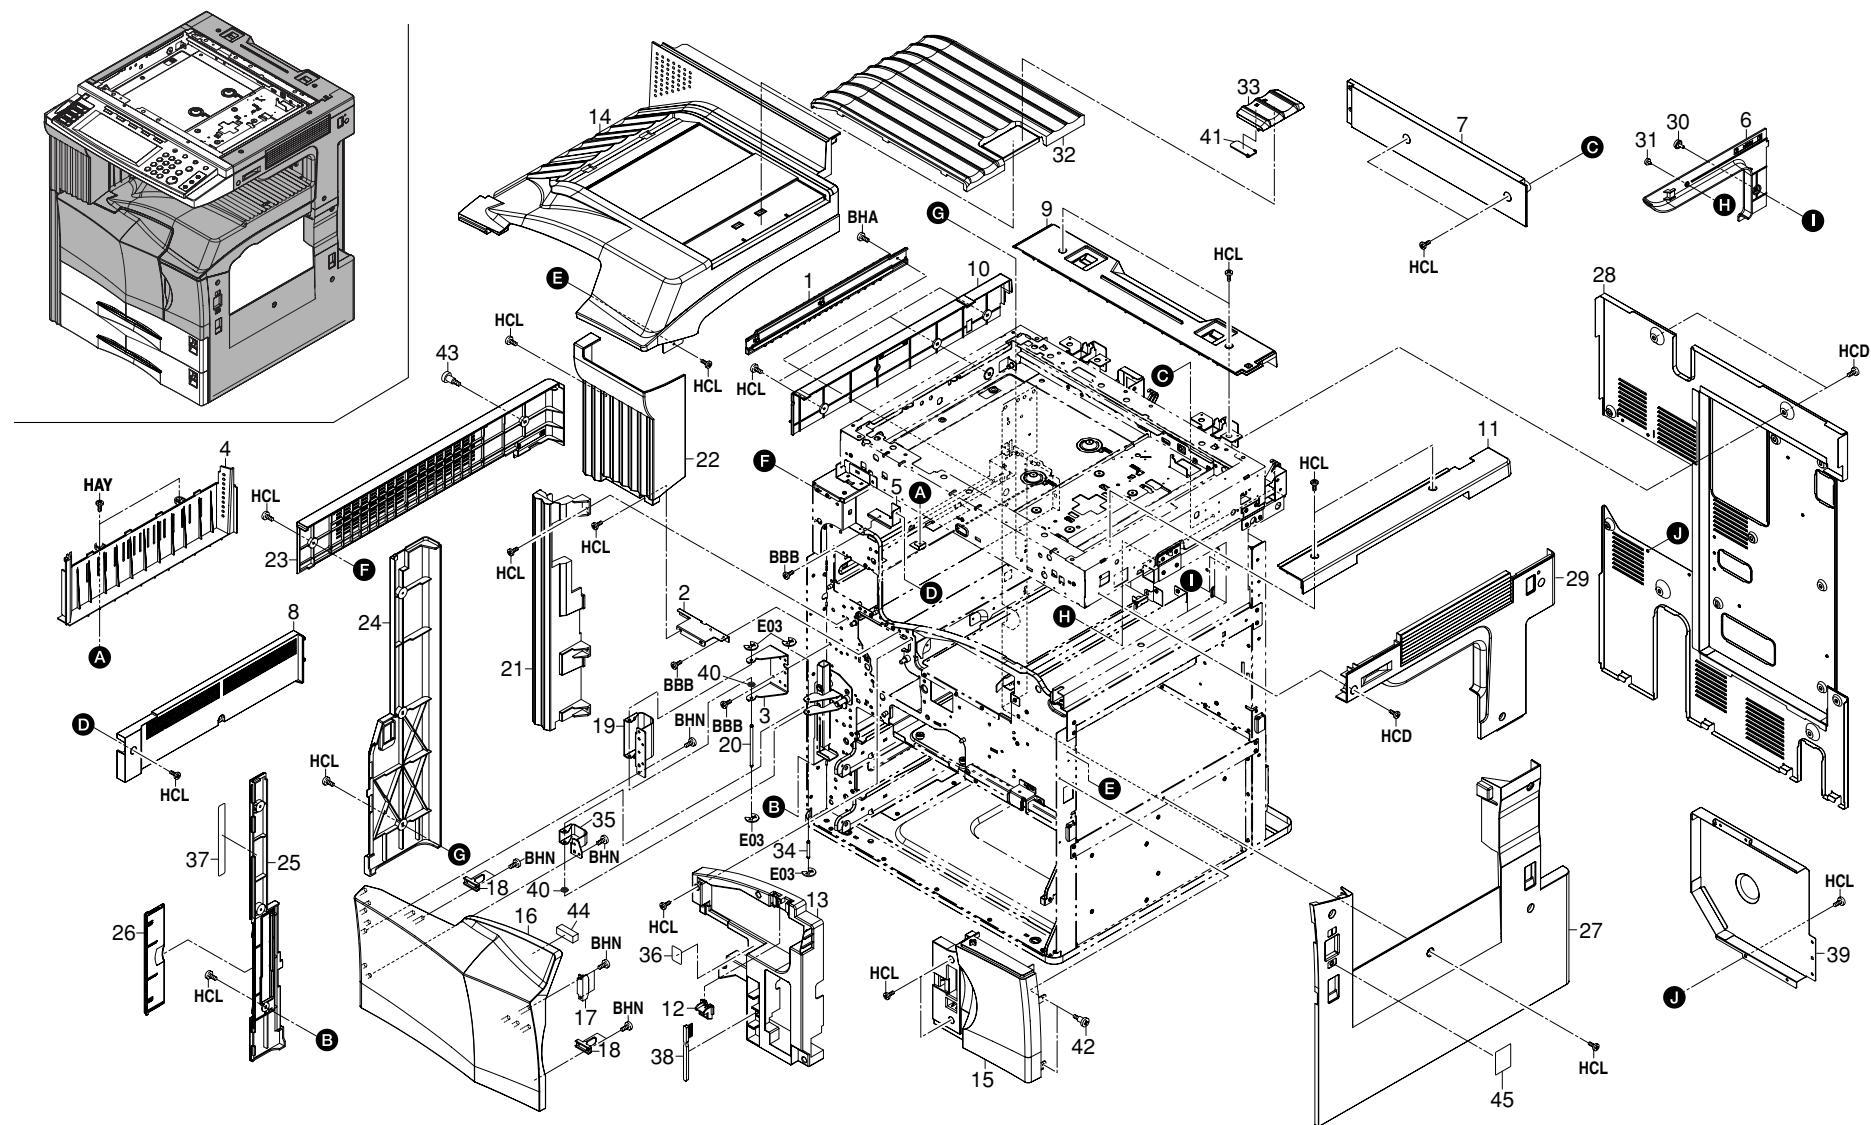


FIG. 1 EXTERIOR COVERS

SP	Ref. No.	Part. No.	Description	Quantity			
				110V	120V	230V	240V
●	1	2BL21350	GUIDE DU FEED R	1	1	1	1
	2	2BL04320	MOUNT TRAY EJECT	1	1	1	1
	3	2BL04220	MOUNT HINGE	1	1	1	1
●	4	2BL04100	COVER EXIT LOW	1	1	1	1
	5	2BJ04150	MOUNT LEFT FRONT COVER	1	1	1	1
●	6	2BJ04050	RIGHT COVER TRAY	1	1	1	1
●	7	2BJ04030	REAR COVER TRAY	1	1	1	1
●	8	2BJ04040	UPPER EJECT COVER	1	1	1	1
●	9	2AV04100	REAR COVER SCANNER	1	1	1	1
●	10	2BJ04060	UPPER LEFT COVER A	1	1	1	1
●	11	2BJ04080	UPPER RIGHT COVER A	1	1	1	1
	12	2BL04200	LEVER CONT RELEASE	1	1	1	1
	13	2BL04090	INNER RIGHT COVER	1	1	1	1
●	14	2BL04040	TRAY EJECT	1	1	1	1
●	15	2FG56020	RIGHT FRONT COVER (CS-5035)	1	1	1	1
●	15	2FF56010	RIGHT FRONT COVER (CS-4035)	1	1	1	1
●	15	2FD56010	RIGHT FRONT COVER (CS-3035)	1	1	1	1
●	16	2FG56010	FRONT COVER MIDDLE	1	1	1	1
	17	60804120	MAGNET CATCH	1	1	1	1
●	18	2BL04330	HOLDER SWITCH	2	2	2	2
	19	2BL04350	FRONT HINGE COVER P	1	1	1	1
	20	2BL04190	PIN COVER HINGE	1	1	1	1
●	21	2BL04150	LEFT COVER CASSETTE	1	1	1	1
●	22	2BJ04010	LEFT FRONT COVER	1	1	1	1
●	23	2BJ04070	UPPER LEFT COVER B	1	1	1	1
●	24	2BL04120	REAR LEFT COVER	1	1	1	1
●	25	2BL04110	FRONT LEFT COVER	1	1	1	1
●	26	2BL04300	LID COVER LEFT	1	1	1	1
●	27	2BL04130	RIGHT COVER	1	1	1	1
●	28	2FG04030	REAR COVER A	1	1	1	1
●	29	2BJ04090	UPPER RIGHT COVER B (1/2)	1	1	1	1
	30	74315200	PIN,TONER HOPPER	1	1	1	1
	31	2A126130	PIN,OPTION	1	1	1	1
●	32	2BK04020	TRAY SUB C	1	1	1	1
●	33	2BK04030	STOPPER PAPER C	1	1	1	1
	34	2BL04840	PIN COVER HINGE S	1	1	1	1
	35	2BL04480	FRONT COVER HINGE S	1	1	1	1
	36	2BL05070	LABEL SEP CLEANING	1	1	1	1
●	37	2BL05120	LABEL CONVEYING JAM	1	1	1	1
●	38	2BL16220	BRUSH CLEANER	1	1	1	1

- Parts with "*" are component parts or sub-assemblies of the assembly appearing immediately above them.
- Parts with "●" indicates the Spare parts.

2FG/2FF/2FD

SP	Ref. No.	Part. No.	Description	Quantity			
				110V	120V	230V	240V
●	39	2BJ04250	COVER FLYWHEEL	1	1	1	1
	40	2BL04880	FILM HINGE	2	2	2	2
●	41	2BK04040	STOPPER PAPER SUB	1	1	1	1
	42	2BL04410	PIN COVER	2	2	2	2
	43	73926080	PIN,HOOK LEVER	1	1	1	1
●	44	2BL06620	SPONGE FRONT	1	1	1	1
	45	2BL05240	LABEL OFF	1			

- Parts with "••" are component parts or sub-assembly with "•" appearing immediately above them.

FIG. 2 FRAMES

2FG/2FF/2FD

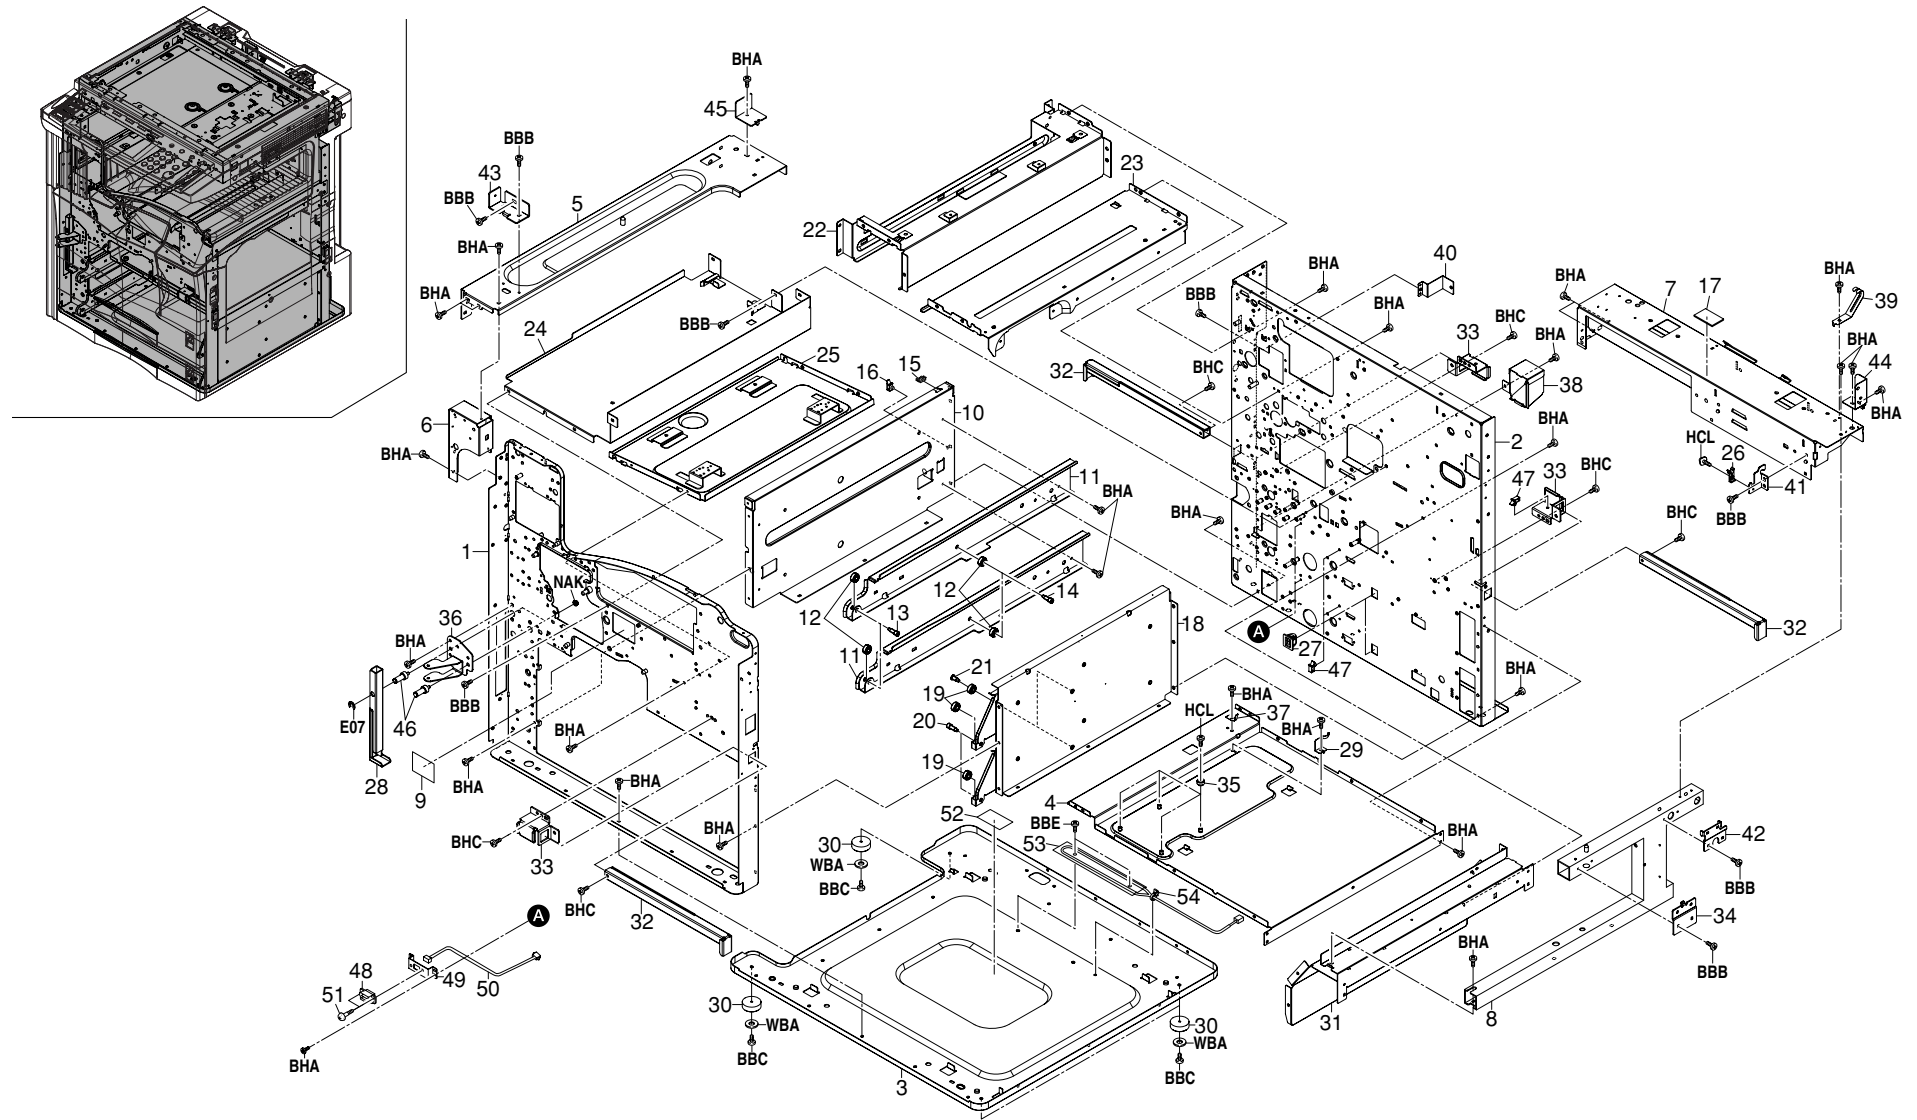


FIG. 2 FRAMES

SP	Ref. No.	Part. No.	Description	Quantity			
				110V	120V	230V	240V
	1	2BL02010	FRONT FRAME	1	1	1	1
	2	2BL02020	REAR FRAME	1	1	1	1
	3	2BL02030	BASE	1	1	1	1
	4	2BL02040	BASE MIDDLE	1	1	1	1
	5	2BJ02040	UPPER LEFT PLATE	1	1	1	1
	6	2BJ02010	UPPER FRONT FRAME	1	1	1	1
	7	2BJ02020	UPPER REAR FRAME	1	1	1	1
	8	2BJ02030	UPPER RIGHT PIPE	1	1	1	1
	9	2BL05150	LABEL RADIATION	1	1	1	1
	10	2AR02060	LOWER LEFT REINFORCEMENT	1	1	1	1
	11	2AR07140	LEFT RAIL,CASSETTE	2	2	2	2
	12	2AR07800	PULLEY,CASSETTE RAIL	4	4	4	4
	13	2AR07810	FRONT PIN,CASSETTE RAIL	2	2	2	2
	14	2AR07820	REAR PIN,CASSETTE RAIL	2	2	2	2
	15	M2104350	EDGING,EDS-0607M(KITAGAWA)	1	1	1	1
	16	M2109330	WIRE SADDLE,YMC-10-0(KITAGAWA)	1	1	1	1
	17	2BJ27260	GASKET SHIELD B	1	1	1	1
	18	2AR02050	LOWER RIGHT REINFORCEMENT	1	1	1	1
	19	2AR07800	PULLEY,CASSETTE RAIL	4	4	4	4
	20	2AR07810	FRONT PIN,CASSETTE RAIL	2	2	2	2
	21	2AR07820	REAR PIN,CASSETTE RAIL	2	2	2	2
	22	2BL02100	UPPER PLATE FIXING	1	1	1	1
	23	2BL02060	UPPER PLATE DRUM	1	1	1	1
	24	2BL02130	LOWER PLATE CONT	1	1	1	1
	25	2BL02050	LOWER BASE LSU	1	1	1	1
	26	2BJ02120	HOLDER,FULCRUM	1	1	1	1
	27	77906291	HOLDER,CASSETTE STOPPER	2	2	2	2
	28	2BL02140	HANDLE MACHINE	1	1	1	1
	29	2BL06840	SPRING BYPASS RET	1	1	1	1
	30	2AR02180	BASE RUBBER	4	4	4	4
	31	2BL02120	UPPER RIGHT PLATE	1	1	1	1
	32	2BL02180	RIGHT HANDLE MACHINE	3	3	3	3
	33	2BL02150	MOUNT RIGHT HANDLE	3	3	3	3
	34	2BJ02050	RIGHT MOUNT ISU	1	1	1	1
	35	2BL06590	PULLEY RAIL	4	4	4	4
	36	2BL04470	MOUNT HINGE S	1	1	1	1
	37	2BL06410	GROUND PLATE MIDDLE	1	1	1	1
	38	2AR07720	COVER,CASSETTE RAIL	1	1	1	1
	39	2BJ26190	GROUND PLATE REAR COVER	1		1	
	40	2BL02200	MOUNT REAR COVER	1	1	1	1

- Parts with "*" are component parts or sub-assemblies of the assembly appearing immediately above them.
- Parts with "●" indicates the Spare parts.

2FG/2FF/2FD

SP	Ref. No.	Part. No.	Description	Quantity			
				110V	120V	230V	240V
	41	2BJ02110	FULCRUM PLATE,MIDDLE TRAY	1	1	1	1
	42	2BJ02070	REAR MOUNT ISU	1	1	1	1
	43	2BJ02060	FRONT MOUNT ISU	1	1	1	1
	44	2BJ02080	MOUNT COVER R	1	1	1	1
	45	2BJ02090	MOUNT COVER L	1	1	1	1
	46	2BL02170	PIN HANDLE	2	2	2	2
	47	M2109330	WIRE SADDLE,YMC-10-0(KITAGAWA)	3	3	3	3
●	48	J0464080	RECEPTACLE,QR/P15-8S-C(02)(HIROSE)	2	2	2	2
	49	2AR07710	MOUNT,PAPER FEED DRAWER	2	2	2	2
	50	2AR27600	JUNCTION WIRING,PRIMARY PAPER FEED UNIT	2	2	2	2
	51	33927450	RETAINING PIN,DRAWER	4	4	4	4
●	52	20305130	LABEL L,HIGH TEMPERATURE CAUTION(EXP)	1			
●	53	33960010	HEATER,CASSETTE (120)	1			
	54	M2107120	BINDING BAND SG-130	1			

- Parts with "*" are component parts or sub-assembly with "*" appearing immediately above them.

FIG. 3 CASSETTE

2FG/2FF/2FD

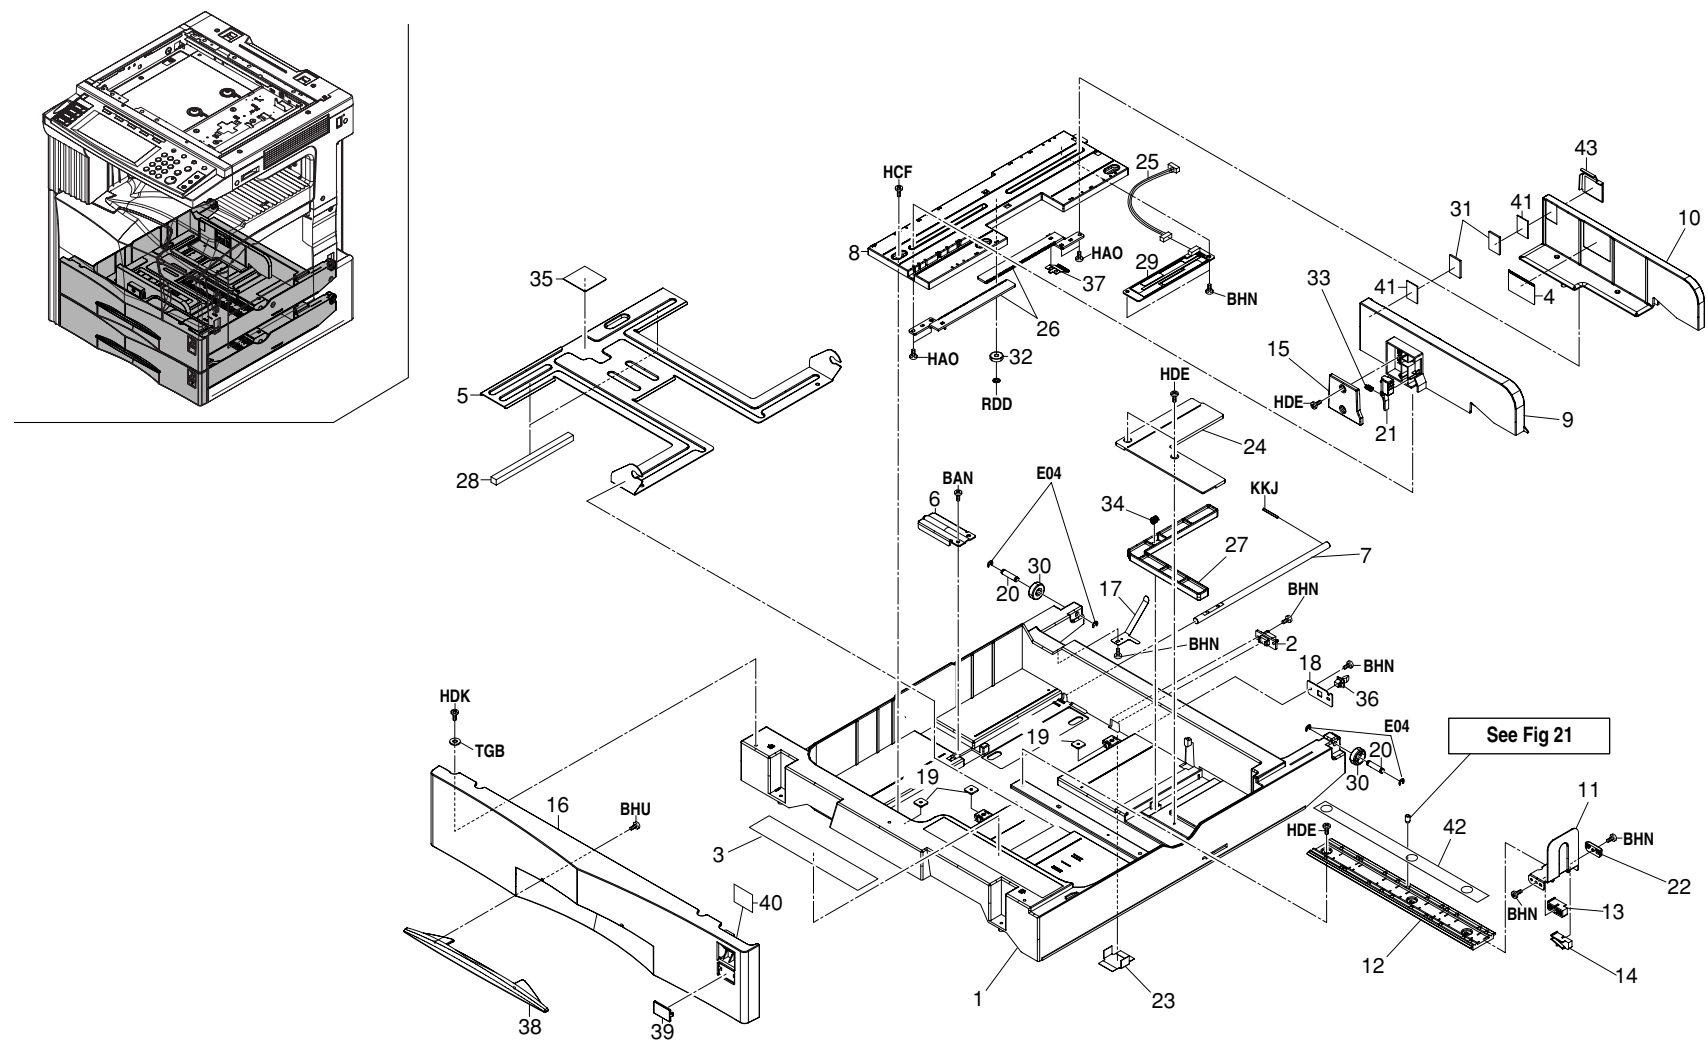


FIG. 3 CASSETTE

SP	Ref. No.	Part. No.	Description	Quantity			
				110V	120V	230V	240V
●	1	2FG68031	CASSETTE (A4) UNIT	2		2	2
●	1	2FG68041	CASSETTE (LTR) UNIT		2		
●	2	J0463080	PLUG,QR/P15-8S-C(HIROSE)	2	2	2	2
	3	2AR05150	LABEL,CASSETTE OPERATION	2	2	2	2
	4	2AR05200	LABEL,PAPER UPPER LIMIT	2	2	2	2
	5	2AR07020	BASE,CASSETTE	2	2	2	2
	6	2AR07030	WORK PLATE,CASSETTE BASE	2	2	2	2
	7	2AR07040	SHAFT,WORK PLATE	2	2	2	2
	8	2AR07051	RAIL A,CURSOR	2	2	2	2
	9	2AR07060	CURSOR A,CASSETTE	2	2	2	2
	10	2AR07071	CURSOR B,CASSETTE	2	2	2	2
	11	2AR07080	CURSOR C,CASSETTE	2	2	2	2
	12	2AR07091	RAIL C,CURSOR	2	2	2	2
	13	2AR07100	FRONT GUIDE C,CURSOR	2	2	2	2
	14	2AR07110	REAR GUIDE C,CURSOR	2	2	2	2
	15	2AR07120	LID A,CURSOR	2	2	2	2
●	16	2BL04140	COVER CASSETTE	2	2	2	2
●	17	2AR07150	GROUND PLATE,CASSETTE	2	2	2	2
	18	2AR07160	MOUNT,CASSETTE STOPPER	2	2	2	2
	19	2AR07180	RETAINER M4	6	6	6	6
	20	2AR07190	SHAFT,CASSETTE PULLEY	4	4	4	4
	21	2AR07340	LEVER A,CURSOR	2	2	2	2
	22	2AR07610	STOPPER,TRAILING EDGE DETECTION	2	2	2	2
	23	2AR07620	PROTECTING PLATE,CASSETTE WIRE	2	2	2	2
	24	2AR07630	LID,TRAILING EDGE DETECTION PLATE	2	2	2	2
	25	2AR27220	WIRE,CASSETTE UNIT	2	2	2	2
●	26	33907100	RACK,CASSETTE	4	4	4	4
	27	33907170	DETECTION PLATE,PAPER SIZE	2	2	2	2
●	28	33907210	CUSHION,CASSETTE WORK PLATE	4	4	4	4
●	29	2FG01020	SIZE DETECTION ASS'Y	2	2	2	2
●	30	34907150	PULLEY,CASSETTE	4	4	4	4
●	31	60907170	CUSHION,CASSETTE R	4	4	4	4
●	32	65914120	GEAR 18,IDLE DEVELOPING	2	2	2	2
	33	66007120	SPRING,CURSOR C	2	2	2	2
●	34	66106080	SPRING,PAD	2	2	2	2
●	35	66107100	PAD,CASSETTE	2	2	2	2
	36	77906210	CASSETTE STOPPER	2	2	2	2
	37	33907110	TERMINAL,PAPER SIZE PCB	2	2	2	2
●	38	2BL04160	HANDLE CASSETTE	2	2	2	2
●	39	2BL04310	PLATE NUMBER	1	1	1	1

- Parts with "*" are component parts or sub-assemblies of the assembly appearing immediately above them.
- Parts with "●" indicates the Spare parts.

2FG/2FF/2FD

SP	Ref. No.	Part. No.	Description	Quantity			
				110V	120V	230V	240V
●	39	2BL04370	PLATE NUMBER 2	1	1	1	1
●	40	2BL06470	PLATE SIZE C	2		2	2
●	40	2BL06910	PLATE SIZE IN		2		
	41	2BL06980	MOUNT CUSHION	4	4	4	4
	42	2BL05260	LABEL CASSETTE SIZE	2	2	2	2
	43	2BJ68190	STOPPER PAPER SP	2	2	2	2

- Parts with "••" are component parts or sub-assembly with "•" appearing immediately above them.

FIG. 4 PAPER FEED-IN SECTION I

2FG/2FF/2FD

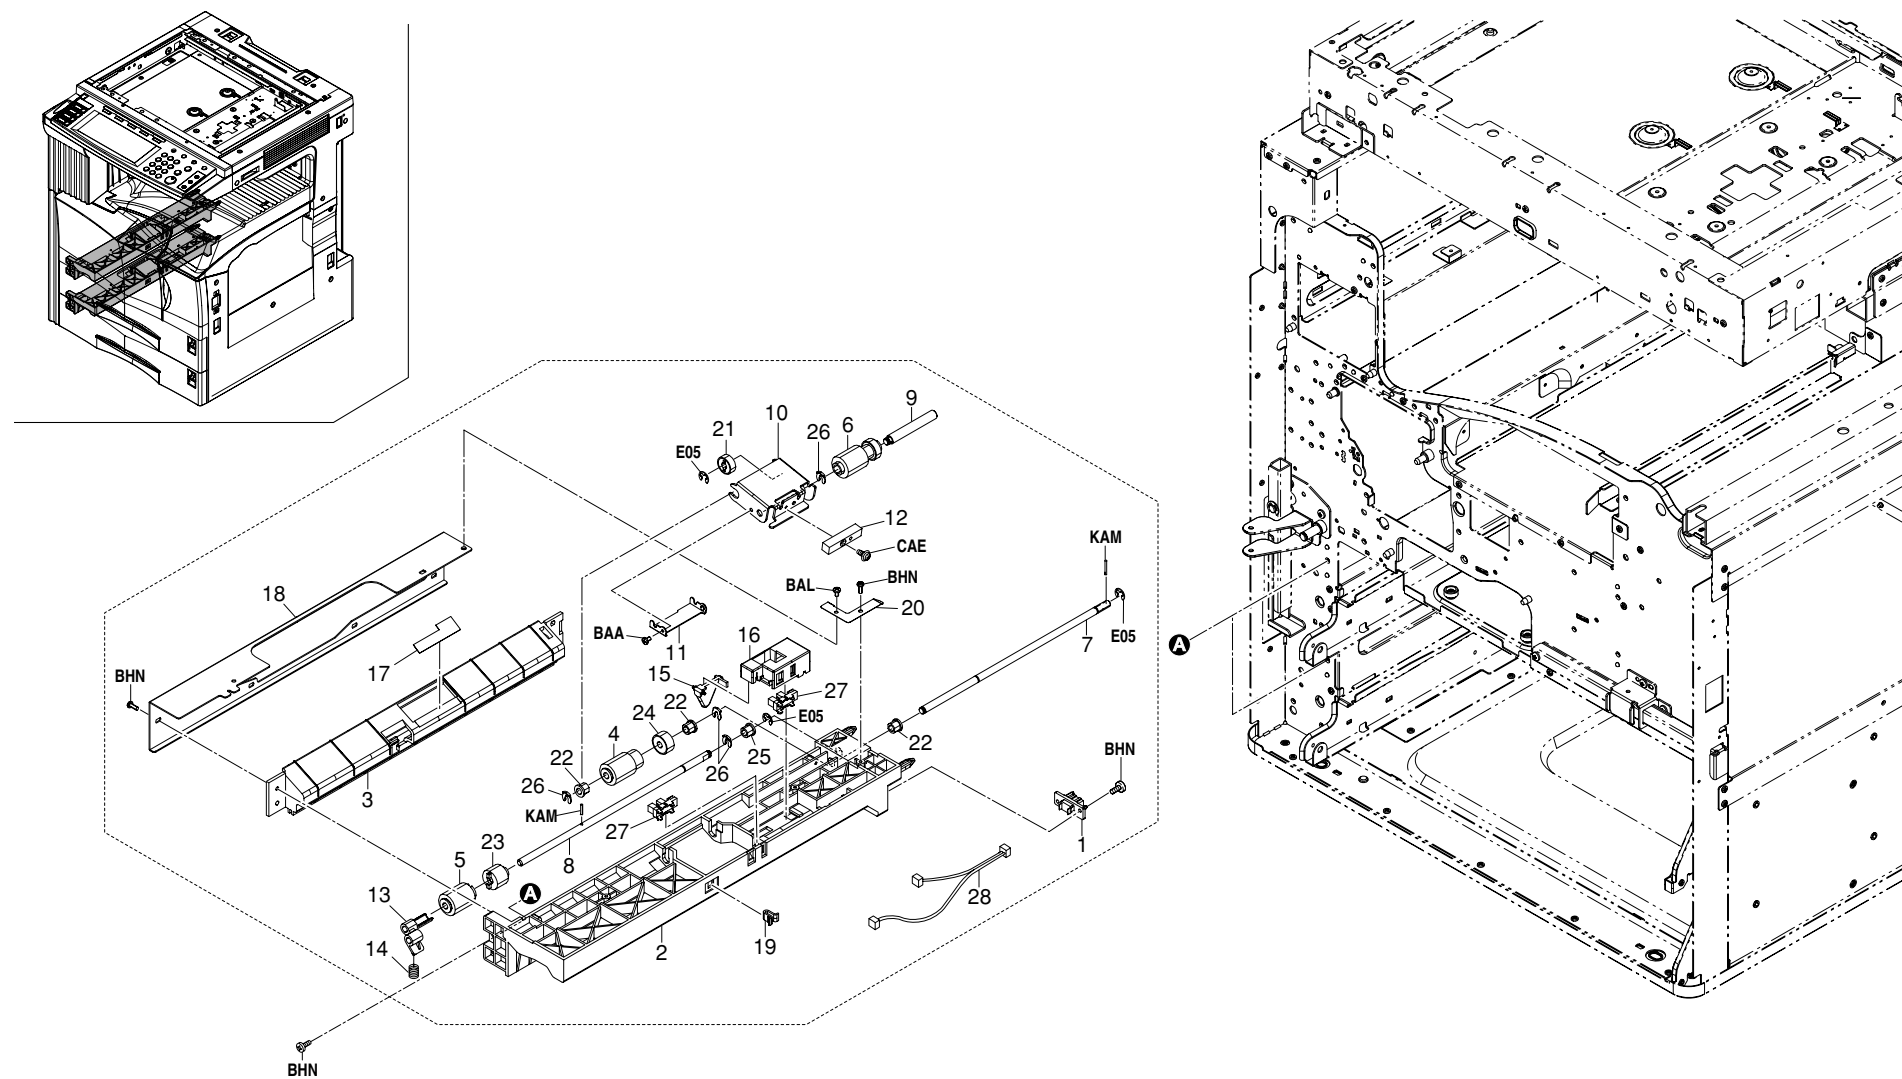


FIG. 4 PAPER FEED-IN SECTION I

2FG/2FF/2FD

SP	Ref. No.	Part. No.	Description	Quantity			
				110V	120V	230V	240V
●		2BL00050	PRIMARY PAPER FEED ASS'Y	2	2	2	2
●	1	•J0463080	PLUG,QR/P15-8S-C(HIROSE)	2	2	2	2
	2	•2AR07200	UPPER HOUSING,PAPER FEED	2	2	2	2
	3	•2AR07210	LOWER HOUSING,PAPER FEED	2	2	2	2
●	4	•2AR07220	PULLEY,PAPER FEED	2	2	2	2
●	5	•2AR07230	PULLEY,SEPARATION	2	2	2	2
●	6	•2AR07240	PULLEY,LEADING FEED	2	2	2	2
	7	•2AR07250	SHAFT,PAPER FEED	2	2	2	2
	8	•2AR07260	SHAFT,SEPARATION	2	2	2	2
	9	•2AR07270	SHAFT,LEADING FEED	2	2	2	2
	10	•2BL07900	PLATE LEADING FEED	2	2	2	2
	11	•2BL07910	SUPPORT PLATE FEED	2	2	2	2
	12	•2AR07300	WEIGHT,LEADING FEED PULLEY	2	2	2	2
	13	•2AR07310	LEVER,SEPARATION PULLEY RELEASE	2	2	2	2
●	14	•2BL07990	SPRING SEPARATION	2	2	2	2
	15	•2AR07640	ACTUATOR,PAPER EMPTY	2	2	2	2
	16	•2AR07650	HOLDER,ACTUATOR	2	2	2	2
	17	•2AR07660	GUIDE FILM,SEPARATION PULLEY	2	2	2	2
	18	•2AR07670	REINFORCEMENT,PRIMARY PAPER FEED	2	2	2	2
	19	•2AR07690	STOPPER,SUPPORT PLATE	2	2	2	2
	20	•2AR07790	GROUND PLATE,PRIMARY PAPER FEED	2	2	2	2
●	21	•34922420	GEAR 15	2	2	2	2
●	22	•29806810	BUSHING,6 REGISTRATION	6	6	6	6
●	23	•33906070	TORQUE LIMITER,PAPER FEED	2	2	2	2
●	24	•33906160	GEAR 16,PAPER FEED	2	2	2	2
●	25	•34806040	LOWER BUSHING,PAPER FEED	2	2	2	2
●	26	•2A806250	RING STOPPER	8	8	8	8
●	27	•2DC27180	SWITCH PI	4	4	4	4
	28	•2AR27430	WIRE,PRIMARY PAPER FEED UNIT	2	2	2	2

- Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.
- Parts with "●" indicates the Spare parts.

- Parts with "••" are component parts or sub-assembly with "•" appearing immediately above them.

FIG. 5 PAPER FEED-IN SECTION II

2FG/2FF/2FD

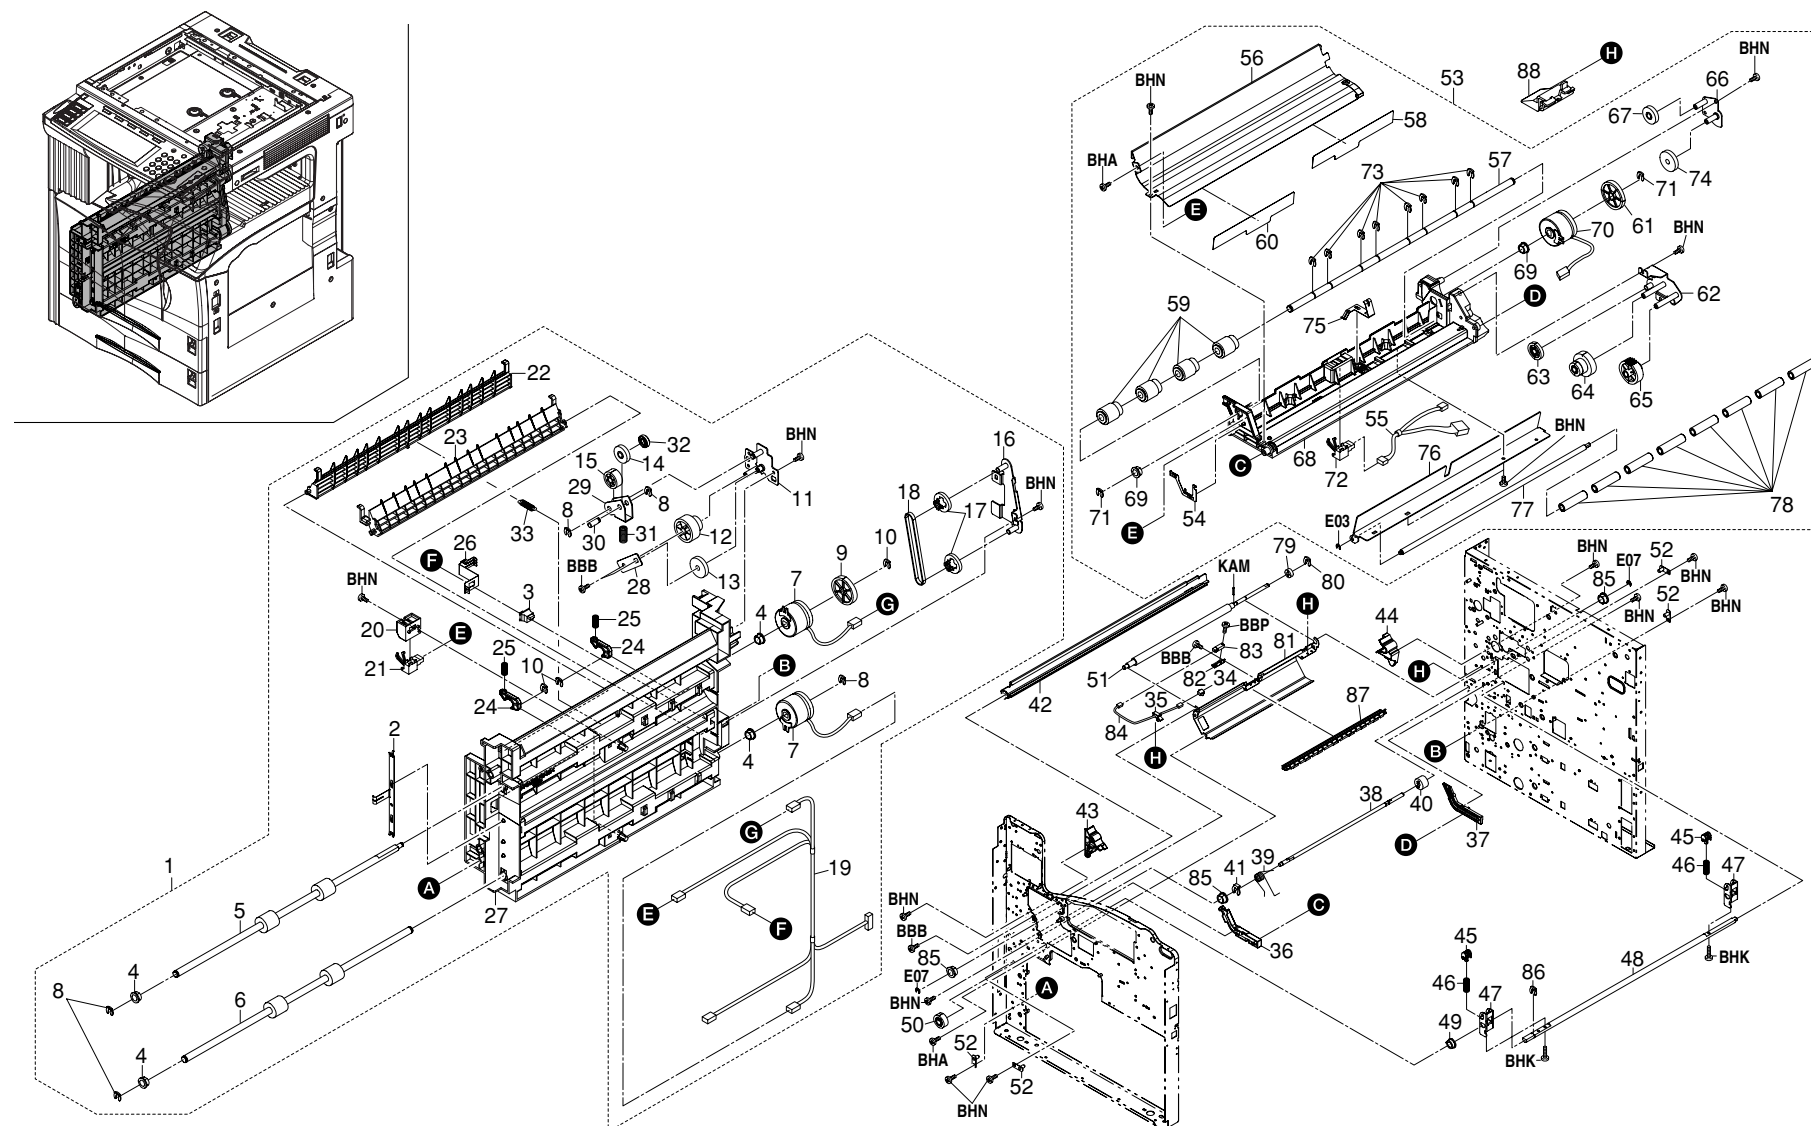


FIG. 5 PAPER FEED-IN SECTION II

SP	Ref. No.	Part. No.	Description	Quantity			
				110V	120V	230V	240V
●	1	2FG93080	PARTS,VERTICAL FEED ASS'Y,SP	1	1	1	1
	2	•2BL06220	EARTH VERTICAL FEED	1	1	1	1
●	3	•35927420	SWITCH,SIZE	1	1	1	1
●	4	•67322230	BUSHING 8	4	4	4	4
●	5	•2BL06080	ROLLER B FEED	1	1	1	1
●	6	•2BL06090	ROLLER C FEED	1	1	1	1
●	7	•2BL27500	CLUTCH FEED	2	2	2	2
●	8	•2BC06980	STOPPER 5	5	5	5	5
●	9	•2BL06170	GEAR Z42 FEED	1	1	1	1
●	10	•2A806250	RING STOPPER	3	3	3	3
	11	•2FG06020	MOUNT FEED DRIVE A	1	1	1	1
●	12	•2FG06040	GEAR Z21-Z36 FEED	1	1	1	1
●	13	•36222250	GEAR 30,IDLE	1	1	1	1
●	14	•2AL06110	GEAR 25	1	1	1	1
●	15	•2BL06380	GEAR Z25 JOINT	1	1	1	1
	16	•2BL06130	MOUNT C FEED DRIVE	1	1	1	1
●	17	•2BL06180	GEAR Z28-P18 FEED	2	2	2	2
●	18	•2BL06320	BELT CONVEYING	1	1	1	1
	19	•2BL27190	WIRE CONVEYING	1	1	1	1
	20	•2BL06450	HOLDER FEED SWITCH	2	2	2	2
●	21	•2BL27410	SWITCH CONVEYING	2	2	2	2
	22	•2BL06110	GUIDE VERTICAL FEED	1	1	1	1
	23	•2BL06330	GUIDE B FEED	1	1	1	1
●	24	•2BL06490	LOCK COVER RIGHT	2	2	2	2
	25	•2BL06460	SPRING LEFT COVER	2	2	2	2
	26	•2BL06940	EARTH PUSH SWITCH	1	1	1	1
	27	•2FG06010	FRAME VERTICAL FEED A	1	1	1	1
	28	•2FG06030	MOUNT FEED DRIVE B	1	1	1	1
	29	•2FG06050	JOINT FEED DRIVE	1	1	1	1
	30	•2FG06060	SHAFT FEED JOINT	1	1	1	1
	31	•2FG06070	SPRING FEED JOINT	1	1	1	1
	32	•2FG06120	COLLAR FEED JOINT	1	1	1	1
	33	•2FG06130	SPRING GUIDE FEED	1	1	1	1
	34	J5016030	CASE,BU03P-TR-PC-H(JST)	1	1	1	1
	35	M2109330	WIRE SADDLE,YMC-10-0(KITAGAWA)	1	1	1	1
	36	2BL06051	FRONT RAIL FEED	1	1	1	1
	37	2BL06061	REAR RAIL FEED	1	1	1	1
	38	2BL04520	SHAFT LEFT COVER M	1	1	1	1
	39	2BL16230	SPRING CONV OPEN	1	1	1	1
	40	2BL06950	DUMPER LEFT COVER	1	1	1	1

- Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.
- Parts with "●" indicates the Spare parts.

2FG/2FF/2FD

SP	Ref. No.	Part. No.	Description	Quantity			
				110V	120V	230V	240V
●	41	33973300	STOPPER 7,CARTRIDGE	1	1	1	1
	42	2BL17160	RIGHT GUIDE TRANSFER	1	1	1	1
	43	2BL06310	GUIDE ROLLER FRONT	1	1	1	1
	44	2BL06350	GUIDE ROLLER REAR	1	1	1	1
	45	2BL14240	CAM DLP	2	2	2	2
	46	2BL14410	SPRING CAM	2	2	2	2
	47	2BL14140	MOUNT CAM	2	2	2	2
	48	2BL14230	SHAFT CAM	1	1	1	1
	49	2BM17920	BUSH POM	1	1	1	1
●	50	2BL14250	GEAR 18	1	1	1	1
●	51	2BL06270	RIGHT ROLLER REGIST	1	1	1	1
	52	2AR02250	POSITIONING PLATE,LSU	4	4	4	4
●	53	2FG93060	PARTS,MIDDLE FEED ASS'Y	1	1	1	1
	54	•2BL06230	GROUND PLATE A FEED	1	1	1	1
	55	•2BL27240	WIRE FEED 1	1	1	1	1
	56	•2BL06020	GUIDE A FEED	1	1	1	1
	57	•2BL06920	SHAFT FEED A	1	1	1	1
●	58	•2BL06480	FILM REGIST F	1	1	1	1
●	59	•2BL06930	PULLEY FEED	4	4	4	4
●	60	•2BL06970	FILM REGIST FF	1	1	1	1
●	61	•2BL06360	GEAR Z42 BYPASS	1	1	1	1
	62	•2FG06160	MOUNT BYPASS FEED	1	1	1	1
●	63	•2BL06190	GEAR Z25 FEED	1	1	1	1
●	64	•2BL06160	GEAR Z35-15 FEED	1	1	1	1
●	65	•2BL06150	GEAR Z28 FEED	1	1	1	1
	66	•2FG06150	MOUNT MID FEED DRIVE	1	1	1	1
●	67	•36222250	GEAR 30,IDLE	1	1	1	1
	68	•2FG06080	HOUSING FEED A	1	1	1	1
●	69	•67322230	BUSHING 8	2	2	2	2
●	70	•2BL27730	CLUTCH,REGISTRATION	1	1	1	1
●	71	•2BC06980	STOPPER 5	2	2	2	2
●	72	•2BL27410	SWITCH CONVEYING	1	1	1	1
●	73	•2BC06910	STOPPER 6	8	8	8	8
●	74	•2AL06110	GEAR 25	1	1	1	1
	75	•2FG06170	GROUND PLATE GUIDE A	1	1	1	1
	76	•2FG06090	GUIDE MIDDLE FEED	1	1	1	1
	77	•2FG06100	SHAFT MIDDLE FEED	1	1	1	1
	78	•2FG06110	PULLEY MIDDLE FEED	8	8	8	8
●	79	36722860	GEAR 18	1	1	1	1
●	80	2BC06910	STOPPER 6	1	1	1	1

- Parts with "•" are component parts or sub-assembly with "•" appearing immediately above them.

FIG. 5 PAPER FEED-IN SECTION II

2FG/2FF/2FD

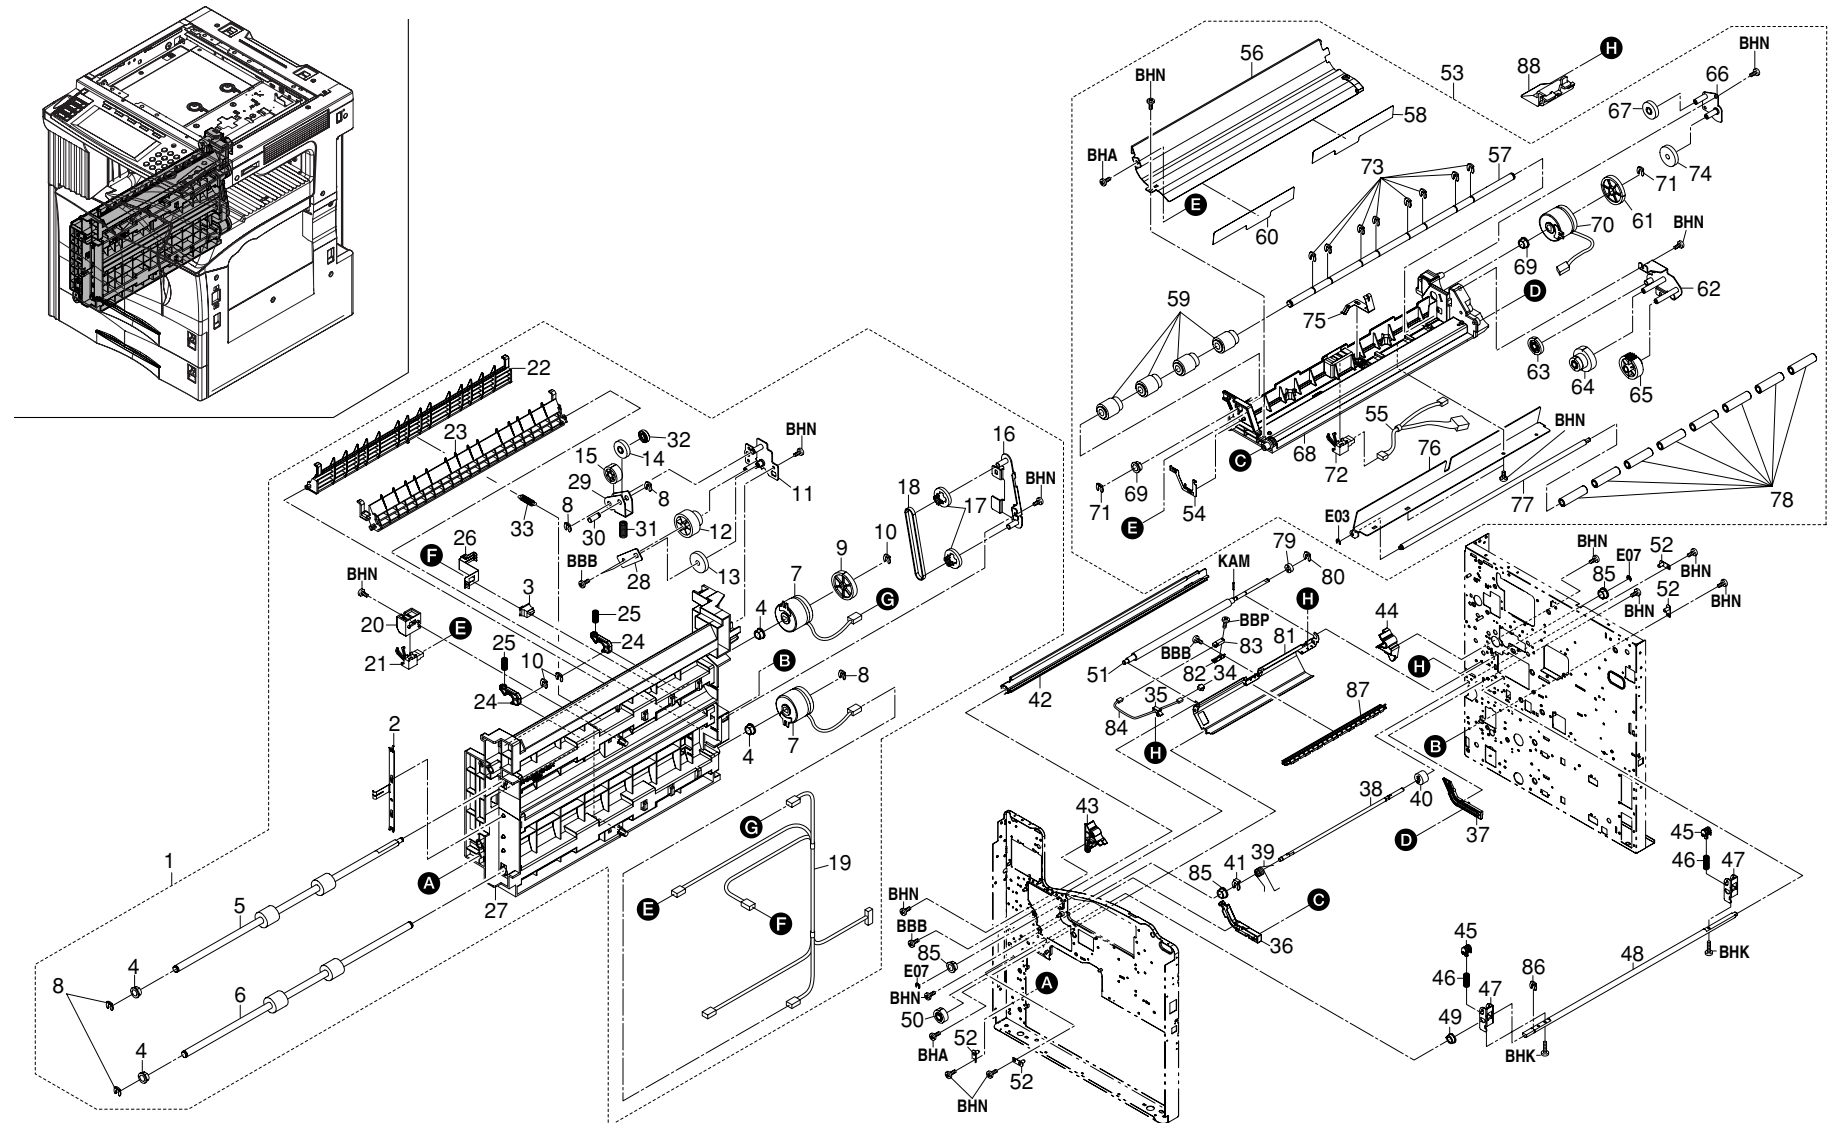


FIG. 5 PAPER FEED-IN SECTION II

2FG/2FF/2FD

SP	Ref. No.	Part. No.	Description	Quantity			
				110V	120V	230V	240V
●	81	2BL06260	FRONT GUIDE REGIST	1	1	1	1
	82	2BL06440	MOUNT REGIST SWITCH	1	1	1	1
	83	2FG27110	SWITCH REGISTRATION	1	1	1	1
	84	2BL27170	WIRE REGISTRATION	1	1	1	1
	85	67322230	BUSHING 8	3	3	3	3
	86	2BC06980	STOPPER 5	1	1	1	1
	87	2BL68291	REGIST CLEANER ASS'Y	1	1	1	1
	88	2BL06430	COVER CONNECTOR	1	1	1	1

- Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.
- Parts with "●" indicates the Spare parts.

- Parts with "••" are component parts or sub-assembly with "•" appearing immediately above them.

FIG. 6 PAPER FEED-IN SECTION III

2FG/2FF/2FD

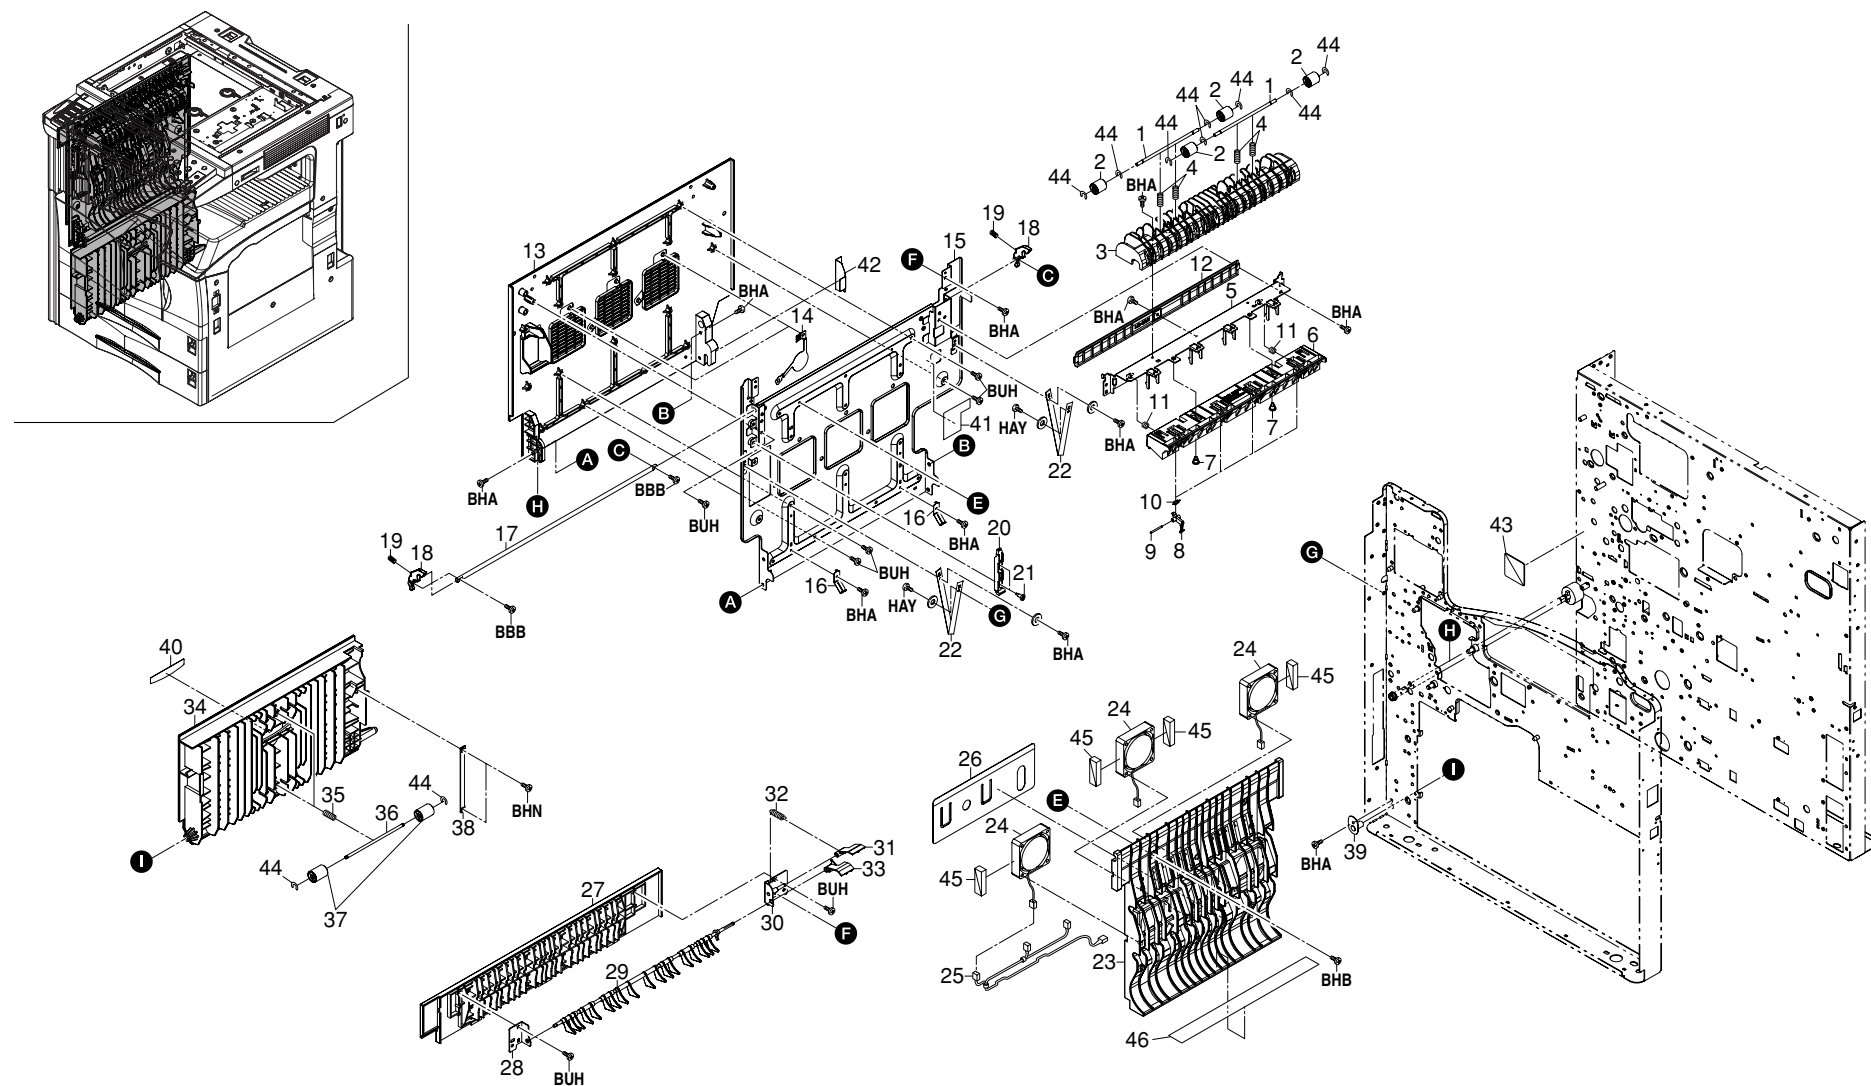


FIG. 6 PAPER FEED-IN SECTION III

SP	Ref. No.	Part. No.	Description	Quantity			
				110V	120V	230V	240V
●	1	2BL21361	SHAFT CHANGE PULLEY	2	2	2	2
●	2	2BL21330	PULLEY FEED SHIFT	4	4	4	4
	3	2BL21290	GUIDE EXIT L	1	1	1	1
	4	2BL21340	SPRING CHANGE PULLEY	4	4	4	4
	5	2FG20180	MOUNT REAR GUIDE	1	1	1	1
	6	2FG20170	REAR GUIDE FIXING	1	1	1	1
	7	34920170	FULCRUM PIN, FIXING	2	2	2	2
●	8	2BL20350	CLAW PRESS ROLLER	4	4	4	4
	9	2AR20510	SHAFT, PRESSURE ROLLER SEPARATION CLAW	4	4	4	4
●	10	2BL20360	SPRING, SEPARATION CLAW	4	4	4	4
	11	65009050	SPRING, DEVELOPING ROCK	2	2	2	2
	12	2BL21410	GUIDE FEED SHIFT L	1	1	1	1
●	13	2BL04510	LEFT COVER MIDDLE 1	1	1	1	1
	14	2BL23110	GROUND PLATE LEFT FAN	2	2	2	2
	15	2BL04620	PLATE LEFT COVER M	1	1	1	1
	16	2BL04700	GROUND PLATE LEFT B	2	2	2	2
	17	2BL04540	SHAFT L COVER LOCK M	1	1	1	1
●	18	2BL04550	LEVER L COVER LOCK M	2	2	2	2
	19	2BL04560	SPRING L COVER LOCK	2	2	2	2
	20	2BL04600	LEVER COVER RELEASE	1	1	1	1
	21	73912281	PIN, ORIGINAL HOLDER	2	2	2	2
	22	2BL04680	STRAP COVER	2	2	2	2
	23	2BL21320	GUIDE LEFT COVER M	1	1	1	1
●	24	2FG27080	FAN MOTOR 4	3	3	3	3
	25	2BL27300	WIRE CONVEYING FAN	1	1	1	1
	26	2BL21460	FILM WIRE PROTECT	1	1	1	1
●	27	2BJ04510	COVER EXIT L	1	1	1	1
	28	2BJ04520	FRONT PLATE EXIT L	1	1	1	1
	29	2BJ21010	GUIDE CHANGE UP	1	1	1	1
	30	2BJ04530	REAR PLATE EXIT L	1	1	1	1
●	31	2BJ21021	LEVER GUIDE CHANGE U	1	1	1	1
	32	2BJ21030	SPRING CHANGE UP	1	1	1	1
●	33	2BJ21040	LEVER CHANGE UP B	1	1	1	1
●	34	2BL06100	LEFT COVER FEED	1	1	1	1
	35	2BL06340	SPRING FEED	2	2	2	2
	36	2BL06211	SHAFT FEED PULLEY	2	2	2	2
●	37	2BL16080	PULLEY FEED	4	4	4	4
	38	2BL06960	STRAP RELEASE	1	1	1	1
	39	2AR07540	RETAINING PIN, VERTICAL CONVEYING	1	1	1	1
●	40	2BL05050	LABEL LEFT COVER	1	1	1	1

- Parts with "*" are component parts or sub-assemblies of the assembly appearing immediately above them.
- Parts with "●" indicates the Spare parts.

2FG/2FF/2FD

SP	Ref. No.	Part. No.	Description	Quantity			
				110V	120V	230V	240V
	41	2BL05110	LABEL HIGH TEMP	1	1	1	1
	42	2BL21500	FILM WIRE PROTECT B	1	1	1	1
●	43	2BL05270	LABEL DRUM CAUTION	1	1	1	1
●	44	2BL16290	CUT WASHER 3	10	10	10	10
●	45	2BL23170	SPONGE LEFT FAN	4	4	4	4
	46	2BL21490	GUIDE FILM DU	1	1	1	1

- Parts with "•" are component parts or sub-assembly with "•" appearing immediately above them.

FIG. 7 PAPER CONVEYING SECTION

2FG/2FF/2FD

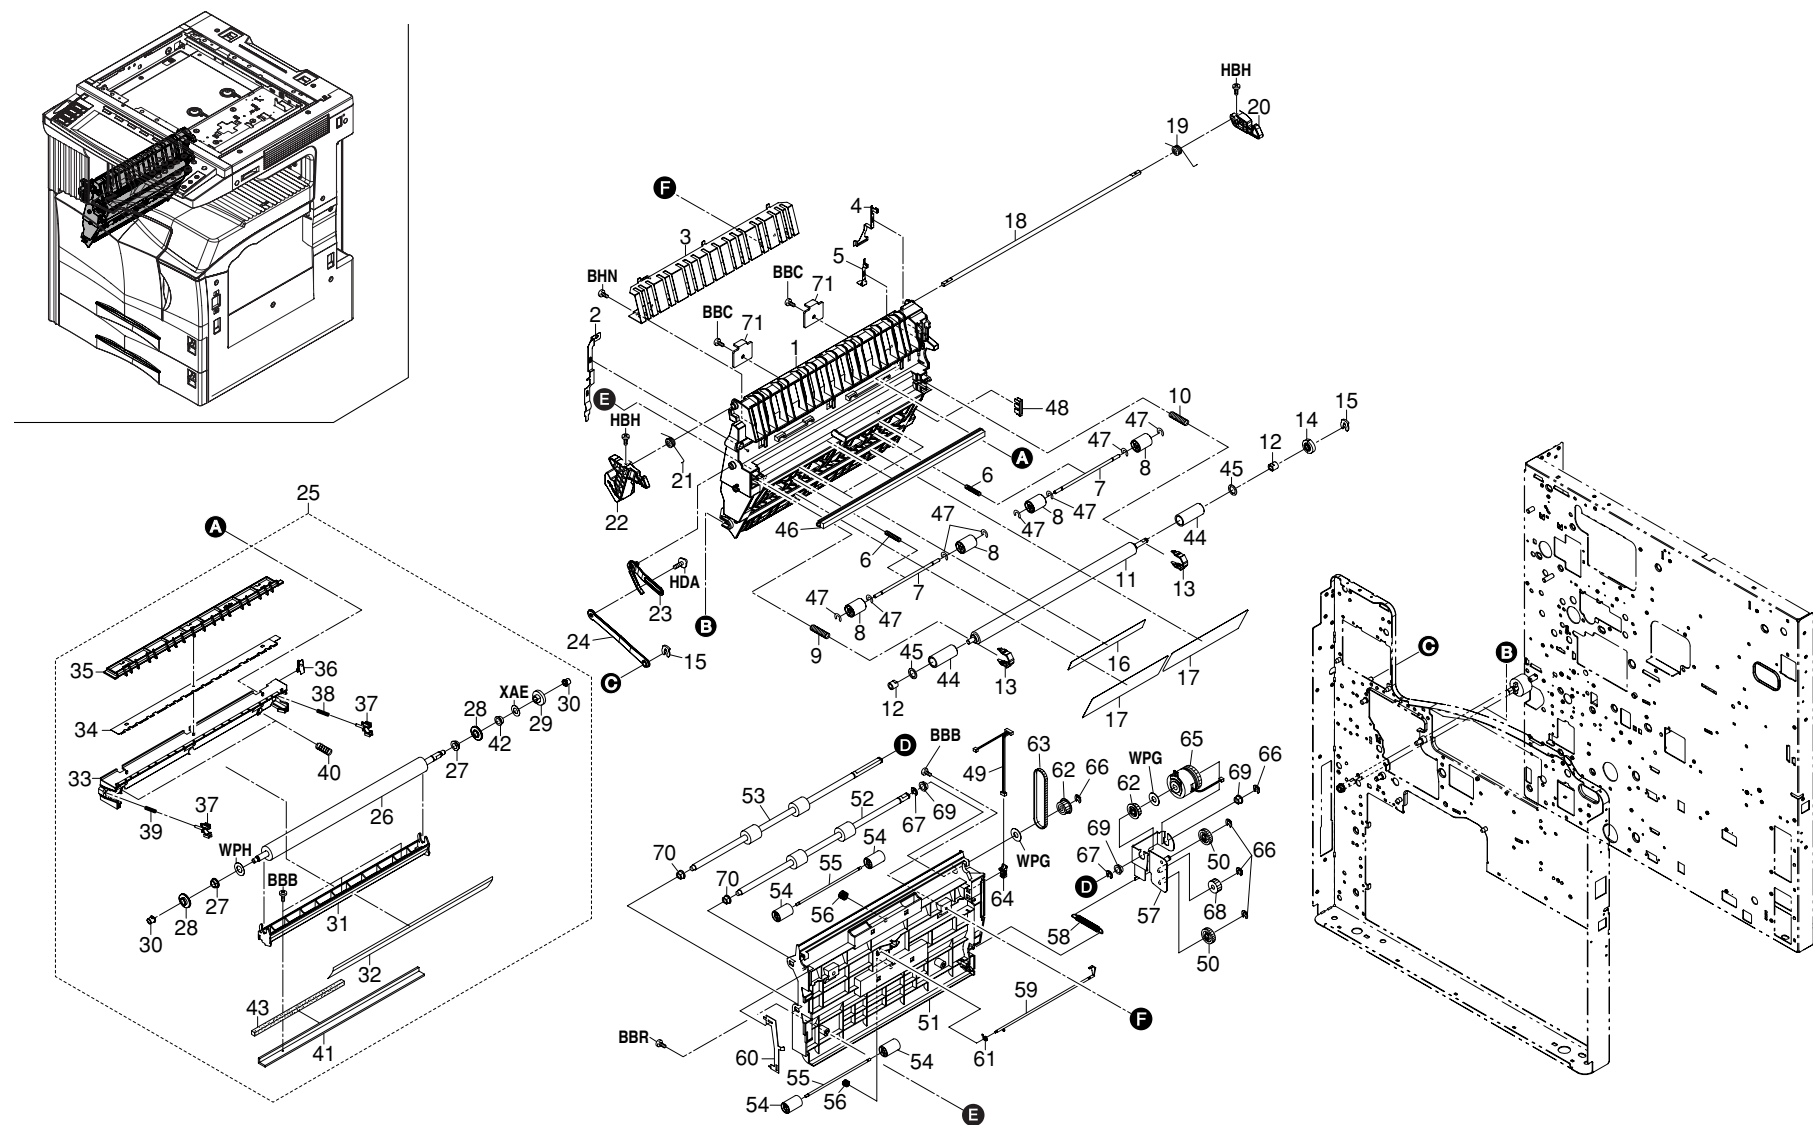


FIG. 7 PAPER CONVEYING SECTION

SP	Ref. No.	Part. No.	Description	Quantity			
				110V	120V	230V	240V
	1	2BL16010	BASE CONVEYING 1	1	1	1	1
	2	2BL16160	PLATE TRANS UNIT GND	1	1	1	1
	3	2BL16120	PLATE PAPER GUIDE	1	1	1	1
	4	2BL16150	PLATE TRANS B	1	1	1	1
	5	2BL16170	PLATE SEPARATION B	1	1	1	1
●	6	2BL16090	SPRING FEED	2	2	2	2
●	7	2BL16071	SHAFT FEED	2	2	2	2
●	8	2BL16080	PULLEY FEED	4	4	4	4
●	9	2BL16270	FRONT SPRING REGIST	1	1	1	1
●	10	2BL16280	REAR SPRING REGIST	1	1	1	1
●	11	2FG16020	ROLLER REGIST	1	1	1	1
●	12	2BL16260	BUSHING REGIST	2	2	2	2
	13	2BL16030	STOPPER BUSH	2	2	2	2
●	14	2BL16060	GEAR REGIST Z18	1	1	1	1
●	15	2A806250	RING STOPPER	2	2	2	2
●	16	2BL16130	GUIDE REGIST F	2	2	2	2
	17	2BL16250	GUIDE FEED F	2	2	2	2
	18	2BL16210	SHAFT CONVEYING	1	1	1	1
	19	2BL16240	SPRING CONVEYING B	1	1	1	1
●	20	2BL16190	HOOK CONVEYING	1	1	1	1
	21	2BL16200	SPRING CONVEYING	1	1	1	1
●	22	2BL16180	HANDLE CONVEYING	1	1	1	1
	23	2BL16110	STRAP CONVEYING B	1	1	1	1
	24	2BL16100	STRAP CONVEYING A	1	1	1	1
●	25	2BK93070	TR-700 TRANSFER UNIT (KM-3035)	1	1	1	1
●	25	2BL93030	TR-701 TRANSFER UNIT (KM-5035/KM-4035)	1	1	1	1
●	26	●2BL17021	ROLLER TRANSFER	1	1	1	1
●	27	●2BL17170	BUSHING 8	2	2	2	2
●	28	●2BL17040	PULLEY TRANS ROLLER	2	2	2	2
●	29	●2BL17090	GEAR TRANS Z25H	1	1	1	1
●	30	●2BL17030	COLLAR TRANS ROLLER	2	2	2	2
	31	●2BL17150	LEFT GUIDE TRANSFER	1	1	1	1
	32	●2BL17140	SHEET TRANS GUIDE	1	1	1	1
	33	●2BL17010	HOUSING TRANSFER	1	1	1	1
●	34	●2BK17010	BRUSH SEPARATION B (KM-3035)	1	1	1	1
●	34	●2BL17110	BRUSH SEPARATION (KM-5035/KM-4035)	1	1	1	1
	35	●2BL17100	HOLDER SEPARATION	1	1	1	1
	36	●2BL17050	PLATE TRANS UNIT	1	1	1	1
●	37	●2BL17060	BUSH TRANS ROLLER	2	2	2	2
●	38	●2BL17080	SPRING TRANS R	1	1	1	1

- Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.
- Parts with "●" indicates the Spare parts.

2FG/2FF/2FD

SP	Ref. No.	Part. No.	Description	Quantity			
				110V	120V	230V	240V
●	39	●2BL17070	SPRING TRANS F	1	1	1	1
	40	●2BL17180	SPRING LEFT GUIDE	2	2	2	2
	41	●2BL17190	REINFORCEMENT TRANS	1	1	1	1
●	42	●75718040	BUSHING,CLEANING BLADE SHAFT	1	1	1	1
	43	●2BL17210	SPONGE LEFT GUIDE	1	1	1	1
	44	2BL07960	PULLEY REGIST	2	2	2	2
	45	2BL07970	CUT WASHER 10	2	2	2	2
●	46	2BL07950	UNDER CLEANER REGIST	1	1	1	1
●	47	2BL16290	CUT WASHER 3	8	8	8	8
	48	2FG16010	PLATE MID FEED UNIT	1	1	1	1
	49	3CX27010	WIRE DUPLEX(C)	1	1	1	1
●	50	2AL06110	GEAR 25	2	2	2	2
	51	2BL07010	FRAME DU	1	1	1	1
●	52	2BL07020	ROLLER DU FEED UP	1	1	1	1
●	53	2BL07030	ROLLER DU FEED LOW	1	1	1	1
●	54	2BL07040	PULLEY DU	4	4	4	4
	55	2BL07050	SHAFT DU PULLEY	2	2	2	2
	56	2BL07060	SPRING DU PULLEY	2	2	2	2
	57	2BL07070	JOINT DU	1	1	1	1
	58	2BL07080	SPRING DU JOINT	1	1	1	1
●	59	2BL07090	ACTUATOR DU	1	1	1	1
	60	2BL07110	PLATE EARTH DU	1	1	1	1
●	61	2BL07130	SPRING DU ACT.	1	1	1	1
●	62	2BL21230	PULLEY EXIT T30	2	2	2	2
●	63	2BL21240	BELT EXIT P2M212	1	1	1	1
●	64	2BL27450	SWITCH PI	1	1	1	1
●	65	2BL27500	CLUTCH FEED	1	1	1	1
●	66	34806150	STOPPER 5	5	5	5	5
●	67	34806480	STOPPER 6	2	2	2	2
●	68	66506630	GEAR 20,IDLE	1	1	1	1
●	69	67322230	BUSHING 8	3	3	3	3
●	70	73210450	BUSH, 6	2	2	2	2
	71	2BL07120	PLATE NUT DU	2	2	2	2

- Parts with "••" are component parts or sub-assembly with "•" appearing immediately above them.

FIG. 8 PAPER EXIT SECTION

2FG/2FF/2FD

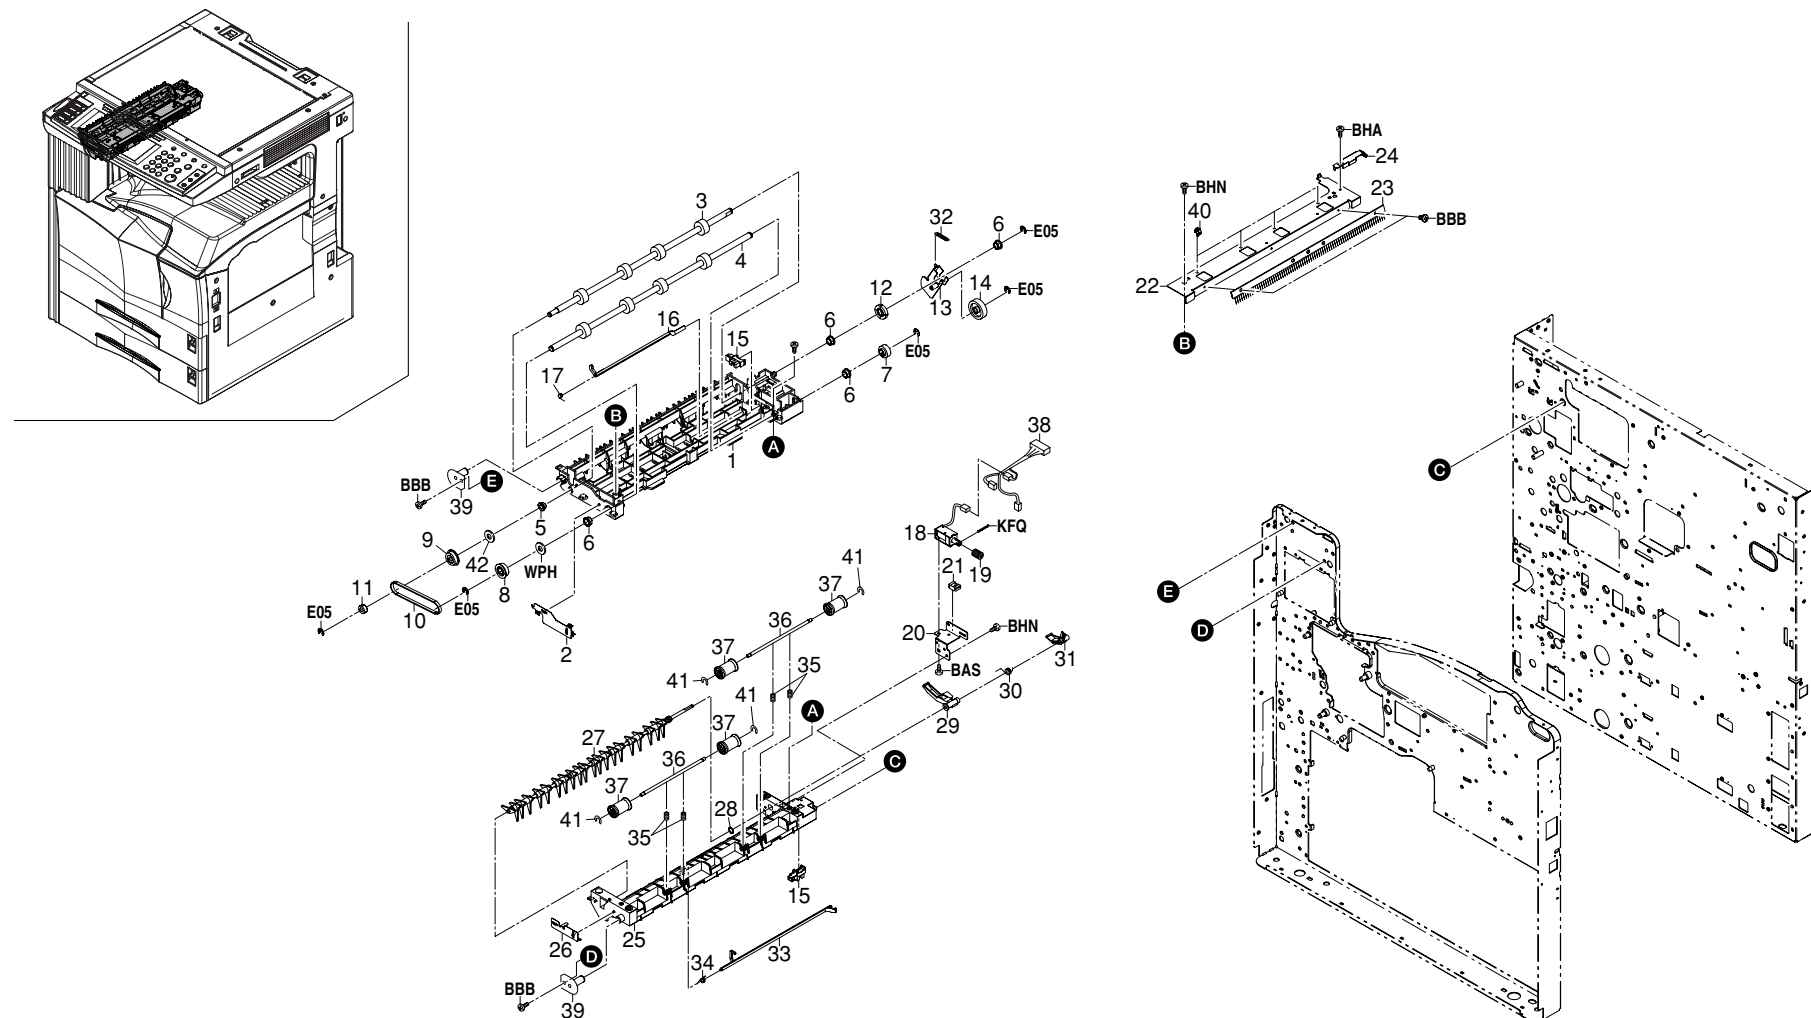


FIG. 8 PAPER EXIT SECTION

SP	Ref. No.	Part. No.	Description	Quantity			
				110V	120V	230V	240V
●		2BJ93110	PARTS,EXIT UNIT SP (J)	1			
●		2BJ93100	PARTS,EXIT UNIT,SP		1	1	1
	1	•2BL21040	FRAME EXIT UP	1	1	1	1
	2	•2BL21170	PLATE EARTH EXIT F	1	1	1	1
●	3	•2BL21030	ROLLER FEED SHIFT	1	1	1	1
●	4	•2BJ21050	ROLLER EJECT J	1			
●	4	•2BL21020	ROLLER EXIT		1	1	1
●	5	•73210450	BUSH, 6	1	1	1	1
●	6	•67322230	BUSHING 8	4	4	4	4
●	7	•2BL21430	GEAR EXIT Z20	1	1	1	1
●	8	•2BL21230	PULLEY EXIT T30	1	1	1	1
●	9	•2BL21211	PULLEY ONEWAY T30	1	1	1	1
●	10	•2BL21240	BELT EXIT P2M212	1	1	1	1
	11	•2BL22580	COLLAR BELT	1	1	1	1
●	12	•2BL21220	GEAR EXIT Z19	1	1	1	1
	13	•2BL21200	JOINT EXIT	1	1	1	1
●	14	•2BL21390	GEAR EXIT JOINT Z26S	1	1	1	1
●	15	•35327400	SWITCH,FEED	2	2	2	2
●	16	•2BL21130	ACTUATOR EXIT L	1	1	1	1
	17	•2BL21260	SPRING ACTUATOR L	1	1	1	1
●	18	•3AZ21890	SOLENOID,FEED SHIFT	1	1	1	1
●	19	•2BL21440	SPRING EXIT CHANGE	1	1	1	1
	20	•2BL21190	BKT SOLENOID	1	1	1	1
	21	•M2104350	EDGING,EDS-0607M(KITAGAWA)	1	1	1	1
	22	•2BL21160	BKT DISCHARGER	1	1	1	1
●	23	•34821100	STATIC ELIMINATOR,EJECT	1	1	1	1
	24	•2BL21180	PLATE EARTH EXIT R	1	1	1	1
	25	•2BL21010	FRAME EXIT	1	1	1	1
	26	•2BL21470	PLATE EARTH CHANGE	1	1	1	1
●	27	•2BL21080	GUIDE EXIT CHANGE	1	1	1	1
●	28	•2BL21510	CUT WASHER 6	1	1	1	1
	29	•2BL21370	LEVER GUIDE CHANGE B	1	1	1	1
	30	•2BL21270	SPRING FEED SHIFT	1	1	1	1
	31	•2BL21100	LEVER GUIDE CHANGE	1	1	1	1
	32	•2BL21400	SPRING EXIT JOINT	1	1	1	1
●	33	•2BL21120	ACTUATOR EXIT R	1	1	1	1
	34	•2BL21250	SPRING ACTUATOR R	1	1	1	1
	35	•2BL21070	SPRING EXIT PULLEY	4	4	4	4
●	36	•2BL21060	SHAFT EXIT PULLEY	2	2	2	2
	37	•2BL21450	PULLEY EXIT B	4			

- Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.
- Parts with "●" indicates the Spare parts.

2FG/2FF/2FD

SP	Ref. No.	Part. No.	Description	Quantity			
				110V	120V	230V	240V
	37	•2BL21520	PULLEY EXIT C		4	4	4
	38	•2BJ27160	WIRE EJECT(C)	1	1	1	1
	39	•2BL21420	PIN EXIT	2	2	2	2
●	40	•M2105740	MINIATURE CLAMP,UAMS-05S-2	4	4	4	4
●	41	•2BL16290	CUT WASHER 3	4	4	4	4
	42	•C2891120	POLYESTER SLIDER WASHER 6.2X12X0.25T	1	1	1	1

- Parts with "••" are component parts or sub-assembly with "•" appearing immediately above them.

FIG. 9 OPTICAL SECTION

2FG/2FF/2FD

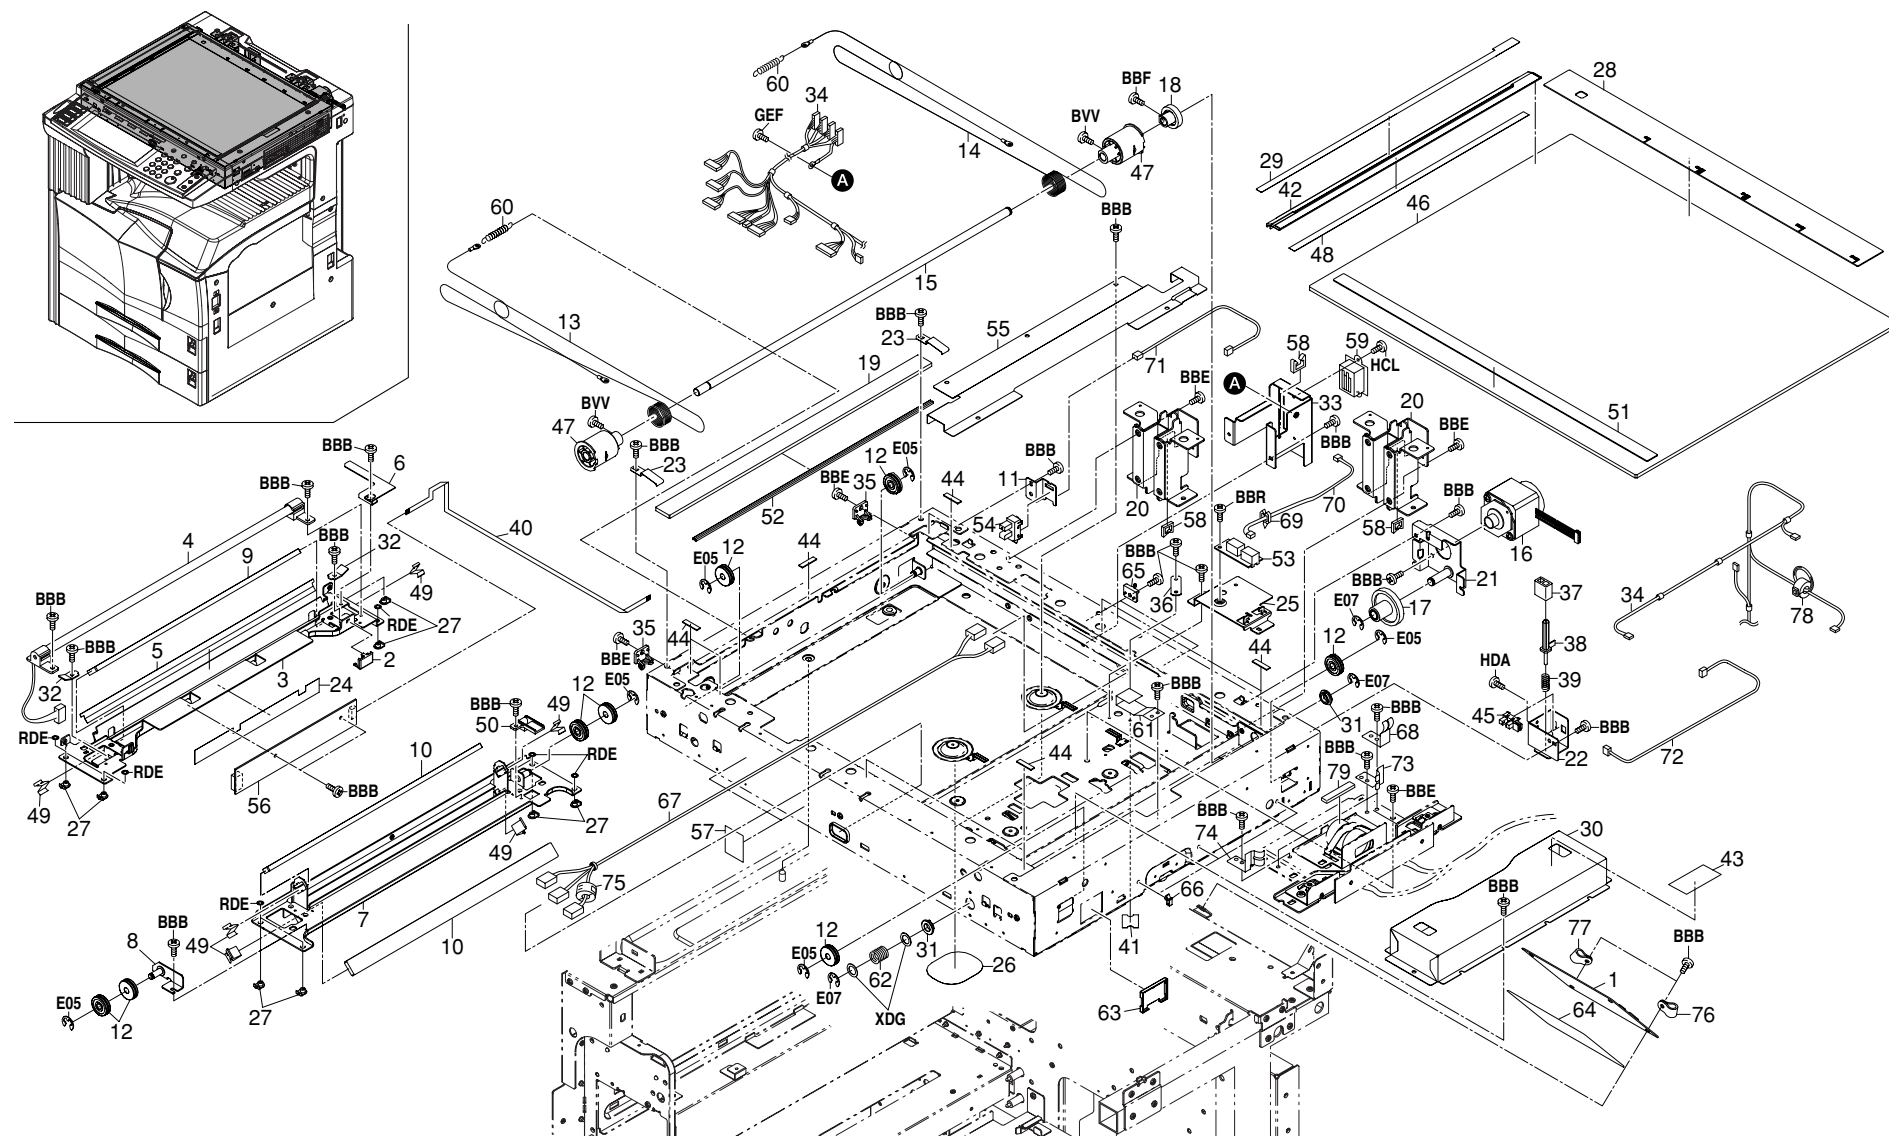


FIG. 9 OPTICAL SECTION

SP	Ref. No.	Part. No.	Description	Quantity			
				110V	120V	230V	240V
●	1	2FG01040	CCD DRIVE PCB ASS'Y	1	1	1	1
	2	2AV12080	GUIDE FFC1	1	1	1	1
	3	2AV12091	MIRROR FRAME A	1	1	1	1
●	4	2AV12100	LAMP,SCANNER	1	1	1	1
	5	2AV12110	REFLECTOR,SCANNER	1	1	1	1
	6	2AV12121	LIGHT SHIELD,PI	1	1	1	1
	7	2AV12130	MIRROR FRAME B	1	1	1	1
	8	2AV12140	ADJUSTING PLATE B,MIRROR FRAME	1	1	1	1
●	9	2AV12150	MIRROR A	1	1	1	1
●	10	2AV12160	MIRROR B	2	2	2	2
	11	2AV12170	MOUNT,SCANNER PI	1	1	1	1
	12	2AV12180	PULLY,SCANNER	8	8	8	8
●	13	2AV12190	FRONT WIRE,SCANNER	1	1	1	1
●	14	2AV12200	REAR WIRE,SCANNER	1	1	1	1
	15	2AV12210	SHAFT,SCANNER DRIVE	1	1	1	1
●	16	2AV12221	MOTOR,SCANNER	1	1	1	1
●	17	2AV12230	GEAR 44/16	1	1	1	1
●	18	2AV12240	GEAR 26	1	1	1	1
●	19	2FG12020	CONTACT GLASS ADF	1	1	1	1
	20	2AV12260	MOUNT BASE,DF HINGE	2	2	2	2
	21	2AV12270	MOUNT,SCANNER MOTOR	1	1	1	1
	22	2AV12290	MOUNT,RELEASE SWITCH	1	1	1	1
	23	2AV12300	HOLDER,ADF CONTACT GLASS	2	2	2	2
	24	2AV12320	FILM A,MIRROR FRAME	1	1	1	1
	25	2FG12010	MOUNT ORIGINAL DETECTION	1	1	1	1
	26	2AV12430	LOWER SEAL,SCANNER	2	2	2	2
●	27	2AV12450	SLIDER,SCANNER	8	8	8	8
●	28	2AV12460	REAR ORIGINAL SIZE INDICATOR(METRIC)	1		1	1
●	28	2AV12470	REAR ORIGINAL SIZE INDICATOR(INCH)		1		
●	29	2AV12481	LABEL,ORIGINAL SIZE INDICATOR(METRIC)	1		1	1
●	29	2AV12491	LABEL,ORIGINAL SIZE INDICATOR(INCH)		1		
	30	2AV12520	COVER,ISU	1	1	1	1
●	31	72914480	REAR BUSHING,DEVELOPING ROLLER (B)	2	2	2	2
	32	2AV12350	STOPPER,WIRE	2	2	2	2
	33	2BJ26180	MOUNT DF CONNECTOR	1	1	1	1
	34	2FG27360	WIRE DF (KM-5035)	1	1	1	1
	34	2FF27010	WIRE SCANNER (KM-4035)	1	1	1	1
	34	2FD27010	WIRE SCAN (KM-3035)	1	1	1	1
	35	18512340	GUIDE,SCANNER WIRE	2	2	2	2
	36	2AC12300	HOLDER FFC	1	1	1	1
	37	2AC12360	GUIDE,RELEASE SWITCH	1	1	1	1

- Parts with "*" are component parts or sub-assemblies of the assembly appearing immediately above them.
- Parts with "●" indicates the Spare parts.

2FG/2FF/2FD

SP	Ref. No.	Part. No.	Description	Quantity			
				110V	120V	230V	240V
●	38	2AC12370	SWITCH,RELEASE DETECTION	1	1	1	1
	39	2AC12380	SPRING,RELEASE SWITCH	1	1	1	1
	40	2FG27100	WIRE INVERTER	1	1	1	1
	41	2AR12200	FILM,FFC	1	1	1	1
●	42	2A305070	LEFT ORIGINAL SIZE INDICATOR	1	1	1	1
●	43	2A105180	LABEL,CAUTION CONTACT GLASS	1	1	1	1
●	44	29812291	CUSHION,CONTACT GLASS	9	9	9	9
●	45	2C927210	SENSOR 248NL1	1	1	1	1
●	46	35912010	CONTACT GLASS	1	1	1	1
●	47	35912060	PULLEY,SCANNER DRUM	2	2	2	2
	48	2BC12130	STANDARD PLATE,SHADING	1	1	1	1
	49	35912210	SPRING,MIRROR HOLDER	6	6	6	6
	50	35912360	GUIDE FFC2	1	1	1	1
●	51	35912490	FRONT ORIGINAL SIZE INDICATOR	1	1	1	1
●	52	35912531	SPONGE,ORIGINAL SIZE INDICATOR	1	1	1	1
●	53	2C927090	SENSOR ORIGINAL	1	1	1	1
●	54	72127100	PI SWITCH,OPTICAL SECTION	1	1	1	1
	55	2AV12310	COVER,OPERATION UNIT WIRE	1	1	1	1
●	56	2AV28080	INVERTER PCB	1	1	1	1
	57	2BJ12080	FRONT FILM SCANNER	2	2	2	2
	58	M2104220	EDGING,EDS-1717U	3	3	3	3
	59	J0388460	RECEPTACLE,52918-4615(MOLEX)	1	1	1	1
	60	2AV12500	SPRING,SCANNER TENSION	2	2	2	2
	61	2BJ12040	GROUND PLATE A SCANNER	1	1	1	1
	62	34918200	SPRING,THRUST	1	1	1	1
●	63	2FG04020	COVER TOTAL COUNTER	1	1	1	1
	64	2BJ27330	SHEET SCANNER DRIVE	1	1	1	1
	65	2BJ12030	HOLDER SCANNER PCB	2	2	2	2
	66	M2109330	WIRE SADDLE,YMC-10-0(KITAGAWA)	3	3	3	3
	67	2FG27340	WIRE OPERATION(C)	1	1	1	1
	68	2BJ12050	GROUND PLATE B SCANNER	2	2	2	2
	69	M2105740	MINIATURE CLAMP,UAMS-05S-2	1	1	1	1
	70	2FG27350	WIRE ORIGINAL SENSOR	1	1	1	1
	71	2AR27520	WIRE,SCANNER SWITCH	1	1	1	1
	72	2BJ27170	WIRE RELEASE SW	1	1	1	1
	73	2BJ12070	GROUND PLATE D SCANNER	1	1	1	1
	74	2BJ12060	GROUND PLATE C SCANNER	1	1	1	1
	75	2FG27510	CORE ATFC-201010	1	1	1	1
	76	M7005010	CLAMP,EMT-3N(TAKEUCHI)	1	1	1	1
	77	M7005020	CLAMP,EMT-6N(TAKEUCHI)	1	1	1	1
	78	2AV27440	CORE 15-26X13	1	1	1	1
	79	2FG27560	GASKET CCD A	1	1	1	1

- Parts with "•••" are component parts or sub-assembly with "••" appearing immediately above them.

FIG. 10 BYPASS UNIT

2FG/2FF/2FD

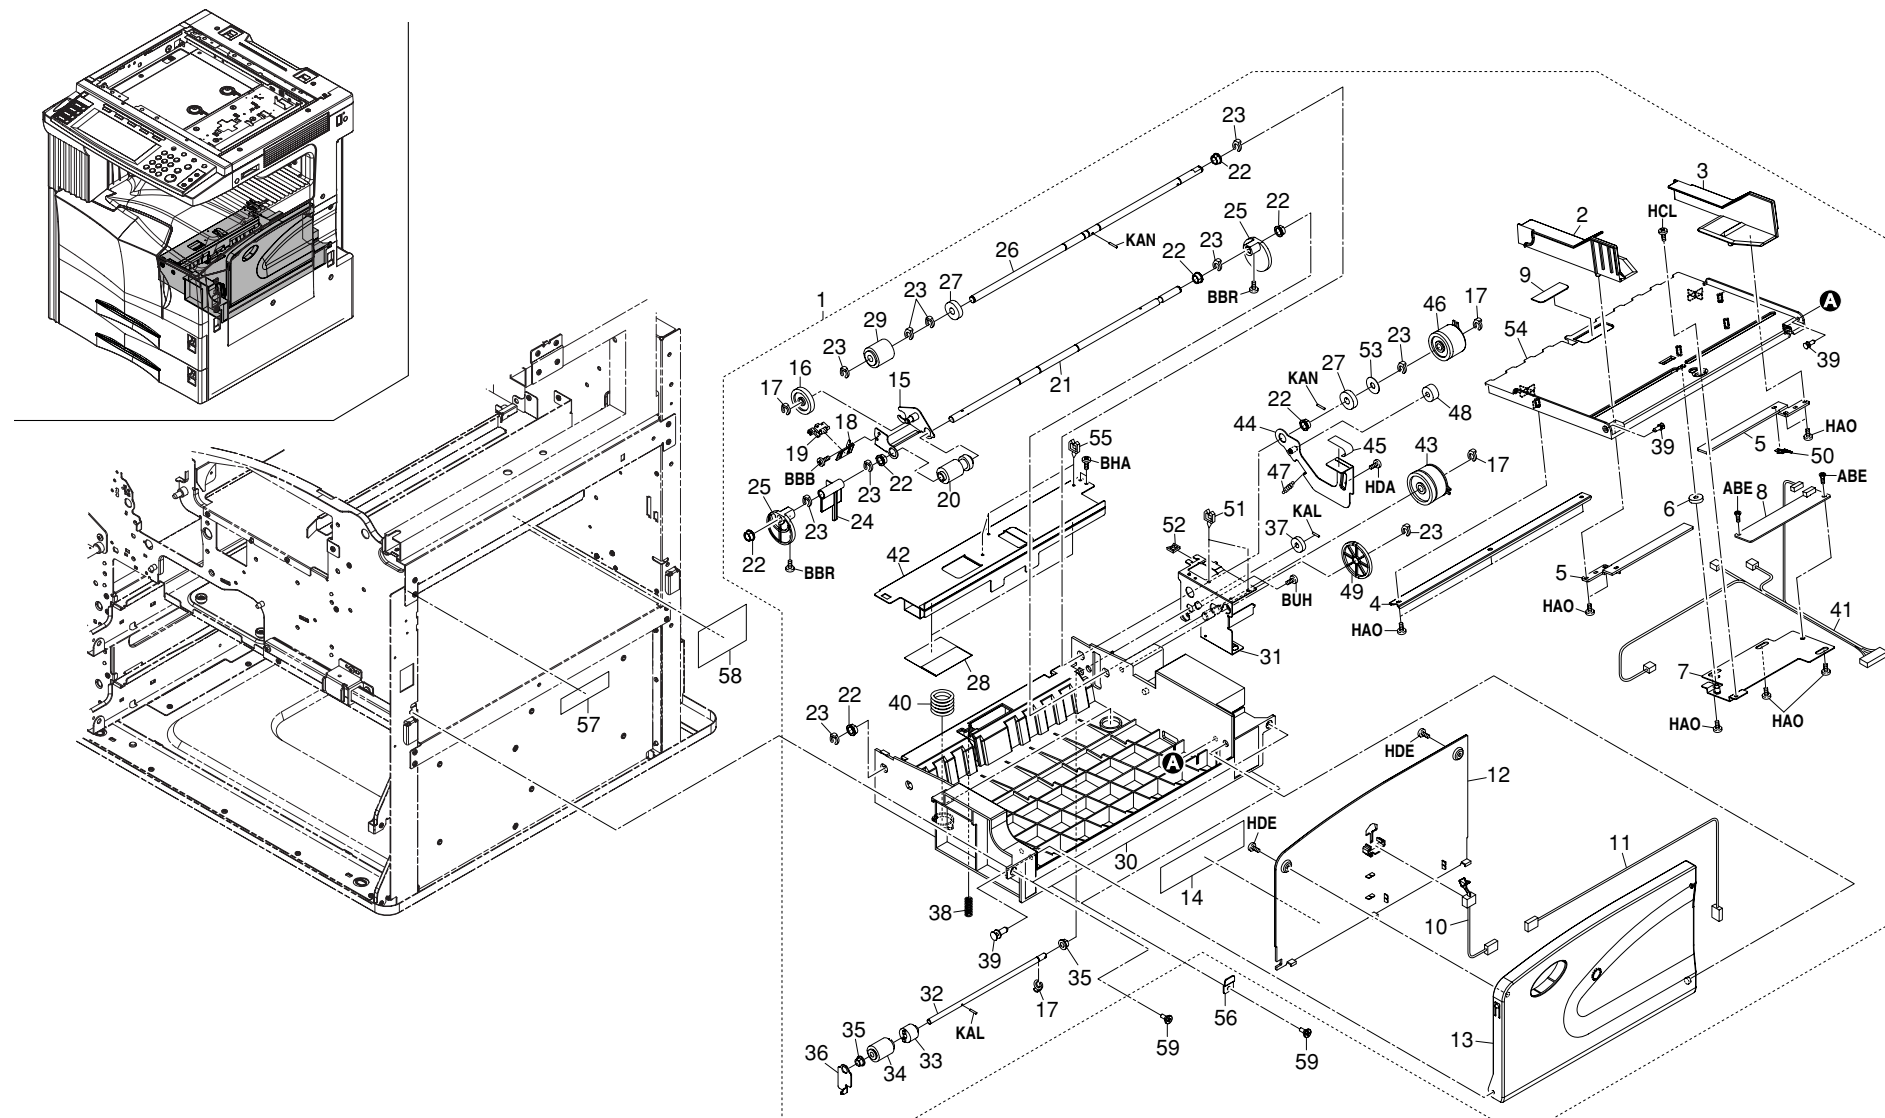


FIG. 10 BYPASS UNIT

SP	Ref. No.	Part. No.	Description	Quantity			
				110V	120V	230V	240V
●	1	2FG68010	BYPASS UNIT(C)	1		1	1
●	1	2FG68020	BYPASS UNIT(I)		1		
	2	•2BL06660	FRONT CURSOR BYPASS	1	1	1	1
	3	•2BL06670	REAR CURSOR BYPASS	1	1	1	1
	4	•2BL06650	STAY LIFTPLATE	1	1	1	1
●	5	•33907100	RACK,CASSETTE	2	2	2	2
●	6	•65914120	GEAR 18,IDLE DEVELOPING	1	1	1	1
	7	•3A206461	MOUNT,BYPASS PCB	1	1	1	1
●	8	•2FG01020	SIZE DETECTION ASS'Y	1	1	1	1
	9	•34806490	FRICTION PLATE,BYPASS LEADING FEED	1	1	1	1
●	10	•33906990	SWITCH,BYPASS SIZE DETECTION	1	1	1	1
	11	•2BL27210	WIRE BYPASS TRAY	1	1	1	1
●	12	•2BL06610	TABLE BYPASS	1	1	1	1
●	13	•2BL06600	COVER BYPASSSTRAY	1	1	1	1
●	14	•2BL05010	LABEL BYPASSSIZE(C)	1		1	1
●	14	•2BL05060	LABEL BYPASSSIZE(I)		1		
	15	•3A206130	JOINT,BYPASS PICKUP	1	1	1	1
●	16	•72321350	GEAR 30, FD EJECT IDLE	1	1	1	1
●	17	•2BC06980	STOPPER 5	4	4	4	4
	18	•3A206210	MOUNT,BYPASS PE SWITCH	1	1	1	1
●	19	•2BL27450	SWITCH PI	1	1	1	1
●	20	•2AR07240	PULLEY,LEADING FEED	1	1	1	1
	21	•2BL06760	SHAFT BYPASSCAM	1	1	1	1
●	22	•67322230	BUSHING 8	7	7	7	7
●	23	•2BC06910	STOPPER 6	10	10	10	10
●	24	•3A206100	ARM,BYPASS PE	1	1	1	1
●	25	•2BL06680	CAM BYPASS	2	2	2	2
	26	•2BL06770	SHAFT BYPASS	1	1	1	1
●	27	•45729416	GEAR,TONER ROLLER	2	2	2	2
	28	•2BL06880	FILM BYPASS	2	2	2	2
●	29	•61706770	UPPER PULLEY,BYPASS	1	1	1	1
	30	•2BL06510	BASE BYPASSUNIT(1)	1	1	1	1
	31	•2BL06690	MOUNT BYPASSDRIVE	1	1	1	1
	32	•2BL06750	SHAFT RETARD	1	1	1	1
●	33	•33906430	TORQUE LIMITER,BYPASS	1	1	1	1
●	34	•2AR07230	PULLEY,SEPARATION	1	1	1	1
●	35	•73210450	BUSH, 6	2	2	2	2
	36	•3A206170	HOLDER,RETARD	1	1	1	1
●	37	•66006810	GEAR,16 BYPASS PULLEY	1	1	1	1
	38	•2BL06860	SPRING RETARD	1	1	1	1

- Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.
- Parts with "●" indicates the Spare parts.

2FG/2FF/2FD

SP	Ref. No.	Part. No.	Description	Quantity			
				110V	120V	230V	240V
●	39	•66007310	PIN,CASSETTE WORK PLATE	3	3	3	3
	40	•2BL07860	SPRING BYPASS	2	2	2	2
	41	•2BL27150	WIRE BYPASS UNIT	1	1	1	1
	42	•2BL06530	COVER BYPASSUNIT	1	1	1	1
●	43	•2AV27451	CLUTCH B,PAPER FEED	1	1	1	1
	44	•2BL06850	JOINT RETARD	1	1	1	1
	45	•2BL05040	LABEL RETARD	1	1	1	1
●	46	•2BL27500	CLUTCH FEED	1	1	1	1
	47	•2BL06870	SPRING JOINTRETARD	1	1	1	1
●	48	•33906160	GEAR 16,PAPER FEED	1	1	1	1
●	49	•2BL06720	GEAR 55/15	1	1	1	1
	50	•33907110	TERMINAL,PAPER SIZE PCB	1	1	1	1
	51	•M2105740	MINIATURE CLAMP,UAMS-05S-2	2	2	2	2
	52	•M2104210	EDGING,EDS-2	1	1	1	1
	53	•2BL06990	STOPPER GEAR 8-25	1	1	1	1
	54	•2BL06641	LIFTPLATE BYPASS	1	1	1	1
	55	•M2105210	MINI CLAMP,UAMS-02WL-0(KITAGAWA)	3	3	3	3
	56	•2BL06890	PLATE BYPASS HOLD	2	2	2	2
	57	3A205010	LABEL,CAUTION GEAR	1	1	1	1
	58	2BL05100	LABEL BYPASS JAM R	1	1	1	1
	59	2BL04410	PIN COVER	4	4	4	4

- Parts with "•" are component parts or sub-assembly with "•" appearing immediately above them.

FIG. 11 BYPASS FEED UNIT

2FG/2FF/2FD

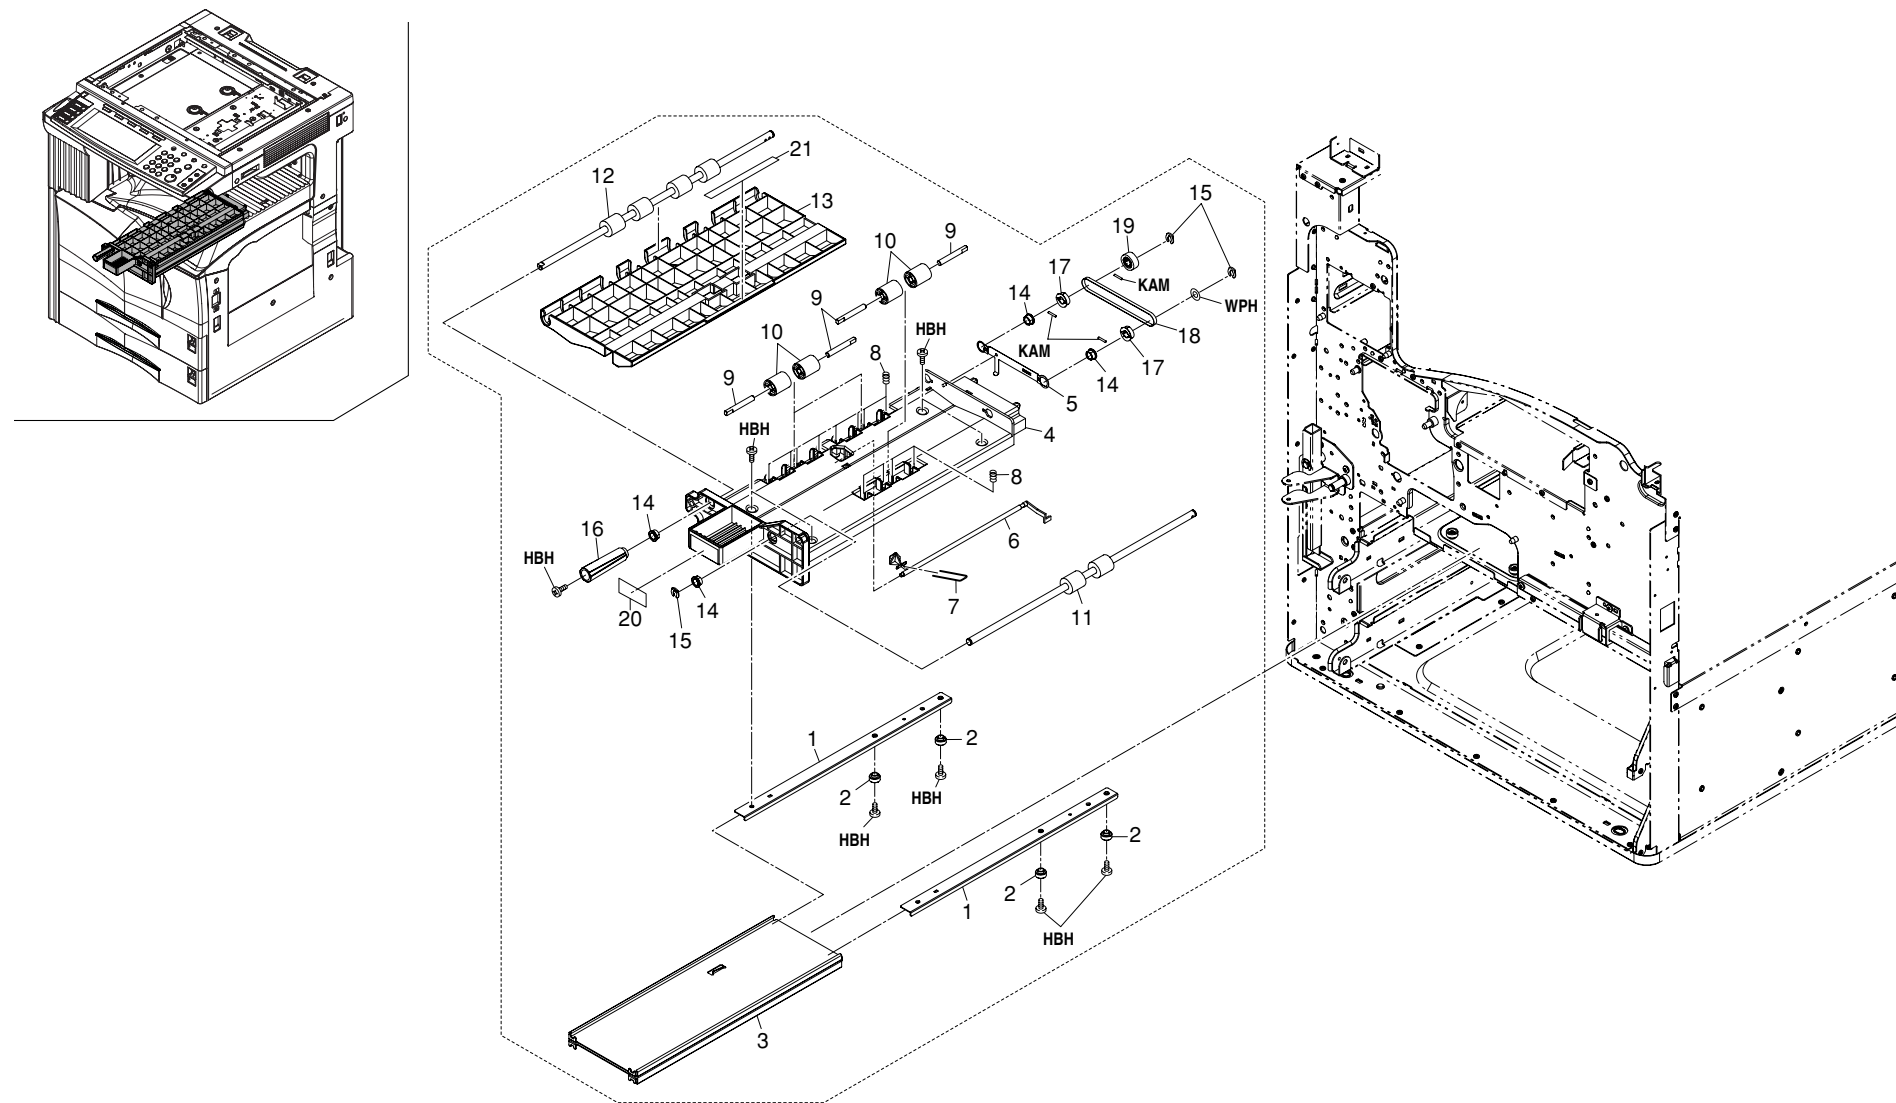


FIG. 11 BYPASS FEED UNIT

2FG/2FF/2FD

SP	Ref. No.	Part. No.	Description	Quantity			
				110V	120V	230V	240V
●		2BL93390	PARTS,BYPASS FEED UNIT	1	1	1	1
	1	•2BL06570	MOUNT RAIL	2	2	2	2
	2	•2BL06590	PULLEY RAIL	4	4	4	4
	3	•2BL06580	RAIL BYPASS	1	1	1	1
	4	•2BL06500	BASE BYPASSFEED(1)	1	1	1	1
	5	•2BL06790	GROUNDPLATE BYPASS	1	1	1	1
●	6	•2BL06730	ACTUATOR BYPASSFEED	1	1	1	1
●	7	•2BL06800	SPRING BYPASS	1	1	1	1
	8	•2BL06780	SPRING BYPASSFEED	12	12	12	12
	9	•2BL06740	SHAFT BYPASSFEED	6	6	6	6
●	10	•33906660	RIGHT PULLEY,FEED	6	6	6	6
●	11	•2BL06540	ROLLER2 BYPASSFEED	1	1	1	1
●	12	•2BL06560	ROLLER4 BYPASSFEED	1	1	1	1
	13	•2BL06520	UPPERGUIDE BYPASS	1	1	1	1
●	14	•67322230	BUSHING 8	4	4	4	4
●	15	•2BC06910	STOPPER 6	3	3	3	3
	16	•2BL06830	DIAL BYPASSFEED	1	1	1	1
●	17	•2BL06820	PULLEY25 BYPASSFEED	2	2	2	2
●	18	•2BL06810	BELT BYPASSFEED	1	1	1	1
●	19	•36722860	GEAR 18	1	1	1	1
	20	•2BL05020	FRONT LABEL BYPASS	1	1	1	1
	21	•2BL05030	UPPER LABEL BYPASS	1	1	1	1

- Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.
- Parts with "●" indicates the Spare parts.

- Parts with "••" are component parts or sub-assembly with "•" appearing immediately above them.

FIG. 12 LASER SCANNER UNIT

2FG/2FF/2FD

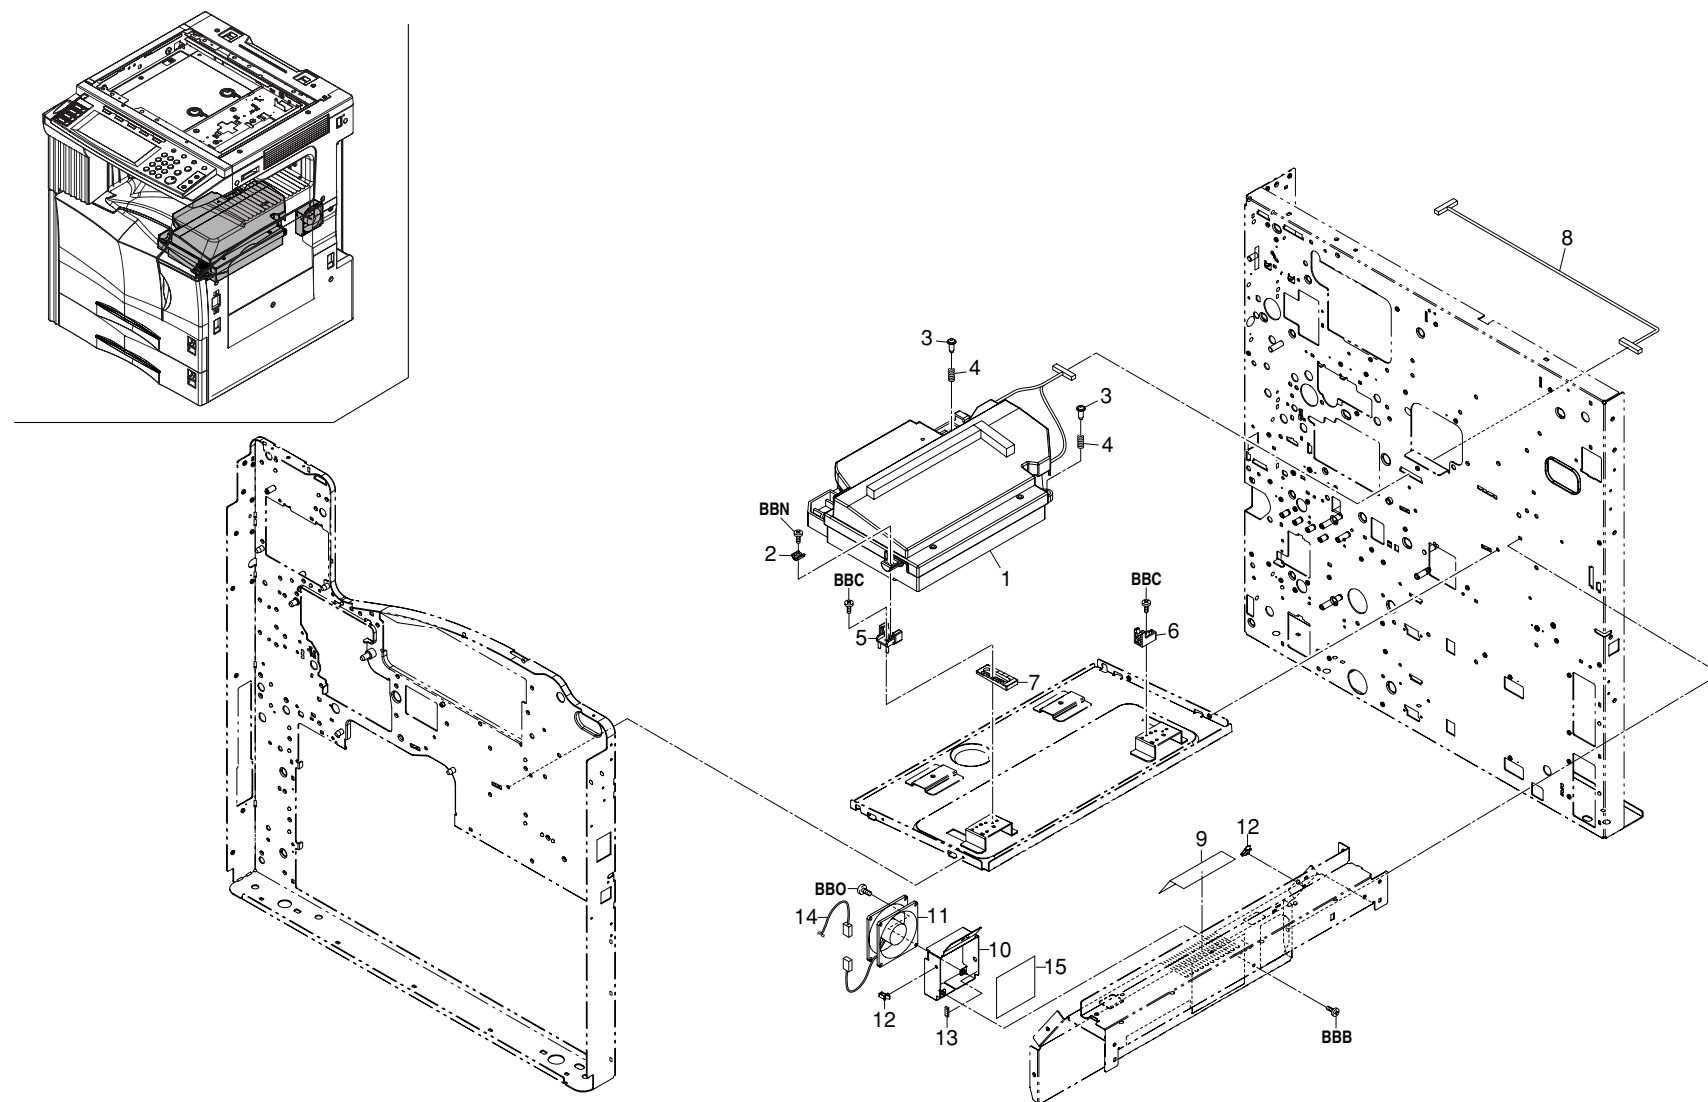


FIG. 12 LASER SCANNER UNIT

2FG/2FF/2FD

SP	Ref. No.	Part. No.	Description	Quantity			
				110V	120V	230V	240V
●	1	2BL93141	PARTS,LASER UNIT,LK700	1	1	1	1
	2	2BL13120	FRONT MOUNT HOUSING	1	1	1	1
	3	76610320	PIN TENSION PULLEY	2	2	2	2
	4	2BL13290	SPRING FIX LSU	2	2	2	2
	5	2BL13070	FRONT ADJUSTING LSU	1	1	1	1
	6	2BL13060	REAR ADJUSTING LSU	1	1	1	1
	7	2BL13250	ADJUSTING PLT LSU	1	1	1	1
	8	2BJ27200	WIRE LSU(C)	1	1	1	1
	9	2BL23090	FILTER DUST SHIELD	1	1	1	1
	10	2BL02230	MOUNT FAN	1	1	1	1
●	11	2BL27700	FAN COOLING(60-25)	1	1	1	1
	12	M2109330	WIRE SADDLE,YMC-10-0(KITAGAWA)	2	2	2	2
	13	2BL02240	SPONGE FAN	1	1	1	1
	14	2BL27330	WIRE DLP FAN	1	1	1	1
	15	2BL23160	FILTER DUST SHIELD B	1	1	1	1

- Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.
- Parts with "●" indicates the Spare parts.

- Parts with "••" are component parts or sub-assembly with "•" appearing immediately above them.

FIG. 13 DEVELOPING SECTION

2FG/2FF/2FD

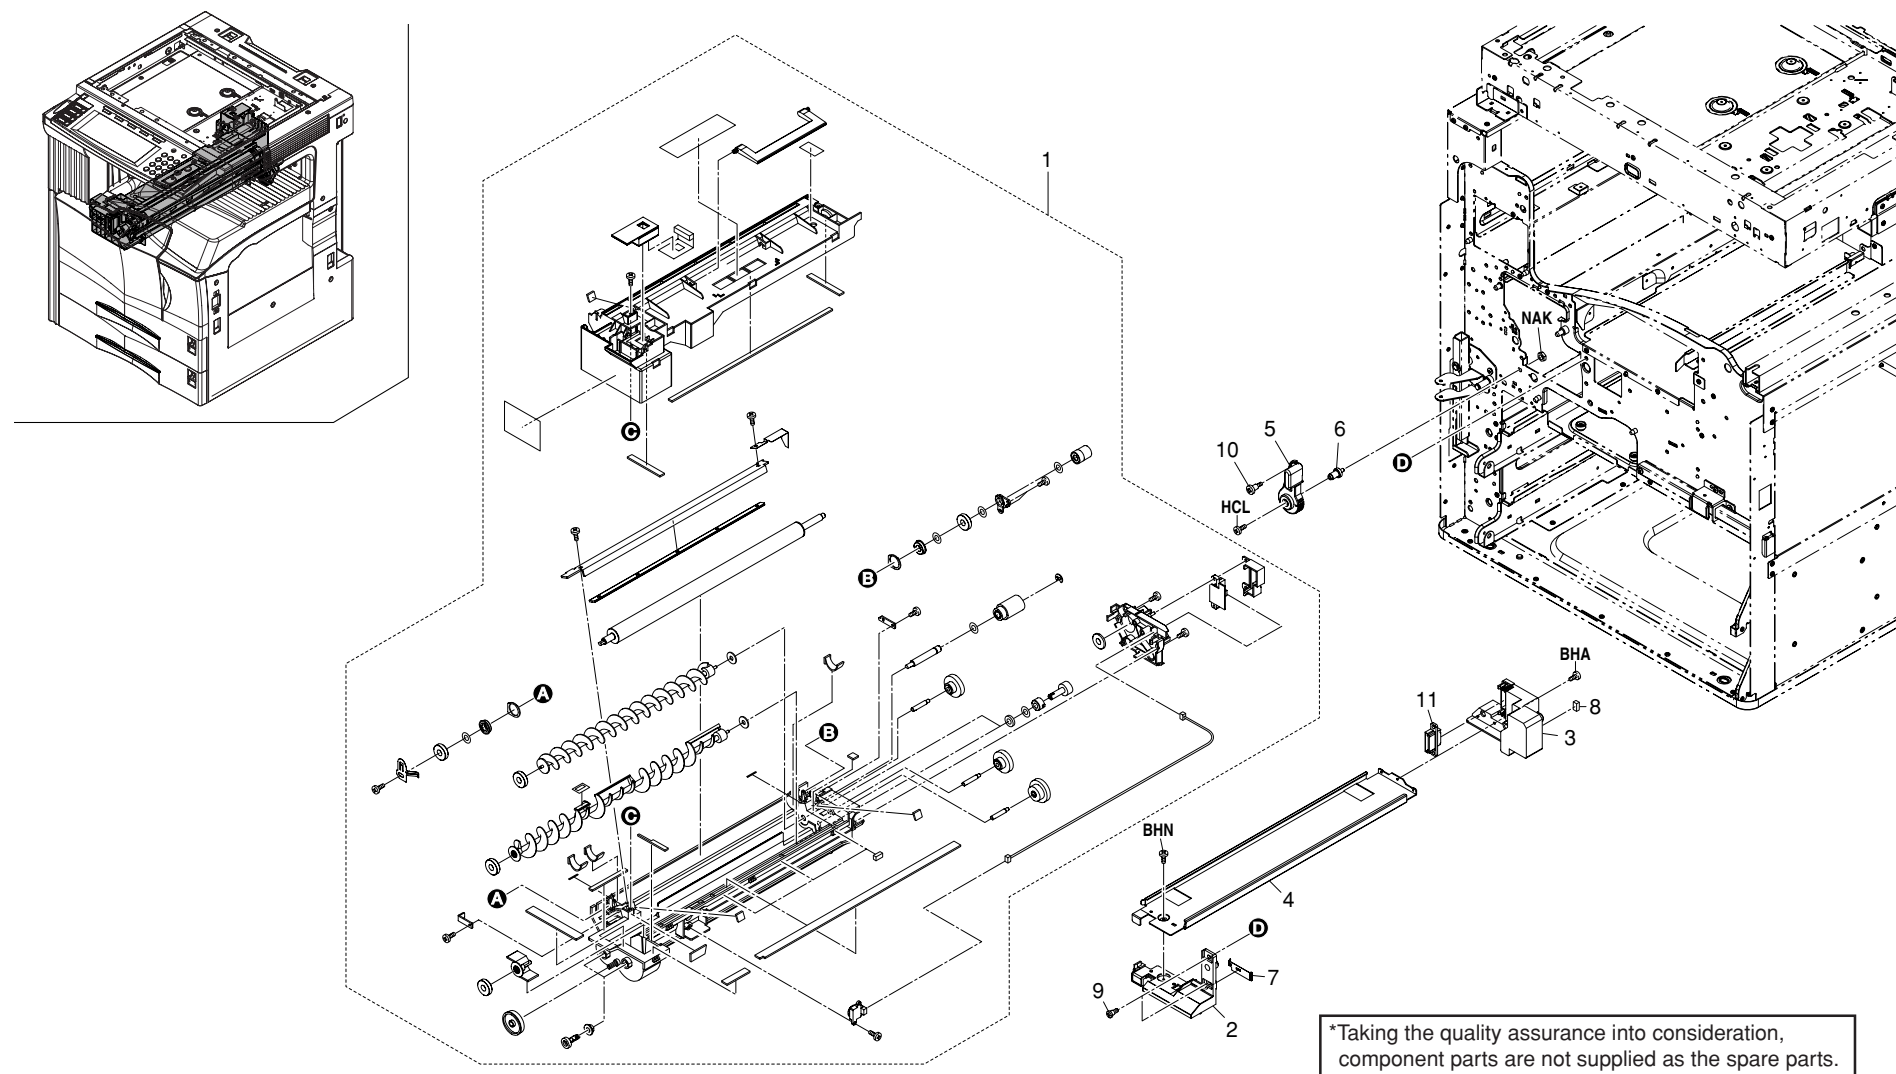


FIG. 13 DEVELOPING SECTION

2FG/2FF/2FD

SP	Ref. No.	Part. No.	Description	Quantity			
				110V	120V	230V	240V
●	1	2BJ93010	PARTS,DEVELOPER ASS'Y	1	1	1	1
	2	2BL14180	FRONT ARM RAIL	1	1	1	1
	3	2BL14190	REAR ARM RAIL	1	1	1	1
	4	2BL14200	RAIL DLP	1	1	1	1
	5	2BL14210	LEVER DLP	1	1	1	1
	6	2BL14220	PIN LEVER DLP	1	1	1	1
	7	2BL14350	GROUND PLATE RAIL	1	1	1	1
	8	2BL14480	SEAL WIRE	1	1	1	1
	9	2BL14660	STUD SCREW S	2	2	2	2
	10	36006140	PIN,JAM REMOVAL DIAL	1	1	1	1
	11	J7340100	RECEPTACLE,9715S-10A(IRS)	1	1	1	1
*Taking the quality assurance into consideration,component parts are not supplied as the spare parts.							

- Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.
- Parts with "●" indicates the Spare parts.

- Parts with "••" are component parts or sub-assembly with "•" appearing immediately above them.

FIG. 14 FIXING SECTION

2FG/2FF/2FD

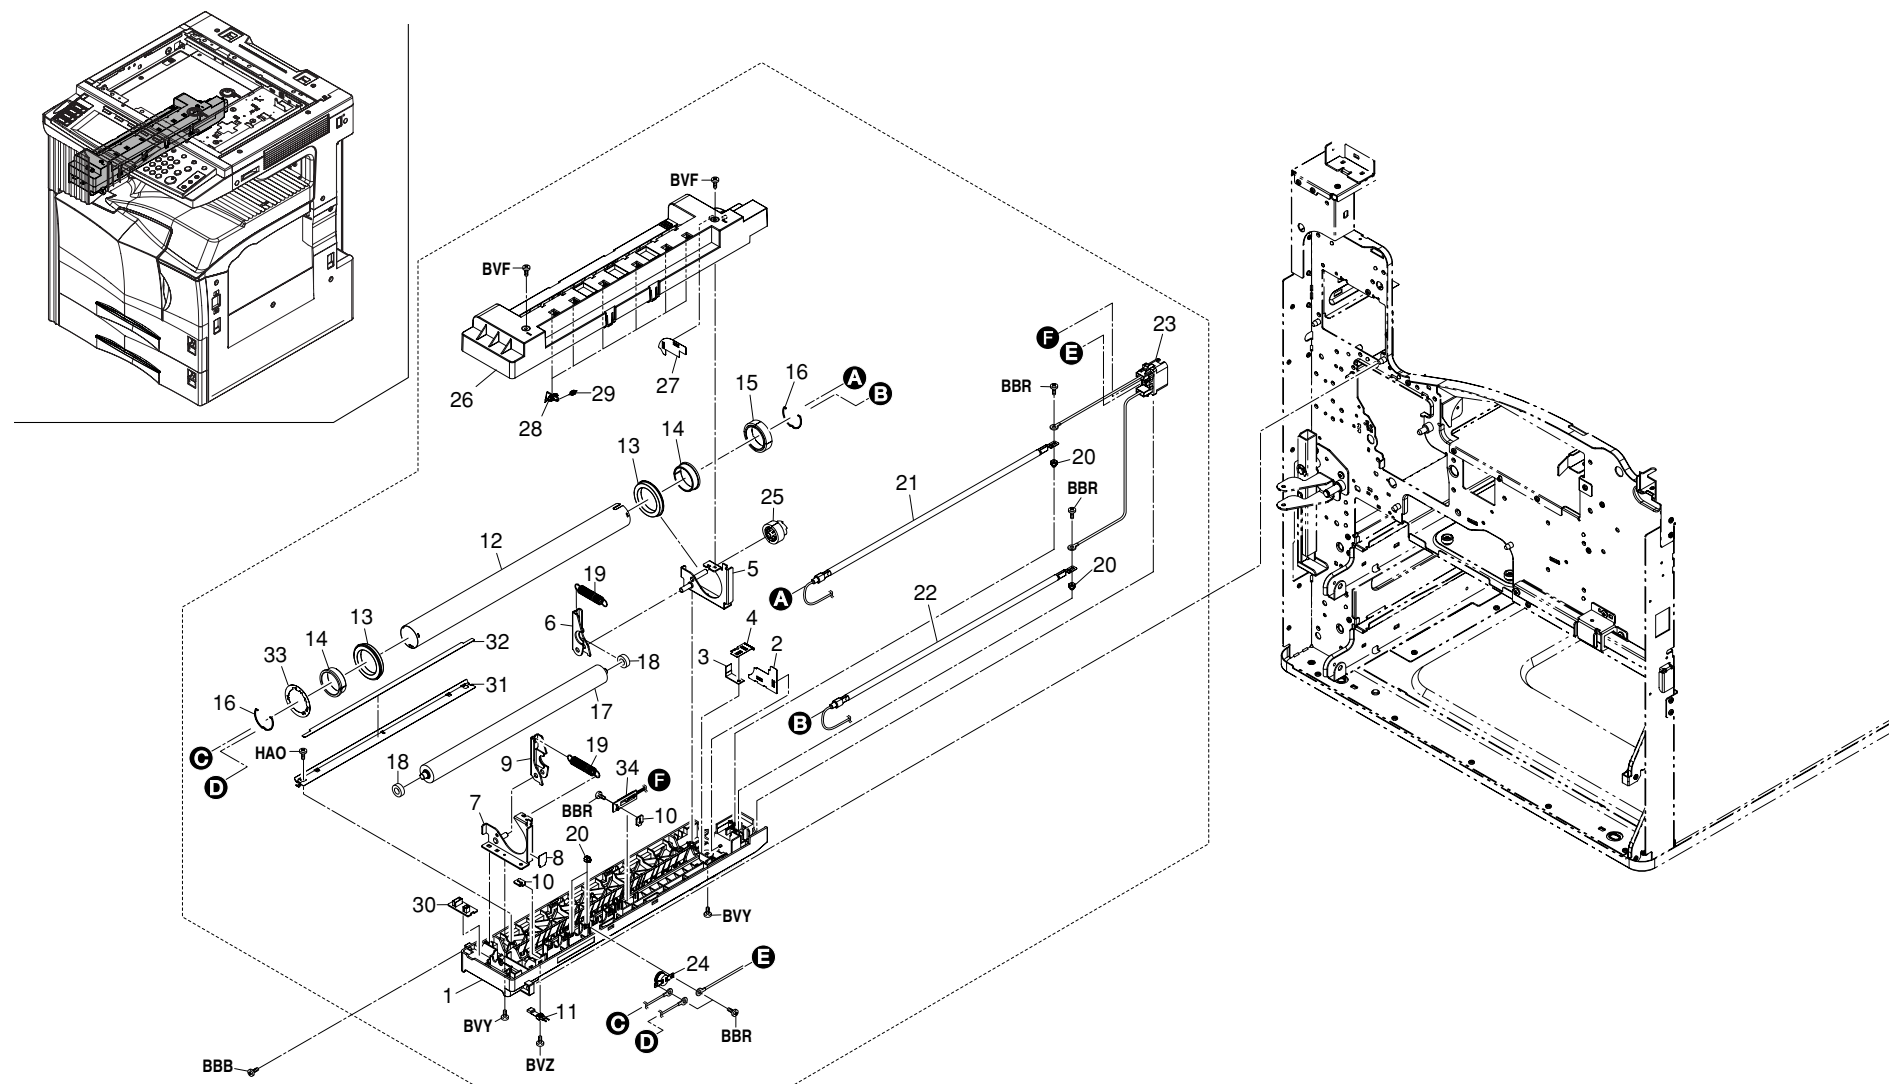



FIG. 14 FIXING SECTION

2FG/2FF/2FD

SP	Ref. No.	Part. No.	Description	Quantity			
				110V	120V	230V	240V
●		2FG93090	PARTS, FIXING ASS'Y, 110	1			
●		2FG93030	PARTS, FIXING ASS'Y 120, SP		1		
●		2FG93040	PARTS, FIXING ASS'Y 230, SP			1	1
	1	•2FG20020	LOWER FRAME FIXING A	1	1	1	1
	2	•2BL20310	LOWER COVER FRAME	1	1	1	1
●	3	•34820310	STATIC ELIMINATOR, HEAT ROLLER	1	1	1	1
	4	•2BL20230	PLATE SPRING FIXING	1	1	1	1
	5	•2FG20040	REAR FRAME FIXING	1	1	1	1
	6	•2FG20300	REAR PRESSING PLATE	1	1	1	1
	7	•2FG20030	FRONT FRAME FIXING	1	1	1	1
	8	•2BL20290	COVER FIXING WIRE	1	1	1	1
	9	•2FG20290	FRONT PRESSING PLATE	1	1	1	1
	10	•2BL20210	MOUNT THERMISTOR	2	2	2	2
●	11	•2FG20210	THERMISTOR FIXING	1	1	1	1
●	12	•2FG20050	ROLLER HEAT	1	1	1	1
●	13	•2FG20190	BUSHING HEAT ROLLER	2	2	2	2
●	14	•2FG20230	BEARING HEAT ROLLER	2	2	2	2
●	15	•2FG20070	GEAR 49 HEAT ROLLER	1	1	1	1
	16	•2FG20200	STOPPER HEAT ROLLER	2	2	2	2
●	17	•2FG20060	ROLLER PRESS	1	1	1	1
●	18	•2FG20310	BEARING PRESS ROLLER	2	2	2	2
	19	•2FG20240	SPRING PRESSURE	2	2	2	2
	20	•2BM20420	NUT FUSER	4	4	4	4
●	21	•2FG20320	HEATER M110 FIXING	1			
●	21	•2FG20120	HEATER M120 FIXING		1		
●	21	•2FG20140	HEATER M230 FIXING			1	1
●	22	•2FG20330	HEATER S110 FIXING	1			
●	22	•2FG20130	HEATER S120 FIXING		1		
●	22	•2FG20150	HEATER S230 FIXING			1	1
	23	•2BL27130	WIRE FIXING UNIT	1	1	1	1
●	24	•2FG20220	THERMOSTAT FIXING	1	1	1	1
●	25	•2BL20260	GEAR FIXING Z33	1	1	1	1
●	26	•2FG20010	UPPER FRAME FIXING A	1	1	1	1
	27	•2BL20300	UPPER COVER FRAME	1	1	1	1
●	28	•2BL20080	CLAW HEAT ROLLER	6	6	6	6
●	29	•2BL20240	SPRING CLAW	6	6	6	6
	30	•2FG01080	PCB FIXING ASS'Y(C)	1	1	1	1
●	31	•2BL20320	HOLDER PRESS SE	1	1	1	1
●	32	•2BL20330	STATIC ELIMINATOR PRESS	1	1	1	1
●	33	•2FG20280	GROUND PLATE FIXING	1	1	1	1
●	34	•2FG20340	THERMISTOR FIXING UC	1	1	1	1

- Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.
- Parts with "●" indicates the Spare parts.

- Parts with "••" are component parts or sub-assembly with "•" appearing immediately above them.

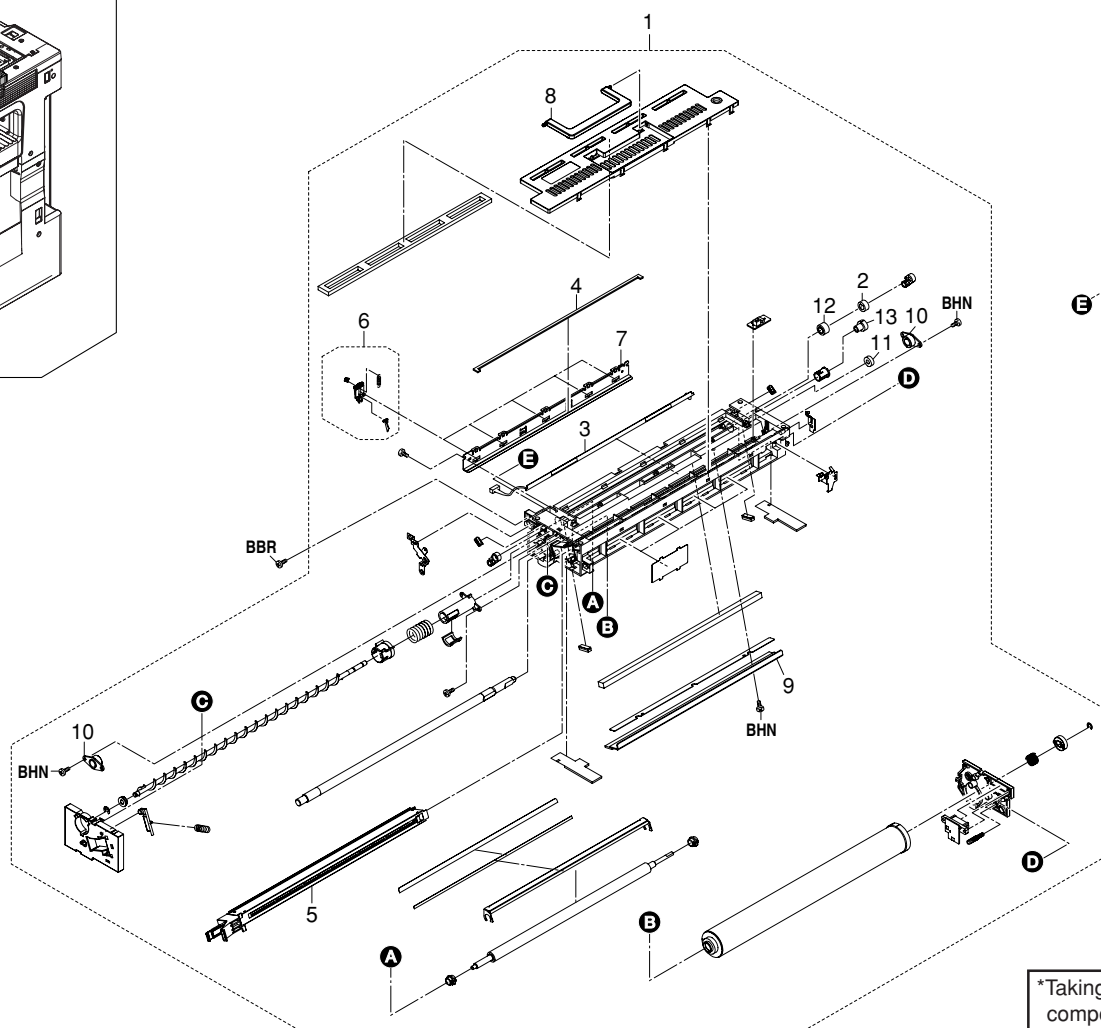

*Taking the quality assurance into consideration,
component parts are not supplied as the spare parts.

FIG. 15 CLEANING SECTION

2FG/2FF/2FD

SP	Ref. No.	Part. No.	Description	Quantity			
				110V	120V	230V	240V
●	1	2FG93010	PARTS,DRUM ASS'Y,SP (KM-5035/4035)	1	1	1	1
●	1	2BJ93020	PARTS,DRUM ASS'Y (KM-3035)	1	1	1	1
●	2	•2BL18870	GEAR CL ROLLER 15	1	1	1	1
●	3	•2BL93420	PARTS,LAMP CLEANING ASSY	1	1	1	1
●	4	•2BL18560	SPONGE LOWER SEAL	1	1	1	1
●	5	•2BL93090	PARTS MAIN-C,MC700	1	1	1	1
●	6	•2BL93310	PARTS,CLAW SEPARATION	5	5	5	5
●	7	•2BL18070	LOWER SEAL CLEANING	1	1	1	1
●	8	•2BL18320	HANDLE DRUM	1	1	1	1
●	9	•2BL18300	BLADE CLEANING	1	1	1	1
●	10	•2BL18630	BUSHING DRUM A	2	2	2	2
●	11	•2BL18170	GEAR IDLE 15	1	1	1	1
●	12	•2BL18880	GEAR CL ROLLER 16	1	1	1	1
●	13	•2BL18160	GEAR SPIRAL 16	1	1	1	1
●	14	2BL05080	LABEL DRUM	1	1	1	1
*Taking the quality assurance into consideration,component parts are not supplied as the spare parts.							

- Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.
- Parts with "●" indicates the Spare parts.

- Parts with "• •" are component parts or sub-assembly with "•" appearing immediately above them.

FIG. 16 DRIVING, COOLING SECTION I

2FG/2FF/2FD

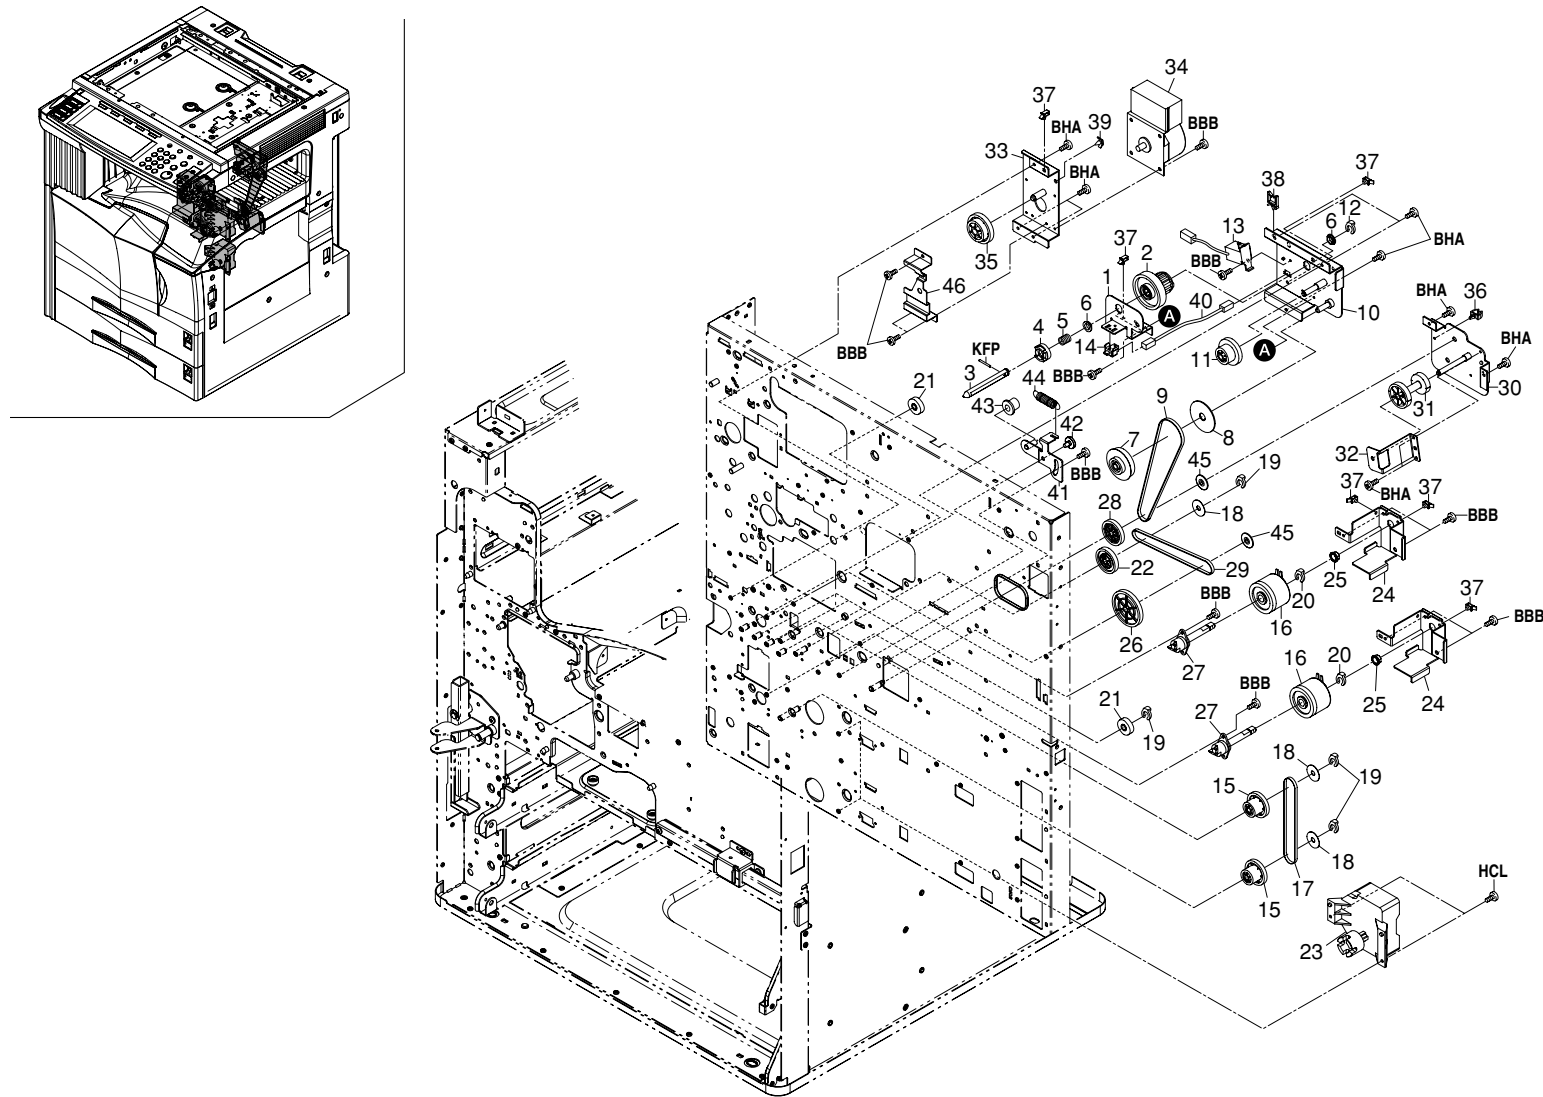


FIG. 16 DRIVING, COOLING SECTION I

SP	Ref. No.	Part. No.	Description	Quantity			
				110V	120V	230V	240V
●	1	2BL22450	PLATE DRIVE CONT.B	1	1	1	1
●	2	2BL22520	CLUTCH CONTAINER	1	1	1	1
●	3	2BL22460	SHAFT DRIVE CONT	1	1	1	1
●	4	2BJ22020	COUPLING C,CONT.	1		1	1
●	4	2BJ22010	COUPLING CONTAINER B		1		
●	5	2BL22510	SPRING DRIVE CONT.	1	1	1	1
●	6	2BL22570	BUSH DRIVE CONT 8	2	2	2	2
●	7	2BL22480	GEAR Z24S-P40	1	1	1	1
●	8	2BL22560	PULLEY CONT. DRIVE	1	1	1	1
●	9	2BL22590	BELT DRIVE CONTAINER	1	1	1	1
●	10	2BL22440	PLATE DRIVE CONT.A	1	1	1	1
●	11	2BL22490	GEAR Z40S-Z25S	1	1	1	1
●	12	2BC06910	STOPPER 6	1	1	1	1
●	13	2BL27510	SOLENOID TONER	1	1	1	1
●	14	35927420	SWITCH,SIZE	1	1	1	1
●	15	2BL22330	GEAR Z41S-Z24S-P30	2	2	2	2
●	16	2BL27500	CLUTCH FEED	2	2	2	2
●	17	2BL22350	BELT DRIVE FEED	1	1	1	1
●	18	2BL22580	COLLAR BELT	3	3	3	3
●	19	2A806250	RING STOPPER	6	6	6	6
●	20	2BC06980	STOPPER 5	2	2	2	2
●	21	2BL22740	GEAR M FEED Z25	4	4	4	4
●	22	2BL22530	GEAR Z41S-P15	1	1	1	1
●	23	2BL27581	LIFT MOTOR	2	2	2	2
●	24	2FG22090	BRACKET CLUTCH FEED	2	2	2	2
●	25	67322230	BUSHING 8	2	2	2	2
●	26	2BL22540	GEAR Z60S-P20	1	1	1	1
●	27	2AR00170	PRIMARY PAPER FEED BUSHING ASS'Y	2	2	2	2
●	28	2BL22420	GEAR Z41S-P18	1	1	1	1
●	29	2BL22400	BELT DRIVE MPF	1	1	1	1
●	30	2BL22370	PLATE DRIVE MPF A	1	1	1	1
●	31	2BL22550	GEAR Z40S-Z32S	1	1	1	1
●	32	2BL22380	PLATE DRIVE MPF B	1	1	1	1
●	33	2FG22070	PLATE DRIVE FEED A	1	1	1	1
●	34	2FG27020	FEED MOTOR	1	1	1	1
●	35	2BL22320	GEAR Z76H-Z35S	1	1	1	1
●	36	M2105740	MINIATURE CLAMP,UAMS-05S-2	1	1	1	1
●	37	M2109330	WIRE SADDLE,YMC-10-0(KITAGAWA)	6	6	6	6
●	38	M2109010	WIRE SADDLE,WS-2NS	1	1	1	1
●	39	M2108080	SPACER,KGPS-3S	1	1	1	1

- Parts with "*" are component parts or sub-assemblies of the assembly appearing immediately above them.
- Parts with "●" indicates the Spare parts.

2FG/2FF/2FD

SP	Ref. No.	Part. No.	Description	Quantity			
				110V	120V	230V	240V
	40	2BL27180	WIRE CONT SW	1	1	1	1
	41	2BL22810	PLATE TENSION A	1	1	1	1
	42	72114320	PIN,DEV.UNIT HANDLE	1	1	1	1
	43	2BL22830	PULLEY TENSION	1	1	1	1
	44	2BL22820	SPRING PULLEY	1	1	1	1
	45	2BL22390	PULLEY MPF DRIVE	2	2	2	2
	46	2FG22080	PLATE DRIVE FEED B	1	1	1	1

- Parts with "••" are component parts or sub-assembly with "•" appearing immediately above them.

2FG/2FF/2FD



FIG. 17 DRIVING, COOLING SECTION II

SP	Ref. No.	Part. No.	Description	Quantity			
				110V	120V	230V	240V
●	1	2FG93070	PARTS,MOTOR ASS'Y,DR	1	1	1	1
●	2	●2BL27540	MOTOR MAIN	1	1	1	1
●	3	●2BL22140	GUIDE DLP	1	1	1	1
●	4	●2BL22240	SPRING JOINT FUSER	1	1	1	1
●	5	●2BL22220	GEAR Z36S-Z31H	1	1	1	1
●	6	●2BL22190	GEAR Z50H	1	1	1	1
●	7	●2BL22180	GEAR Z37H-Z28H	1	1	1	1
●	8	●2BL22230	GEAR Z34H	1	1	1	1
●	9	●2FG22030	GEAR Z59H-Z44S	1	1	1	1
●	10	●2BL22710	GEAR Z76H-Z35H	1	1	1	1
●	11	●2BL22770	GEAR Z37S	1	1	1	1
●	12	●2FG22040	GEAR Z22S	1	1	1	1
●	13	●2BL22160	GEAR DRUM Z76H-Z30H	1	1	1	1
●	14	●2BL22210	GEAR JOINT Z32S	1	1	1	1
●	15	●2FG22010	PLATE DRIVE FRONT	1	1	1	1
●	16	●2BL22170	PLATE GUIDE DRUM	1	1	1	1
●	17	●2BL22840	SHAFT DRIVE DRUM FW	1	1	1	1
●	18	●2BL22050	GEAR DRUM Z70H	1	1	1	1
●	19	●G3169000	BEARING 6900ZZNR	1	1	1	1
●	20	●2FG22020	PLATE DRIVE REAR	1	1	1	1
●	21	2BL27560	MOTOR EJECT	1	1	1	1
●	22	2FG22050	PLATE DRIVE EXIT A	1	1	1	1
●	23	2BL22800	GEAR Z47S-Z28S	1	1	1	1
●	24	2BL22630	GEAR EXIT Z30S	1	1	1	1
●	25	2BL27730	CLUTCH,REGISTRATION	1	1	1	1
●	26	2BC06980	STOPPER 5	1	1	1	1
●	27	2BL23020	DUCT DRUM	1	1	1	1
●	28	2BL23120	COVER DUCT DRUM	1	1	1	1
●	29	2BL23030	DUCT DLP	1	1	1	1
●	30	2FG27130	FAN MOTOR 1	1	1	1	1
●	31	2BL23040	LID DLP DUCT	1	1	1	1
●	32	2BL22850	RETAINER FLYWHEEL	1	1	1	1
●	33	2BL22860	FLYWHEEL 190	1	1	1	1
●	34	2BL22870	WEIGHT 190	1	1	1	1
●	35	2BL26150	MOUNT BASE TERMINAL	1	1	1	1
●	36	2BL26160	PLATE TRANSFER A	1	1	1	1
●	37	2BL26170	PLATE SEPARATION A	1	1	1	1
●	38	2BL01170	EMPTY SW ASS'Y	1	1	1	1
●	39	2BL23050	DUCT MAIN A	1	1	1	1
●	40	2BL23060	DUCT MAIN B	1	1	1	1

- Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.
- Parts with "●" indicates the Spare parts.

2FG/2FF/2FD

SP	Ref. No.	Part. No.	Description	Quantity			
				110V	120V	230V	240V
●	41	2FG27060	FAN MOTOR 2	1	1	1	1
●	42	M2109010	WIRE SADDLE,WS-2NS	2	2	2	2
●	43	2BL27120	WIRE CONTAINER	1	1	1	1
●	44	2BL02220	RAIL DRUM R	1	1	1	1
●	45	M2109330	WIRE SADDLE,YMC-10-0(KITAGAWA)	3	3	3	3
●	46	2FG22060	PLATE DRIVE EXIT B	1	1	1	1
●	47	2BL23070	MOUNT REAR FAN	1	1	1	1
●	48	2BL23100	FILM COOLING	1	1	1	1
●	49	2BL22880	FILM BKT CLUTCH	1	1	1	1
●	50	2BL22150	BRACKET CLUTCH	1	1	1	1
●	51	49021301	BUSHING, CUTTER	1	1	1	1
●	52	2BL22890	MOUNT FLYWHEEL	1	1	1	1

- Parts with "•" are component parts or sub-assembly with "•" appearing immediately above them.

FIG. 18 ELECTRICAL COMPONENTS

2FG/2FF/2FD

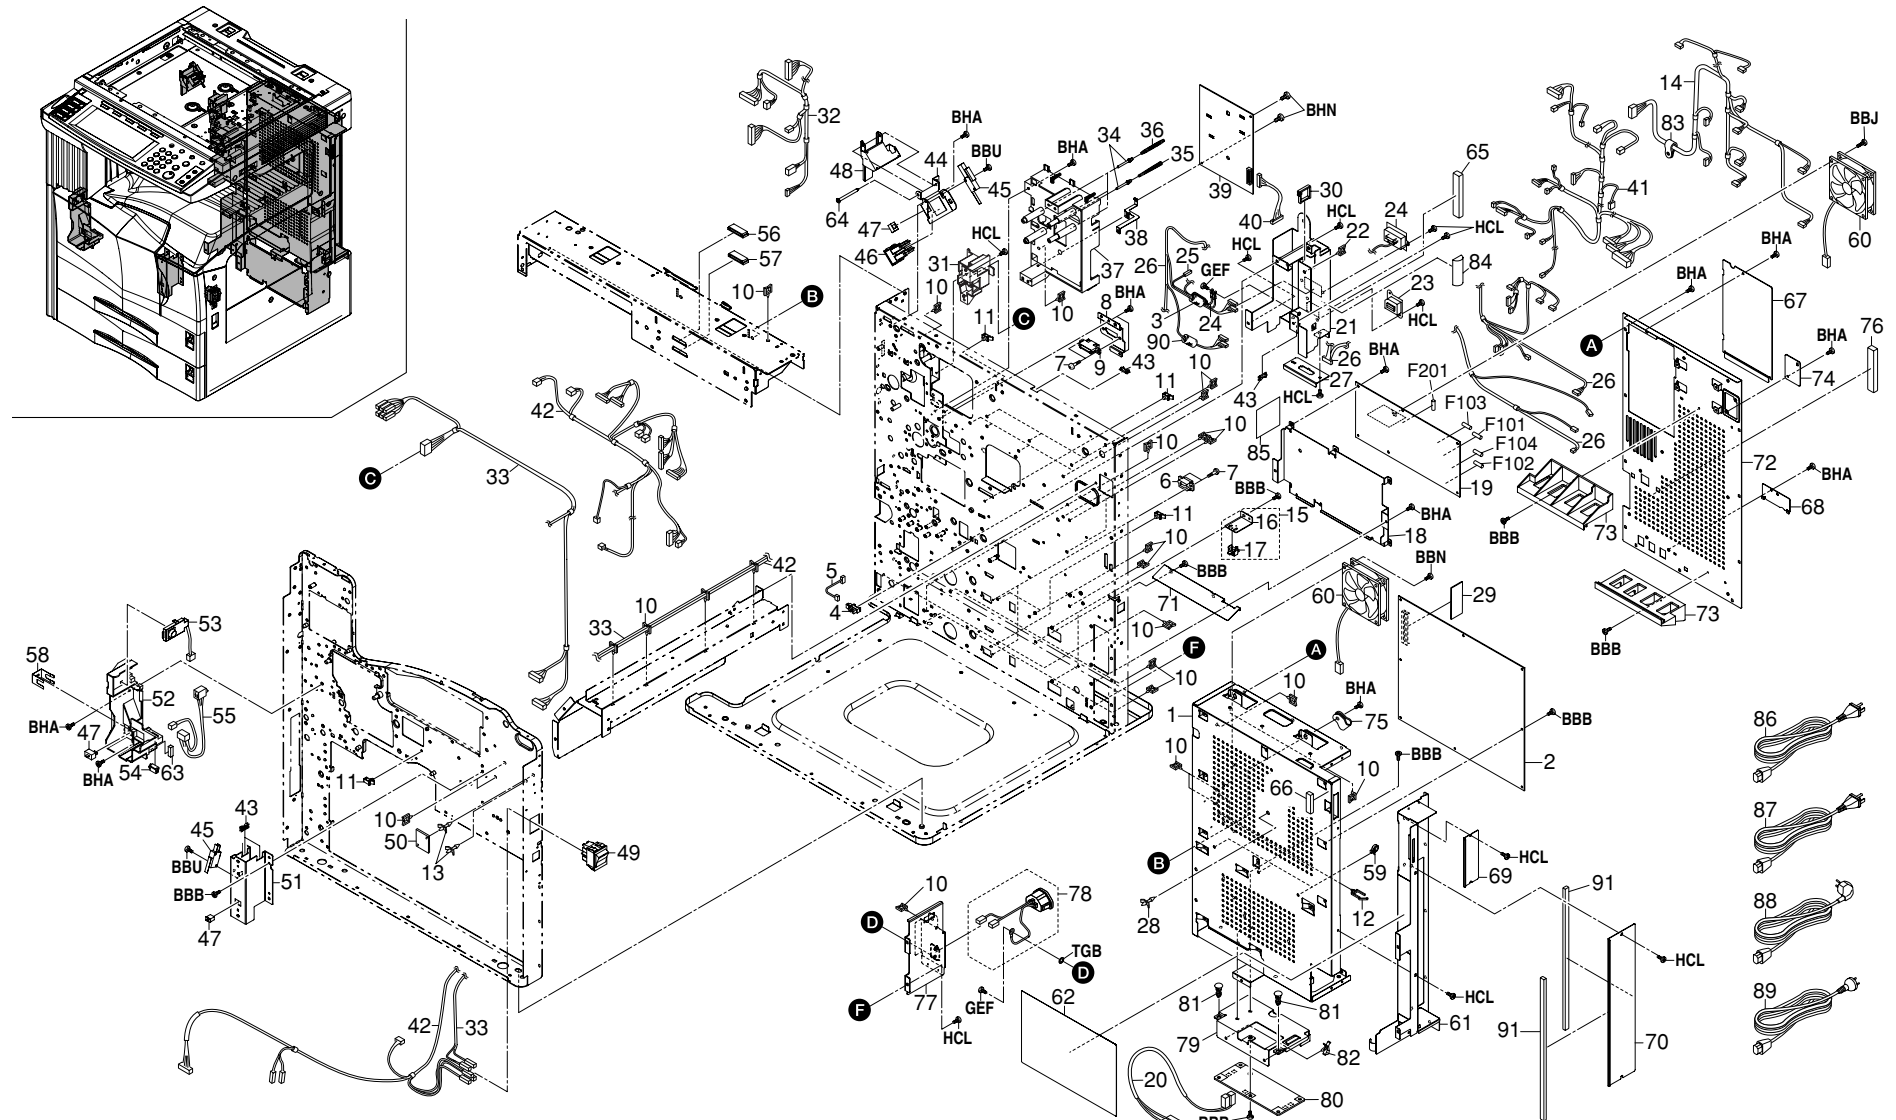


FIG. 18 ELECTRICAL COMPONENTS

SP	Ref. No.	Part. No.	Description	Quantity			
				110V	120V	230V	240V
●	1	2BJ26010	MOUNT PCB	1	1	1	1
	2	2FG01010	ENGINE PCB ASS'Y	1	1	1	1
	3	63827080	FERRITE CORE	1	1	1	1
●	4	2C927210	SENSOR 248NL1	1	1	1	1
	5	2BL27290	WIRE BYPASS FEED PI	1	1	1	1
●	6	J0464080	RECEPTACLE,QR/P15-8S-C(02)(HIROSE)	2	2	2	2
	7	33927450	RETAINING PIN,DRAWER	6	6	6	6
	8	2BL26200	MOUNT DRUM DRAWER	1	1	1	1
	9	J7340100	RECEPTACLE,9715S-10A(IRS)	1	1	1	1
	10	M2109010	WIRE SADDLE,WS-2NS	33	33	33	33
	11	M2109330	WIRE SADDLE,YMC-10-0(KITAGAWA)	4	4	4	4
	12	M2109400	WIRE SADDLE,RLWS-2020T V0(KITAGAWA)	2	2	2	2
	13	M2108120	SPACER,KGLS-4S	2	2	2	2
	14	2BJ27100	WIRE PAPER FEED(C)	1	1	1	1
	15	2AR00150	CASSETTE SWITCH ASS'Y	2	2	2	2
	16	•2AR07170	MOUNT,CASSETTE SWITCH	2	2	2	2
●	17	•66127010	SWITCH,COVER OPEN	2	2	2	2
	18	2FG26010	MOUNT POWER PCB	1	1	1	1
●	19	2FG28020	POWER SOURCE PCB(100)	1	1		
●	19	2FG28030	POWER SOURCE PCB(200)			1	1
	20	2FG27370	WIRE FILTER PCB	1	1	1	1
	21	2BJ26100	MOUNT OPTION I/F (E)	1	1	1	1
	22	M2109020	WIRE SADDLE,WS-2WS	1	1	1	1
	23	J0326120	CASE,54082-1215(MOLEX)	1	1	1	1
	24	2BJ27220	WIRE FINISHER GND(C)	1	1	1	1
	25	2BJ27230	WIRE FINISHER FG	1	1	1	1
	26	2FG27320	WIRE OPTION(C)	1	1	1	1
	27	2AR26340	MOUNT,DECK CONNECTOR	1	1	1	1
	28	M2108670	SPACER,KGPS-6RF(KITAGAWA)	1	1	1	1
●	29	2FG28070	PCB DIMM64	1	1	1	1
	30	M2104280	EDGING,EDS-25L(KITAGAWA)	1	1	1	1
	31	2BL26290	MOUNT FIXING DRAWER	1	1	1	1
	32	2BL27030	WIRE DRAWER	1	1	1	1
	33	2FG27330	WIRE PRIMARY(C)	1	1	1	1
	34	2BL26060	PIN TERMINAL	4	4	4	4
	35	2BL26070	SPRING TERMINAL	1	1	1	1
	36	2BL26270	SPRING TERMINAL T	3	3	3	3
	37	2BL26050	CASE HIGH VOLTAGE	1	1	1	1
	38	2BL26080	GROUND PLATE HV	1	1	1	1
●	39	2BL28051	HIGH VOLTAGE PCB	1	1	1	1

- Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.
- Parts with "●" indicates the Spare parts.

2FG/2FF/2FD

SP	Ref. No.	Part. No.	Description	Quantity			
				110V	120V	230V	240V
	40	2BJ27130	WIRE HIGH VOLTAGE(C)	1	1	1	1
	41	2FG27310	WIRE MOTOR(C)	1	1	1	1
	42	2BJ27090	WIRE FRONT(C)	1	1	1	1
	43	M2104210	EDGING,EDS-2	4	4	4	4
	44	2BL26110	LEFT MOUNT I/L	1	1	1	1
●	45	2FG27120	SWITCH INTERLOCK	2	2	2	2
●	46	2AR27040	SWITCH,INTERLOCK	1	1	1	1
●	47	35927420	SWITCH,SIZE	3	3	3	3
	48	2BL26120	LEFT WORK PLATE I/L	1	1	1	1
●	49	2AV27290	SWITCH,MAIN	1	1	1	1
●	50	2BM27890	HUMIDITY SENSOR	1	1	1	1
	51	2BL04060	FRONT MOUNT COVER	1	1	1	1
	52	2BL04080	INNER LEFT COVER	1	1	1	1
●	53	2BL01160	TONER SW ASS'Y	1	1	1	1
	54	J5016050	CASE,BU05P-TR-PC-H(JST)	1	1	1	1
	55	2BL27250	WIRE TONER DISPOSAL	1	1	1	1
	56	J5016120	CASE,BU12P-TR-PC-H(JST)	1	1	1	1
	57	J5016130	CASE,BU13P-TR-PC-H(JST)	1	1	1	1
	58	2BL04450	GROUND PLATE INNER L	1	1	1	1
	59	M2107120	BINDING BAND SG-130	3	3	3	3
●	60	2FG27140	FAN MOTOR 3	2	2	2	2
	61	2FG26040	SHIELD PCB	1	1	1	1
	62	2FG26080	FILM SHIELD	1	1	1	1
	63	2BL04460	SPACER WIRE	1	1	1	1
	64	2BL26280	SHAFT I/L	1	1	1	1
	65	2FG27540	GASKET MULTIPORT B	1	1	1	1
	66	2FG27550	GASKET SHIELD	1	1	1	1
	67	2FG26030	LID HDD	1	1	1	1
	68	2BJ26120	LID MODULAR	1	1	1	1
	69	2BJ26130	LID NETWORKSCANNER	1	1	1	1
	70	2FG26070	LID PRINTER BOARD	1	1	1	1
	71	2BJ26210	SHIELD SUBWIRE	1	1	1	1
	72	2FG26050	UPPER SHIELD PCB	1	1	1	1
	73	2FG26060	RAIL PRINTER PCB	2	2	2	2
	74	2BJ26150	LID MMD	1	1	1	1
	75	M7005010	CLAMP,EMT-3N(TAKEUCHI)	1	1	1	1
	76	2FG27530	GASKET MULTIPORT A	1	1	1	1
	77	2BL26250	MOUNT INLET CORD 230	1	1	1	1
	78	2FG01090	INLET ASS'Y	1	1	1	1
	79	2FG26090	MOUNT FILTER PCB	1	1	1	1

- Parts with "••" are component parts or sub-assembly with "•" appearing immediately above them.

2FG/2FF/2FD



FIG. 18 ELECTRICAL COMPONENTS

2FG/2FF/2FD

SP	Ref. No.	Part. No.	Description	Quantity			
				110V	120V	230V	240V
●	80	2FG28120	NOISE FILTER PCB 100	1	1		
●	80	2FG28130	NOISE FILTER PCB 200			1	1
	81	M2108920	SPACER,KGLS-5RT(KITAGAWA)	2	2	2	2
	82	M2109350	WIRE SADDLE,YMC-15-0(KITAGAWA)	2	2	2	2
	83	M2105910	CLAMP,CKN-07(KITAGAWA)	1	1	1	1
	84	2BJ26230	FILM SUB PS CN	1	1	1	1
	85	2BJ26220	FILM POWER SOURCE	1	1	1	1
	86	65027600	POWER CORD 110	1			
	87	19527400	POWER CORD(120)		1		
	88	2AR27800	POWER CORD(230)			1	
	89	29927231	POWER CODE AS(240)				1
	90	2AV27440	CORE 15-26X13	1	1	1	1
	91	2FG27520	GASKET LID PRINTER	2	2	2	2
●	F201	M1660010	FUSE,237010(LITTEL)	1	1	1	1
●	F103	M1658030	FUSE,215008(LITTEL-FUSE)			1	1
●	F101	M1660010	FUSE,237010(LITTEL)	1	1		
●	F101	M1655040	FUSE,215005(LITTEL)			1	1
●	F104	M1660010	FUSE,237010(LITTEL)	1	1		
●	F104	M1656050	FUSE,21506.3(LITTEL-FUSE)			1	1
●	F102	M1652040	FUSE,21502.5(LITTEL-FUSE)			1	1

- Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.
- Parts with "●" indicates the Spare parts.

- Parts with "••" are component parts or sub-assembly with "•" appearing immediately above them.

FIG. 19 OPERATION UNIT

2FG/2FF/2FD

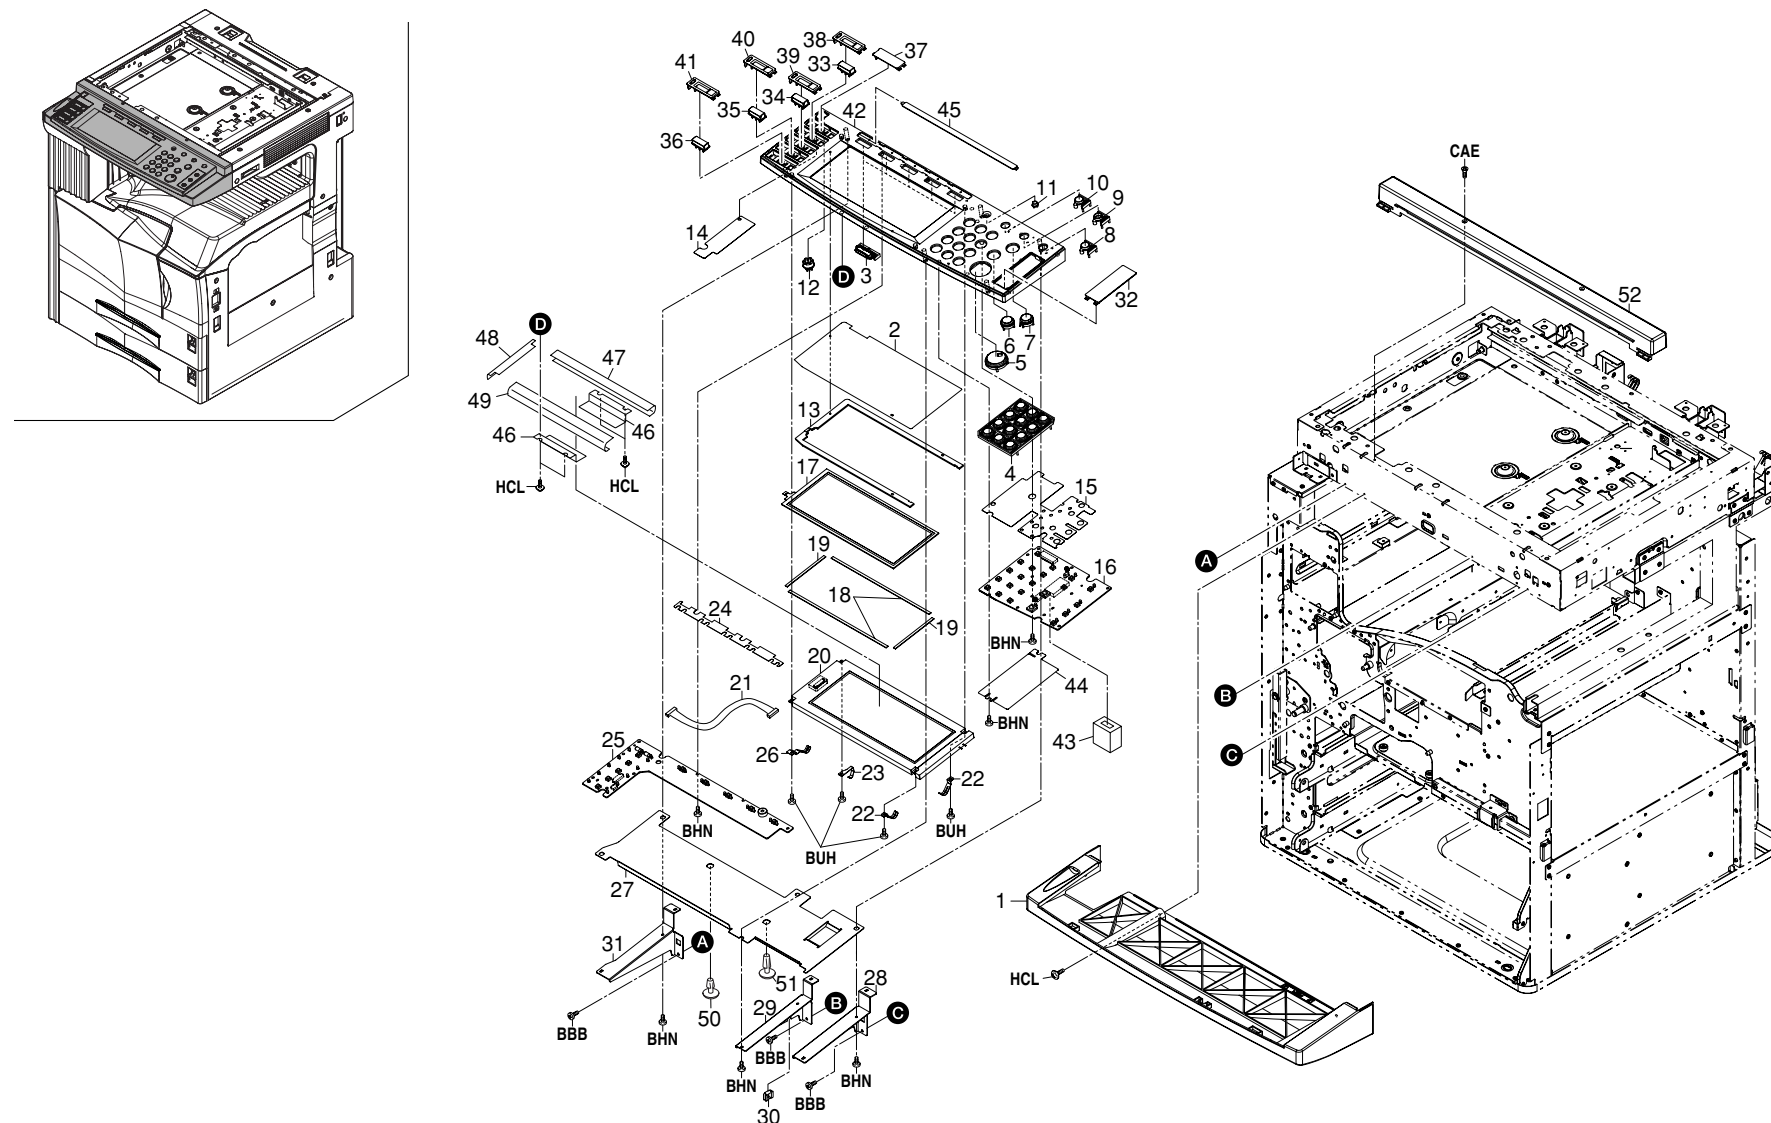


FIG. 19 OPERATION UNIT

SP	Ref. No.	Part. No.	Description	Quantity			
				110V	120V	230V	240V
●	1	2BJ04170	LOWER COVER OP (1/2)	1	1	1	1
	2	2BJ25370	SHEET TABLET	1	1	1	1
●	3	2BJ25101	UPPER KEY FUNCTION	5	5	5	5
●	4	2BJ25020	KEY OPERATION 10	1	1	1	1
●	5	2BJ25440	KEY PRINT RS	1			
●	5	2BJ25300	KEY PRINT E		1	1	1
●	6	2BJ25040	KEY STOP	1	1	1	1
●	7	2BJ25050	KEY RESET	1	1	1	1
●	8	2BJ25060	KEY SAVER	1	1	1	1
●	9	2BJ25070	KEY INTERRUPT	1	1	1	1
●	10	2BJ25080	KEY CONTROL	1	1	1	1
●	11	2BJ25090	KEY INIT	1	1	1	1
●	12	2BJ25250	VOLUME OPE UNIT	1	1	1	1
●	13	2BJ25240	BARRIER TABLET	1	1	1	1
●	14	2BJ25210	LEFT DUST SHIELD	1	1	1	1
●	15	2BJ25230	RIGHT DUST SHIELD	1	1	1	1
●	16	2CX01050	OPERATION UNIT PCB ASS'Y B	1	1	1	1
●	17	2FG27150	TABLET OPERATION	1	1	1	1
●	18	2BJ25270	SPONGE LCD A	2	2	2	2
●	19	2BJ25280	SPONGE LCD B	2	2	2	2
●	20	2BJ28030	LCD PCB	1	1	1	1
	21	2BJ27140	WIRE LCD	1	1	1	1
	22	2BJ04220	GROUND PLATE LCD A	2	2	2	2
	23	2BJ04240	GROUND PLATE LCD C	1	1	1	1
●	24	2BJ25220	CENTER DUST SHIELD	1	1	1	1
●	25	2CX01100	OPERATION UNIT PCB ASS'Y A	1	1	1	1
	26	2BJ04230	GROUND PLATE LCD B	1	1	1	1
	27	2BJ04210	SHIELD LCD	1	1	1	1
	28	2BJ04130	RIGHT MOUNT COVER	1	1	1	1
	29	2BJ04120	MIDDLE MOUNT COVER	1	1	1	1
	30	M2104350	EDGING,EDS-0607M(KITAGAWA)	1	1	1	1
	31	2BJ04110	LEFT MOUNT COVER	1	1	1	1
●	32	2BJ25201	RIGHT LID OPE UNIT	1	1	1	1
●	33	2BJ25450	LEFT KEY COPIER RS	1			
●	33	2BJ25310	LEFT KEY COPIER E		1	1	1
●	34	2BJ25460	LEFT KEY PRINTER RS	1			
●	34	2BJ25320	LEFT KEY PRINTER E		1	1	1
●	35	2BJ25470	LEFT KEY SCANNER RS	1			
●	35	2BJ25330	LEFT KEY SCANNER E		1	1	1
●	36	2BJ25480	LEFT KEY FAX RS	1			

- Parts with "*" are component parts or sub-assemblies of the assembly appearing immediately above them.
- Parts with "●" indicates the Spare parts.

2FG/2FF/2FD

SP	Ref. No.	Part. No.	Description	Quantity			
				110V	120V	230V	240V
●	36	2BJ25340	LEFT KEY FAX E		1	1	1
●	37	2BJ25151	LEFT LID OPE UNIT	1	1	1	1
●	38	2BJ25161	LEFT LID COPIER	1	1	1	1
●	39	2BJ25171	LEFT LID PRINTER	1	1	1	1
●	40	2BJ25181	LEFT LID SCANNER	1	1	1	1
●	41	2BJ25191	LEFT LID FAX	1	1	1	1
●	42	2FG25010	COVER OPE (TW)	1			
●	42	2BG25080	COVER OPE UNIT E		1	1	1
●	43	2BJ68320	SPACER STOP KEY ASS'Y	1	1	1	1
	44	2BJ25380	SHEET OPERATION PCB	1	1	1	1
●	45	2BC25020	SHEET FUNCTION (EXP)	1	1	1	1
	46	2BJ25390	RETAINER LCD	2	2	2	2
	47	2BJ25400	SHEET LCD A	1	1	1	1
	48	2BJ25410	SHEET LCD B	1	1	1	1
	49	2BJ25420	SHEET LCD C	1	1	1	1
	50	M2108880	SPACER,KGPS-5RF(KITAGAWA)	1	1	1	1
	51	M2108850	SPACER,KGPS-8RF(KITAGAWA)	1	1	1	1
●	52	2BJ04160	UPPER COVER OP	1	1	1	1

- Parts with "••" are component parts or sub-assembly with "•" appearing immediately above them.

FIG. 20 OPTION (ORIGINAL HOLDER)

2FG/2FF/2FD

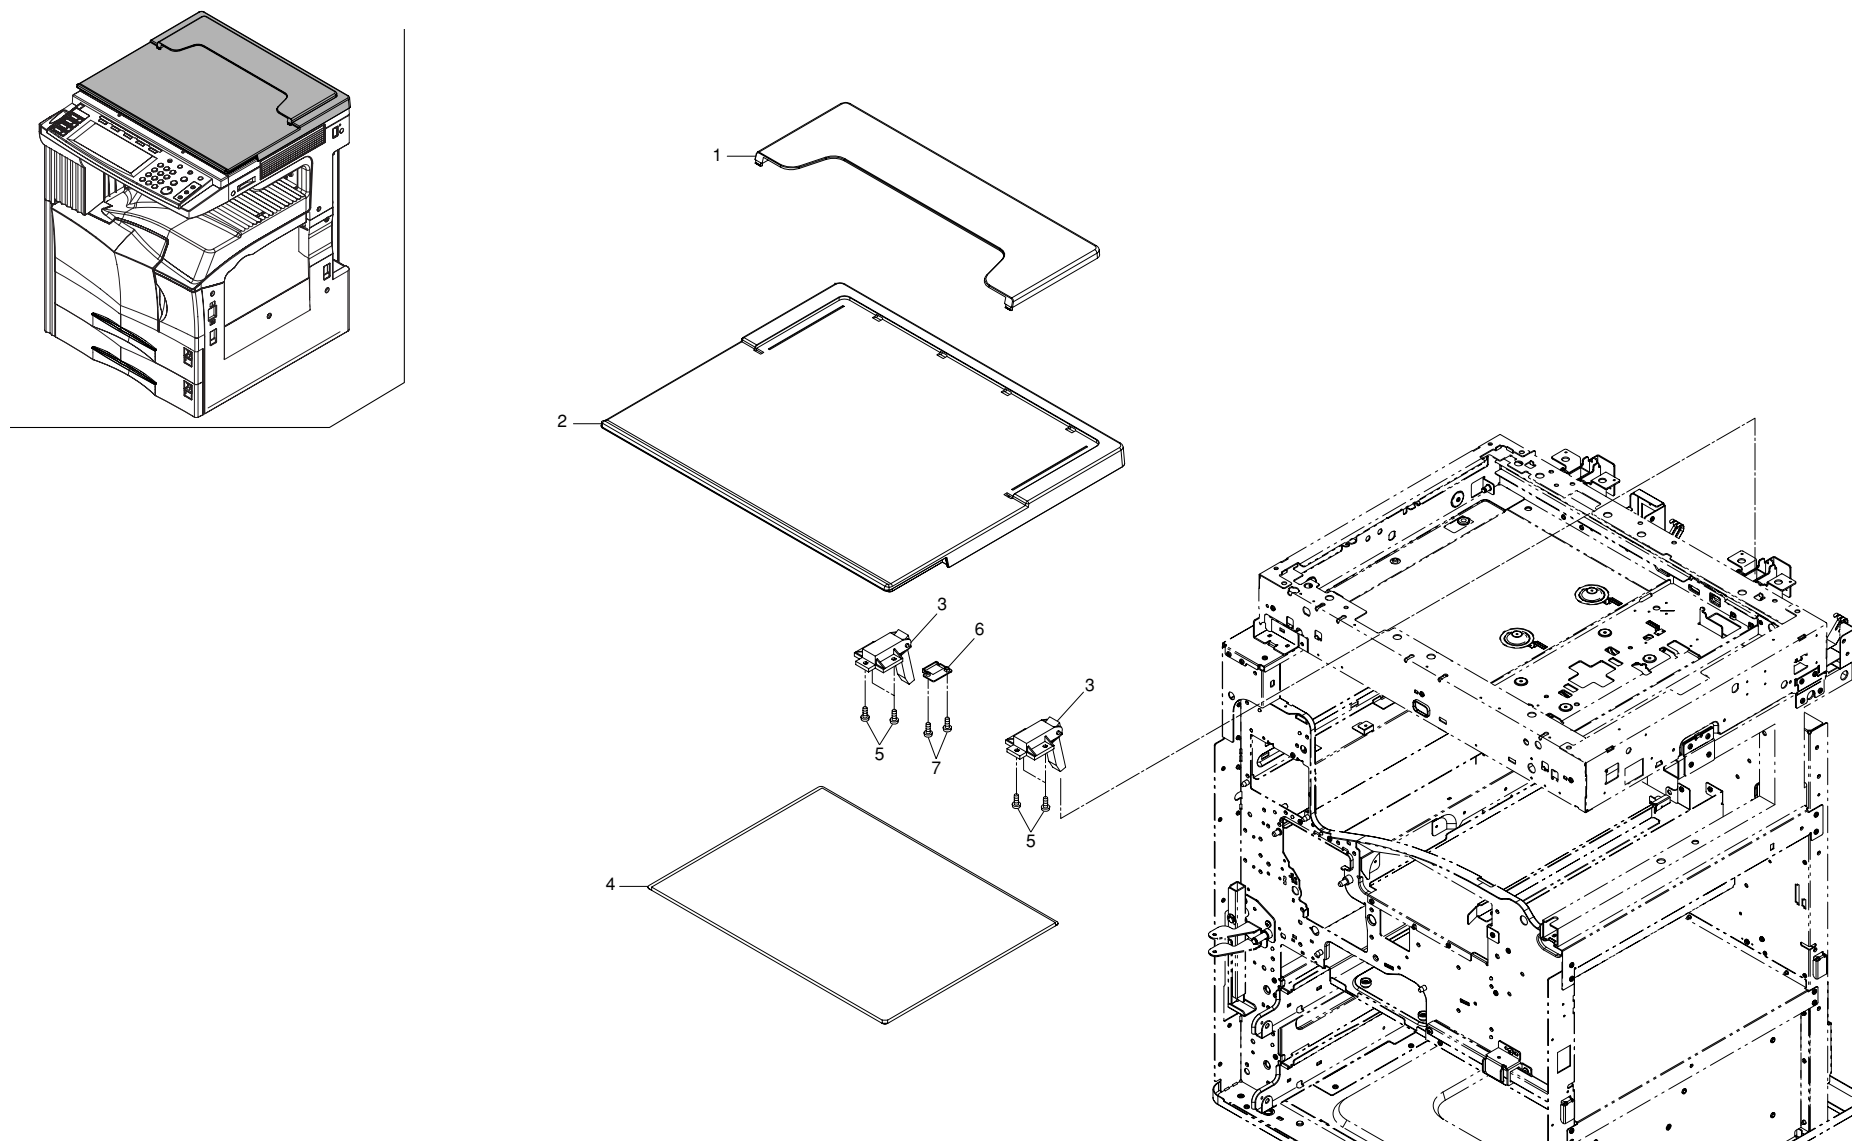


FIG. 20 OPTION (ORIGINAL HOLDER)

2FG/2FF/2FD

SP	Ref. No.	Part. No.	Description	Quantity			
				110V	120V	230V	240V
●		2CX82010	SET, PLATEN COVER TYPE D	1	1	1	1
	1	•60904280	ORIGINAL POCKET	1	1	1	1
	2	•2A612800	COVER, PLATEN	1	1	1	1
	3	•2A612820	HINGE, ORIGINAL HOLDER	2	2	2	2
	4	•2A612810	MAT, ORIGINAL HOLDER	1	1	1	1
	5	•B8014160	BINDING TAP-TITE P SCREW M4X16	4	4	4	4
	6	•2C912630	STOPPER RELEASE SWITCH	1	1	1	1
	7	•B8013120	BINDING TAP-TITE P SCREW M3X12	2	2	2	2

- Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.
- Parts with "●" indicates the Spare parts.

- Parts with "••" are component parts or sub-assembly with "•" appearing immediately above them.

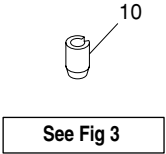
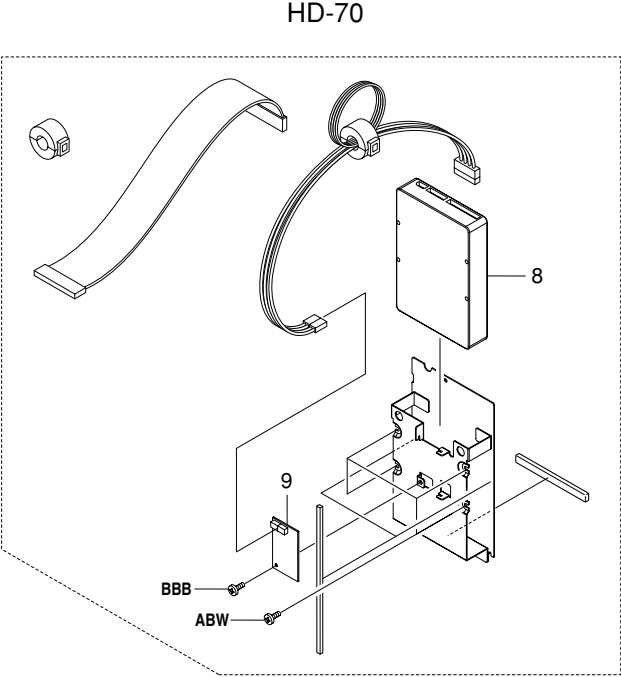
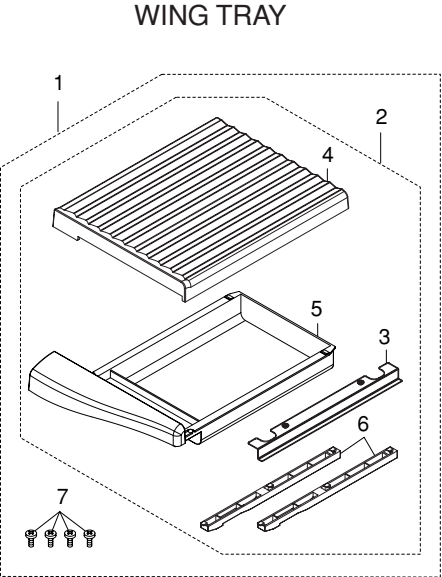


FIG. 21 OPTION I

2FG/2FF/2FD

SP	Ref. No.	Part. No.	Description	Quantity			
				110V	120V	230V	240V
●	1	2BH82010	SET DT-70	1	1	1	1
	2	•2BJ60500	WING TRAY ASS'Y	1	1	1	1
	3	••2BJ60510	MOUNT WING TRAY	1	1	1	1
	4	••2BJ60520	UPPER WING TRAY	1	1	1	1
	5	••2BJ60530	LOWER WING TRAY	1	1	1	1
	6	••2BJ60540	RAIL WING TRAY	2	2	2	2
	7	•B1303050	BINDING SCREW BVM3X5 (BLACK)	4	4	4	4
	8	2FA93130	PARTS,UNIT HDD(S P)	1	1	1	1
	9	3JA01010	HDD POWER PCB ASS'Y	1	1	1	1
	10	2BL68560	SPACER CASSETTE CURSOR	1	1	1	1

- Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.
- Parts with "●" indicates the Spare parts.

- Parts with "••" are component parts or sub-assembly with "•" appearing immediately above them.

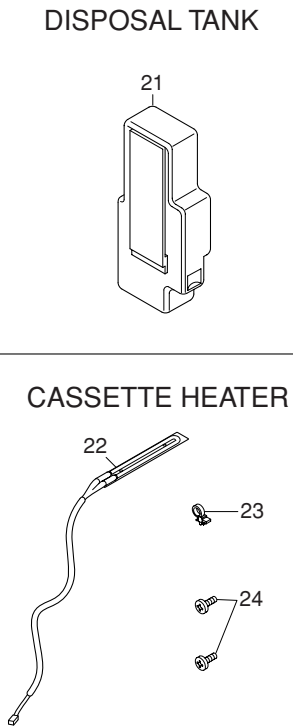
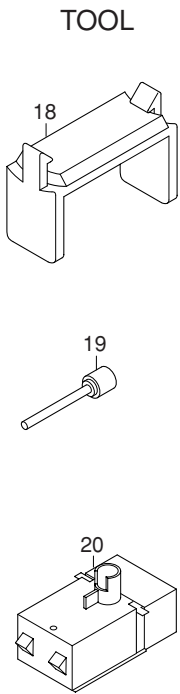
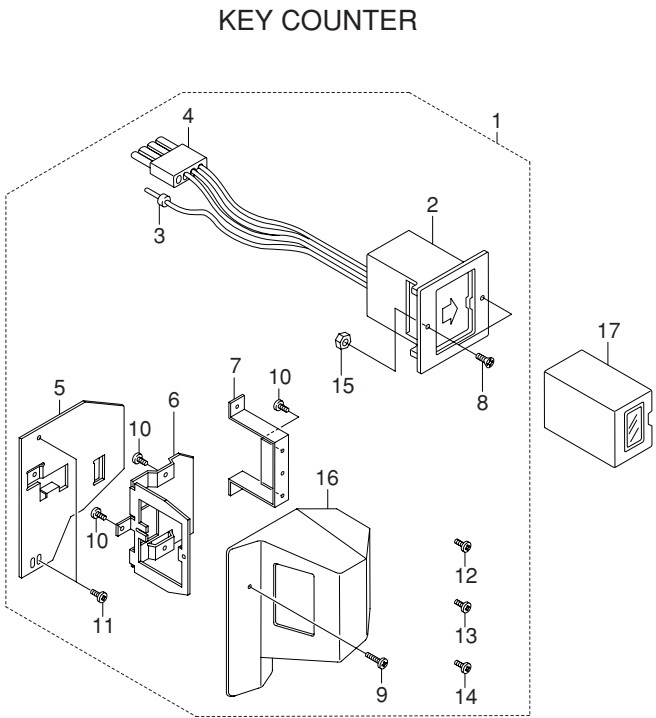


FIG. 22 OPTION II & TOOL

2FG/2FF/2FD

SP	Ref. No.	Part. No.	Description	Quantity			
				110V	120V	230V	240V
●	1	2A369703	SET PARTS KEYCOUNTER NEW COLOR	1	1	1	1
	2	•41529210	SOCKET ASS'Y,KEY COUNTER	1	1	1	1
	3	••J0220040	PLUG EL 4P,ELP-04V	1	1	1	1
	4	••41525016	SOCKET,KEY COUNTER	2	2	2	2
	5	•66060022	RETAINER,KEY COUNTER COVER	1	1	1	1
	6	•66060030	RETAINER,KEY COUNTER	1	1	1	1
	7	•66060040	MOUNT,KEY COUNTER	1	1	1	1
	8	•B2303060	COUNTER-SUNK HEAD SCREW BFHM3X6 (BLACK)	2	2	2	2
	9	•B1304300	BINDING SCREW BVM4X30 (BLACK)	1	1	1	1
	10	•B4304060	TRIPLE SCREW M4X6 (BLACK)	4	4	4	4
	11	•B4304100	TRIPLE SCREW M4X10 (BLACK)	2	2	2	2
	12	•B1303080	BINDING SCREW BVM3X8 (BLACK)	1	1	1	1
	13	•B4104060	TRIPLE SCREW M4X6(CHROMIUM)	1	1	1	1
	14	•B4304200	TRIPLE SCREW M4X20(BLACK)	1	1	1	1
	15	•C2303000	NUT BNM3 (BLACK)	1	1	1	1
	16	•2A360010	COVER,KEY COUNTER	1	1	1	1
●	17	82142540	KEY COUNTER	1	1	1	1
●	18	35968110	STOPPER WIRE ASS'Y SP	2	2	2	2
●	19	2AV68080	SPECIAL TOOL,MIRROR FRAME RETAINING	2	2	2	2
●	20	4AK85050	GRID CLEANER 3 ASSY	1	1	1	1
●	21	2BL93130	PARTS,DISPOSAL TANK,TB700	1	1	1	1
●	22	34860030	HEATER,CASSETTE(120)	1			
●	22	33960020	HEATER,CASSETTE (240)			1	1
	23	M2107120	BINDING BAND SG-130		1	1	1
	24	B1304060	BINDING SCREW BVM4X6 (BLACK)		2	2	2

- Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.
- Parts with "●" indicates the Spare parts.

- Parts with "••" are component parts or sub-assembly with "•" appearing immediately above them.

AD-63

—— CONTENTS ——

FIG.1	AD-63	2
-------	-------------	---

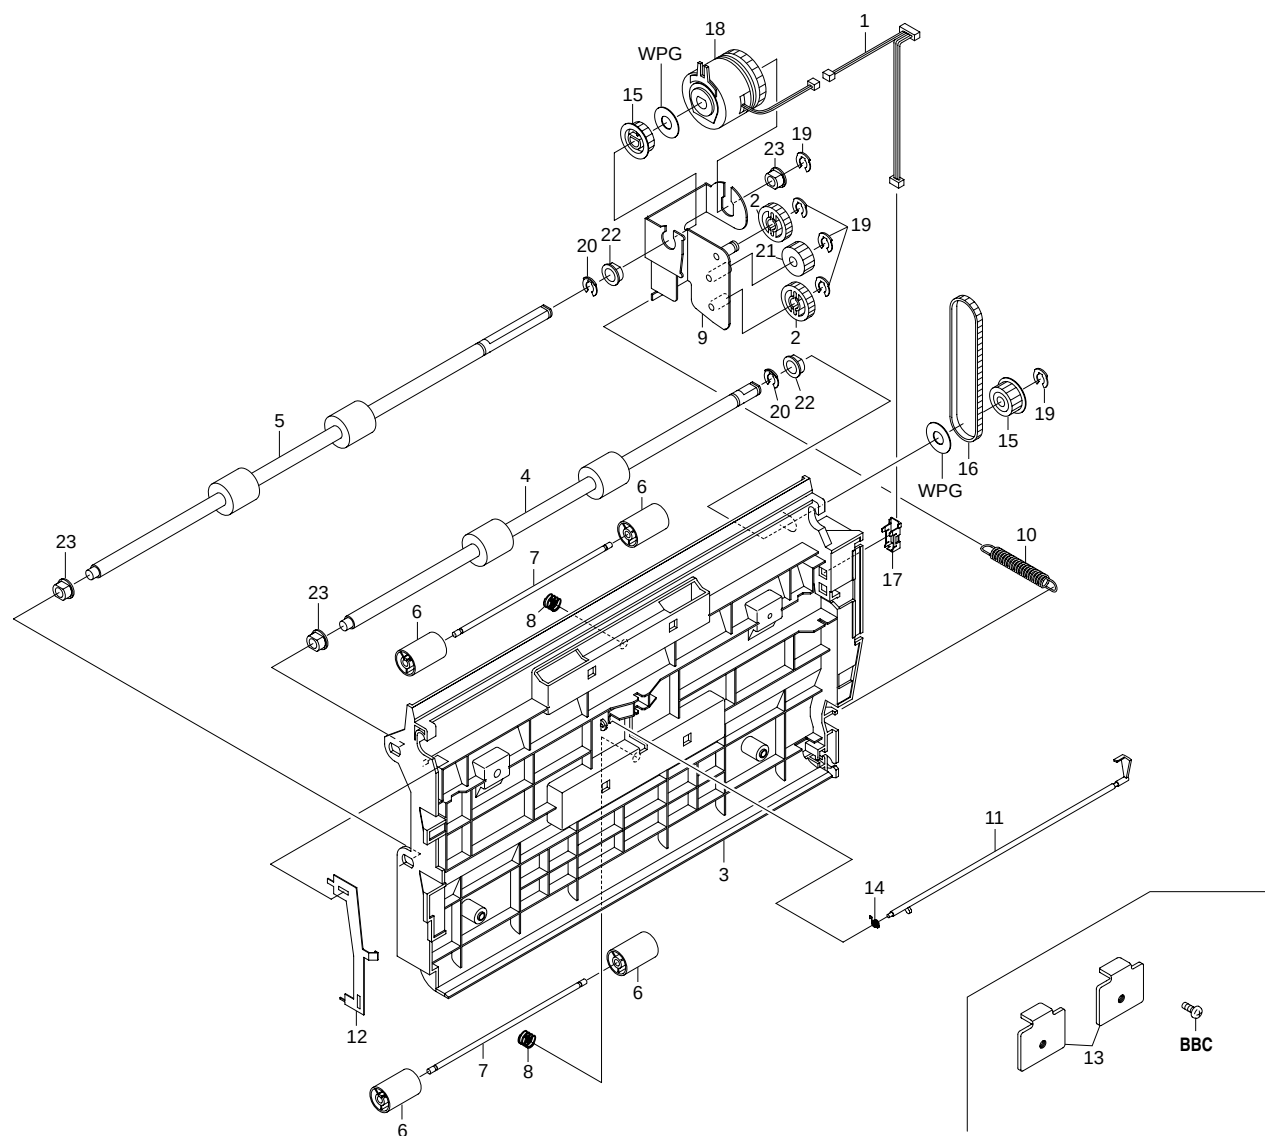


FIG. 1 AD-63

3CX

SP	Ref. No.	Part. No.	Description	Quantity		
				120V	230V	240V
●	1	3CX27010	WIRE DUPLEX(C)	1	1	1
	2	2AL06110	GEAR 25	2	2	2
●	3	2BL07010	FRAME DU	1	1	1
	4	2BL07020	ROLLER DU FEED UP	1	1	1
●	5	2BL07030	ROLLER DU FEED LOW	1	1	1
	6	2BL07040	PULLEY DU	4	4	4
●	7	2BL07050	SHAFT DU PULLEY	2	2	2
	8	2BL07060	SPRING DU PULLEY	2	2	2
●	9	2BL07070	JOINT DU	1	1	1
	10	2BL07080	SPRING DU JOINT	1	1	1
●	11	2BL07090	ACTUATOR DU	1	1	1
	12	2BL07110	PLATE EARTH DU	1	1	1
●	13	2BL07120	PLATE NUT DU	2	2	2
	14	2BL07130	SPRING DU ACT.	1	1	1
●	15	2BL21230	PULLEY EXIT T30	2	2	2
	16	2BL21240	BELT EXIT P2M212	1	1	1
●	17	2BL27450	SWITCH PI	1	1	1
	18	2BL27500	CLUTCH FEED	1	1	1
●	19	34806150	STOPPER 5	5	5	5
	20	34806480	STOPPER 6	2	2	2
●	21	66506630	GEAR 20,IDLE	1	1	1
	22	67322230	BUSHING 8	3	3	3
●	23	73210450	BUSH, 6	2	2	2

• Parts with "●" indicates the Service parts.